

FALLOUT

SERVICE AND OPERATION MANUAL



©/™ 2026 ZeniMax © 2026 Amazon Content Services LLC

WARNING

IMPORTANT HEALTH WARNING: PHOTSENSITIVE SEIZURES - A very small percentage of people may experience a seizure when exposed to certain visual images, including flashing lights or patterns. Even people with no history of seizures of epilepsy may have an undiagnosed condition that can cause "photosensitive epileptic seizures" due to certain visual images, flashing lights or patterns. Symptoms can include lightheadedness, altered vision, eye or face twitching, jerking or shaking of arms or legs, disorientation, confusion, momentary loss of awareness, and loss of consciousness or convulsions that can lead to injury from falling down or striking nearby objects.

IMMEDIATELY STOP PLAYING AND CONSULT A DOCTOR IF YOU EXPERIENCE ANY OF THESE SYMPTOMS.

ATTENTION! IMPORTANT WARRANTY INFORMATION

The electronics system, node network architecture, mechanical devices and associated software control systems in this pinball machine are designed to work with genuine Stern Pinball accessories and devices.

Installation of non-authorized accessories, lamps, LED's, motors or other devices or modification of electro-mechanical devices may damage the system and may void your warranty.

Stern Pinball machines are assembled in Elk Grove Village, Illinois, USA. Stern Pinball has inspected each game element to ensure it meets our quality standards.

Each pinball machine has unique characteristics that make it a one-of-a-kind American made product. Each will have variations in appearance resulting from differences in the machine's particular wood parts, individual printed art and mechanical assemblies. No playfield is perfectly flat and varies depending on the season. Game play will result in playfield dimpling as the harder steel ball contacts the wood and coating; over time multiple dimples will blend to make them less noticeable. Normal plastic insert crazing (tiny stress cracks) and ghosting (small cloudy areas around insert edges) are often seen in pinball machines, due to a combination of plastic mold stress, pushing of inserts into purposely undersized holes, and heating and breaking of inserts' plastic "skin" when the playfield is sanded.

Games configured for North America operate on 60 cycle electricity only. These games will not operate in countries with 50 cycle electricity (Europe, UK, Australia).



MANUAL #780-50AD-00
FALLOUT PRO #500-55AD-01

1-800-KICKERS - service@sternpinball.com
www.sternpinball.com - facebook.com/sternpinball

TABLE OF CONTENTS

1. Setup and Moving 3

1.1	First-Time Setup Instructions.....	3
1.2	Service Menu Navigation	6
1.3	Game Pricing Reference Table.....	9
1.4	Transporting the Game	10
1.5	Maintenance	11
1.6	Maintenance Kits	11
1.7	Common Parts.....	11

2. SPIKE System and Node Guide 12

2.1	SPIKE System Overview	12
2.2	Node Bus Cabling.....	12
2.3	System Power.....	12
2.4	SPIKE Node Addresses	12
2.5	SPIKE Node Programming.....	13
2.6	SPIKE System Terminology	13
2.7	Common SPIKE Node Boards.....	13

3. Light, Switch, and Driver Reference... 14

3.1	SPIKE Node Boards.....	14
3.2	Driver Reference	15
3.3	Switch Reference.....	17
3.4	Light Reference.....	21
3.5	Diagnostics Menu Reference	27

4. Electronic Pinouts and Schematics.... 30

4.1	SPIKE-3 CPU Node 0	30
4.2	Cabinet Node 1	32
4.3	Lower Playfield 48V Driver Pinout Node 8.....	33
4.4	Mid Upper Playfield 48V Driver Pinout Node 9.....	34
4.5	1R 5W BC LED Board 8b	35
4.6	3W ML LED Board 8b1	35
4.7	2R 12W LC LED Board 8c	35
4.8	3R 5W UL LED Board 8d	36
4.9	6W LC LED Board 9a1.....	36
4.10	6R 6W MC LED Board 9a	36
4.11	Pip Boy LED Board 9a2	37
4.12	3W UC LED Board 9a3	37
4.13	6W RC LED Board 9b1	37
4.14	3R 17W 1F LED Board 9b.....	37
4.15	Power Distribution Board.....	38
4.16	Trough Serial Opto Receiver 8A.....	39
4.17	Power Supply 48V/600W	39
4.18	Power Supply 48V/600W	39
4.19	Trough Serial Opto Transmitter	39
4.20	Power Plug Wiring.....	39

5. Parts Reference..... 40

5.1	Playfield Rubber Parts	40
5.2	Rubber Size Chart.....	40
5.3	Playfield Assemblies, Top	41
5.4	Playfield Assemblies, Bottom	42
5.5	Backbox Parts.....	43
5.6	Lockdown Bar Assembly W/ Center Button	43
5.7	Speaker Panel Assembly	44
5.8	Speaker Bracket Mount Assembly	44
5.9	Cabinet Parts	45

5.10	SPIKE 3 Cabinet Assembly.....	46
5.11	Switch & Light Assembly For Front Mold (Lock-down Bar) Button	46
5.12	Cabinet Pivot Hinges	46
5.13	Ball Shooter Assembly.....	47
5.14	Auto Launch Assembly	47
5.15	Ball Trough Assembly.....	48
5.16	Slingshot Assembly.....	48
5.17	Flipper Assembly, Left	49
5.18	Flipper Assembly, Right & Upper Left.....	49
5.19	Pop Bumper Assembly	50
5.20	Bottom Arch Assembly	51
5.21	Right Metal Ramp Assembly.....	51
5.22	Rollover Button Assembly.....	51
5.23	Subway VUK Opto Assembly	52
5.24	Optos Tall, 2.31 Assembly	52
5.25	Ball Guide -01 Assembly.....	52
5.26	Ball Guide -02 Assembly.....	53
5.27	Ball Guide -13 Assembly.....	53
5.28	Ball Guide -15 Assembly.....	53
5.29	Bottle Cap Spinner Bottom Assembly	53
5.30	Bottle Cap Spinner Top Assembly	54
5.31	Jump Ramp Assembly (Contains LED Serial Board 9a3).....	54
5.32	Center Ramp Assembly	55
5.33	Vault Door Assembly.....	55
5.34	Lower Left Ramp Assembly	55
5.35	Pip Boy With Bracket Assembly	56
5.36	Upper Left Ramp Exit Assembly	56
5.37	Deathclaw Passive Assembly	56
5.38	Plastic -03 Assembly	57
5.39	Plastic -05 Assembly	57
5.40	Plastic -11 Assembly	57
5.41	Plastic -13 Assembly	57
5.42	Plastic -19 Assembly	58
5.43	Plastic -39 Assembly	58
5.44	Plastic -40 Assembly	58
5.45	Plastic -84 Assembly	58
5.46	Back Panel Assembly	59

6. Specifications 60

6.1	Game Dimensions.....	60
6.2	Warranty.....	61
6.3	Warnings, Compliance, and Legal Notices.....	61
6.4	Stern Pinball End User License Agreement.....	62

1. SETUP AND MOVING


1.1 FIRST-TIME SETUP INSTRUCTIONS

Your brand new Stern Pinball Machine is carefully packed for safety and security. For your safety, exercise caution and use the correct tools and sufficient help when setting up your new game.


TOOLS REQUIRED

- 5/8" Socket Wrench
- Utility Knife
- Snips
- An Assistant


CAUTION: AT LEAST TWO (2) PEOPLE ARE REQUIRED TO MOVE AND MANEUVER THE GAME. USE PROPER MOVING EQUIPMENT AND EXTREME CARE WHILE HANDLING. STERN PINBALL MACHINES WEIGH OVER 250LBS BOXED.

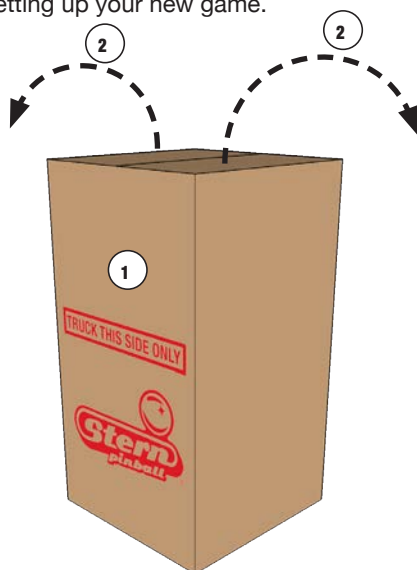


1. Locate the side labeled "TRUCK THIS SIDE ONLY". The bottom of the game faces this side.
2. Open the top box flaps by pulling hard in an upward motion on each flap. If the flaps are taped, cut the tape first, taking care to avoid the box staples.

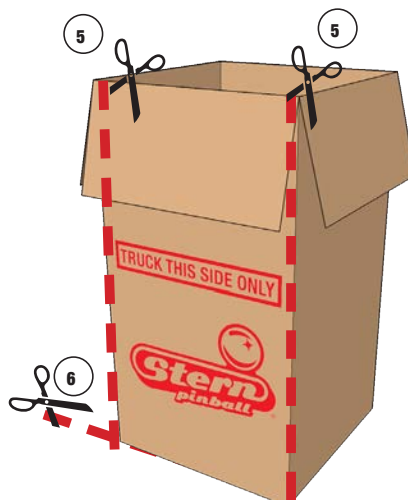


3. Remove the four (4) foam pieces and two (2) narrow box tubes which contain the four (4) identical legs with levelers.
4. DO NOT CUT STRAPPING YET. Keep backbox secured in the down position.
5. With the utility knife, carefully cut down the left and right corners of the box.

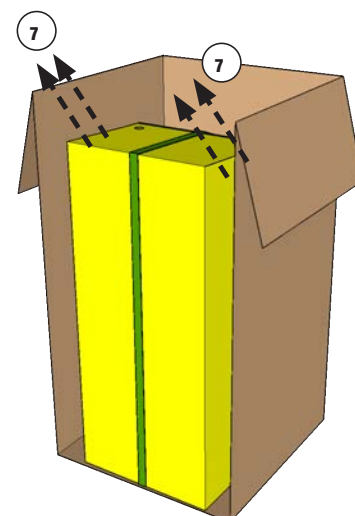


6. Let the face fall forward and remove the entire side by carefully cutting the bottom.
7. With the game still in its folded position, use a 5/8" wrench to loosen and remove the 2 leg bolts on each side of the front cabinet. Ensure the leg levelers are screwed all the way into the legs.

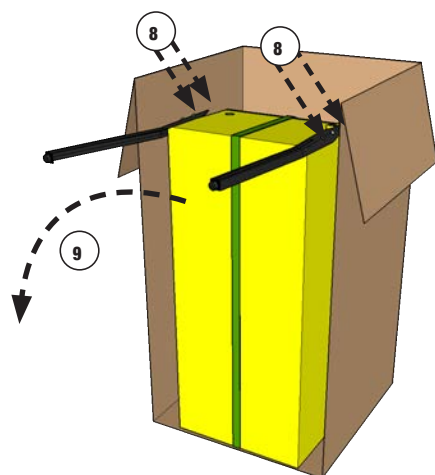

8. Install front legs using the bolts removed from the cabinet. Secure tightly.
9. Have someone help you carefully set the game down on the front legs.

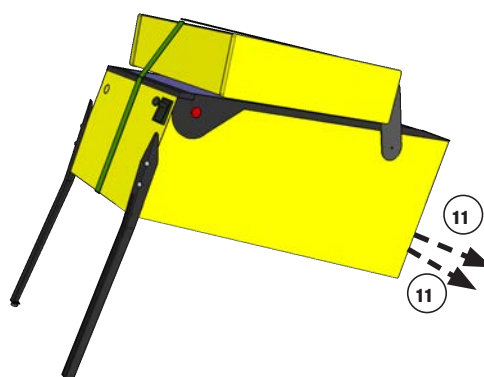

10. Set aside the open box.
11. With a 5/8" socket wrench, loosen and remove the 2 leg bolts on each side of the rear cabinet, 4 total.

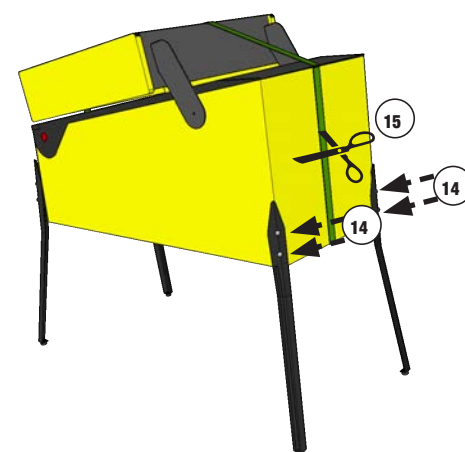


12. Using supports or two people, prop the rear of the cabinet up.
13. Ensure the rear leg levelers are screwed all the way into the legs.
14. Install rear legs using the 4 bolts removed from step 11.




FIRST-TIME SETUP CONTINUED




15. Cut nylon strapping and remove protective strap corner guards.
16. Locate the factory keys, either on the shooter rod or taped to the playfield glass.
17. Using snips, cut the tie-wrap securing the keys if required. One set of keys is for the front coin door, the other set of keys is for accessing components in the backbox.

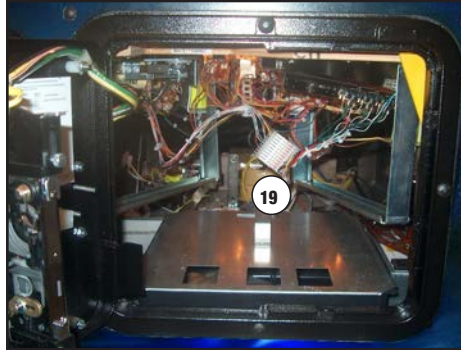


18. Open the front coin door.
19. Reach into the game and remove the retaining clip at the rear of the cash box.
20. Remove the cash box lid by sliding it toward you.

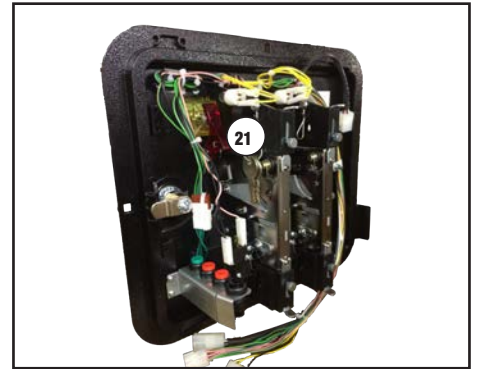

21. Store the backbox keys, if desired, on the metal hook located in the coin door.
22. Locate and remove the pinballs, plumb bob, and backbox bolts from the cash box.
23. Replace the cash box lid and retaining clip for future use.

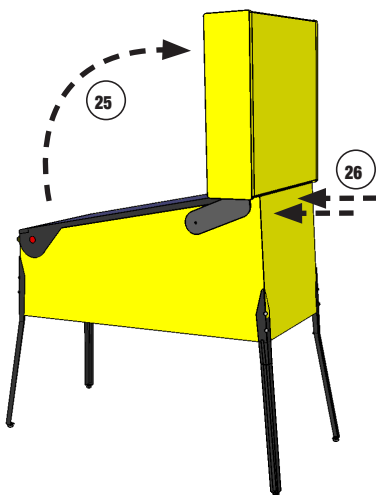

24. Locate the two (2) backbox bolts in the cash box.
25. Carefully raise backbox to upright position while ensuring that cables are not pinched.
26. Use the $\frac{5}{8}$ " wrench to install the two (2) backbox bolts to secure the backbox as indicated on the back of the cabinet.

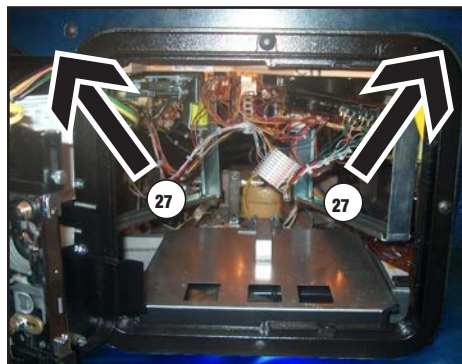

27. Reach inside the cabinet and lift the two latches located on either side of the coin door.
28. Remove the front top molding.



29. Remove the playfield glass by sliding it toward you and carefully place it in a safe location. Remove all playfield shipping tie downs, shipping blocks, and packing foam, and follow any game-specific unpacking instructions included in the playfield, if present.

CAUTION: PLAYFIELD GLASS IS MADE FROM HIGH-STRENGTH TEMPERED GLASS. TEMPERED GLASS IS SENSITIVE TO EXTREME TEMPERATURE SHIFTS AND CORNER NICKS, WHICH CAN CAUSE THE GLASS TO FAIL CATASTROPHICALLY. TAKE CARE TO STORE THE GLASS ON A SOFT, ROOM-TEMPERATURE SURFACE AND PREVENT THE CORNERS FROM BEING DAMAGED.



FIRST-TIME SETUP CONTINUED

30. If pinballs were already installed into the lower ball trough, remove them before lifting the playfield.
31. Grasp the lower arch between the flippers, and firmly but gently pull directly up to raise the playfield 8 to 12 inches.
32. While holding the playfield up, pull the playfield toward you until the two playfield supports are over the front edge of the cabinet.
33. Rest the playfield on the front edge of the cabinet.
34. Raise the playfield and rest it against the backbox.
35. Visually inspect all cabinet cables and connector terminations; ensure no wires or cables are pinched and that cable harnesses are not pulled tight.
36. Locate the plumb bob in the parts bag in the cash box.
37. Slide plumb bob onto the hanger wire. Note: the vertical position of the plumb bob affects tilt sensitivity - higher makes the game more sensitive to tilting.
38. Tighten the thumb screw finger-tight.
39. Install the correct number of pinballs. Refer to the decal on the lock down assembly for the correct number of pinballs.

LOCATING, LEVELING, AND FINAL SETUP


1. Select a location that is indoors, out of direct sunlight, and climate controlled. Excessive moisture/humidity can cause long-term damage to your game.
2. Adjust the front or rear levelers as necessary to position the playfield level bubble, located on the front right of the playfield next to the shooter lane, to float between the two (2) black lines. This will place the playfield at the recommended 6.5° pitch. Playfield angles greater than 6.5° can be achieved by turning out the rear leg leveler(s) for increased difficulty and faster gameplay.
3. Use a pinball to roll down the center of the playfield for side-to-side leveling, or use an external bubble level, digital level, or smartphone level app.
4. Plug into a grounded outlet and check for proper operation through DIAGNOSTICS.
5. Check the coin door: With the door closed, insert coins to verify proper operation.
6. Play game: Check for satisfactory operation and adjust game volume (push the Red Buttons inside the Coin Door).
7. If desired, perform any game diagnostics, game adjustments, and pricing settings at this time.

SPIKE PINBALL SOFTWARE UPDATE INSTRUCTIONS

1. If the game is connected to the internet, and registered to an Insider Connected account, the latest software can be automatically downloaded and installed.
2. Obtain game software update file (filename ends in ".spk") from www.sternpinball.com or from authorized Stern distributor.
3. Place game software update file (".spk") in root directory of a blank FAT32-formatted (NTFS file formatting will also work) USB flash drive
4. Use backbox power switch to turn off game
5. Plug in USB flash drive to CPU board USB connector (CN9). Refer to www.sternpinball.com
6. Turn on game
7. The game will automatically begin software update
8. Select the correct .spk update file from list.
9. Press Enter on the service switches to start update
10. When the display indicates "Update Complete", turn off game
11. Remove USB flash drive from CPU board
12. Turn game on to complete the update and play pinball!
13. Detailed instructions and troubleshooting tips are available in the game manual, www.sternpinball.com and authorized Stern distributors.

POWER SWITCH

The game's power switch is located on the right-hand side underneath the backbox.

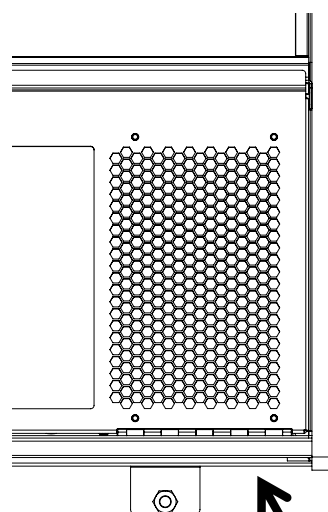

ON/OFF Switch

1.2 SERVICE MENU NAVIGATION

The four service buttons (inside Coin Door) have multiple functions. The buttons react differently depending on what state the game is currently in.

FUNCTIONS DURING GAME OR ATTRACT MODE

PRESS  SELECT for SERVICE MENU			
			
Green Press to add service credit(s).	Left Red Press to decrease the volume (quieter).	Right Red Press to increase the volume (louder).	Black Press to enter the Service Menu.

FUNCTIONS DURING SERVICE MENU

PRESS  SELECT for SERVICE MENU			
			
Green Press to go back to the last menu or exit.	Left Red Press to move highlighted option up.	Right Red Press to move highlighted option down.	Black Press to Select the current highlighted option.

FUNCTIONS WHEN MAKING ADJUSTMENTS

PRESS  SELECT for SERVICE MENU			
			
Green Press to cancel change.	Left Red Press to decrease the current adjustment.	Right Red Press to increase the current adjustment.	Black Press to confirm / save the change.

SERVICE MENU



The first screen when entering the Service Menu contains information about your game.

- A. IP Address** - Shows the current IP Address the game is receiving from the network.
- B. Config ID** - Your game's unique identifier to the servers. This comes from the CPU and game version.
- C. Firmware Versions** - This will have two versions shown, they are for the overall software running the game.
- D. Network Status** - Shows the current Wi-Fi signal and network name, or Wired Connection.
- E. Game Title** - Shows the game title and version. This comes from the software installed.
- F. Game Code** - Shows the current software version installed.
- G. QR Code** - Scanning this QR Code will bring you directly to Insider Connected.
- H. Status Symbol** - This is a quick glance to see if the game is registered.



Not Registered



Registered

SERVICE MENU CONTINUED



Pressing the Select button will continue to the Main Menu. While in the Main Menu, pressing the Back/Escape button will exit back to the game.

Use the volume buttons to change the option highlighted. In the image above, Quick Adjustments is highlighted, and pressing the Select button will enter that menu.



Quick Adjustments has the more common settings that help for a quick setup of the game.

Pressing the volume buttons will move through the options here. Pressing Select on an option allows the volume buttons to change current value/setting. Save the change with the Select button, or cancel the change with the Back/Escape button.

To go back to the previous menu, press the Back/Escape button.

Service Menu Table Of Contents

Quick Adjustments

Diagnostics

- Switch Test
- Coil Test
- LED Test
- Node Board Test
- Technician Alerts

Device Tests

- Ball Trough Test
- Sound/Speaker Test
- Game Specific Device Tests

Audits

- Play Counts
- Awards
- Scores
- Time
- Earnings Audits
- Diagnostic Audits
- Game Play Audits
- Dump Audits to USB
- Dump Audits to USB (Comp)

Adjustments

- Pricing
- Game Play Settings
- Machine Settings

Stern Insider Connected™

- About
- Setup Connection
- Test Connection
- Game Registration
- Software Update
- Setup Home Team™
- Change Settings

Utilities

- Presets
- Start Guided Setup
- Enter Custom Message
- Save Settings
- Restore Settings
- Resets

Tournament Menu

Redemption Menu

SERVICE MENU DEFINITIONS

Quick Adjustments

- » The most commonly changed adjustments are located here.

Diagnostics

- **Switch Test**
- **Coil Test**
- **LED Test**
- **Node Board Test**
- **Technician Alerts** (located here in addition to the main page)

Device Tests

- **Ball Trough Test**
- **Sound/Speaker Test**
- **Game Specific Device Tests**

Audits

- **Play Counts**
 - » Counts of games and balls played, plus any play count specific audits unique to the game.
- **Awards**
 - » Counts of replays, extra balls, specials, and matches awarded, plus any award specific audits unique to the game.
- **Scores**
 - » Counts of game scores, split into divisions of score ranges.
- **Time**
 - » Average ball and game time, plus counts of total game time, split into divisions of time ranges.
- **Earnings Audits**
 - » Counts of coins deposited, credits paid, service credits and other counts related to money and earnings.
- **Diagnostic Audits**
 - » Counts of ball searches, lost balls, power on time, and other counts related to machine operation.
- **Game Play Audits**
 - » Game audits unique to the game.
- **Dump Audits to USB**
 - » Save the audits to a text file on a USB storage device. Includes Game and Location IDs set via the machine adjustments. Audit text will include mixed upper/lower case letters.
- **Dump Audits to USB (Comp)**
 - » Save the audits to a text file on a USB storage device, in a format . similar to previous software release. Game and Location IDs will not be present in this file, and all audit text will be upper case only.

Adjustments

- **Pricing**
 - » Game pricing and coin door settings, and on-screen credit formatting options.
- **Game Play Settings**
 - **Player and Ball Settings**
 - » Ball and players per game, tilt adjustments, ball save timer and plunger settings.
 - **Game Settings**
 - » Game play adjustments unique to the game.
 - **Game Types**
 - » For games with multiple types of play modes, the enabling and disabling of these play types.
 - **Standard High Scores**
 - » High score default scores and award settings. High score initial entry settings and how often they will be reset.
 - **Game High Scores**
 - » Game specific high scores defaults.

Machine Settings

- **Machine Operation**
 - » Controls how the start and action buttons behave, the ticket dispenser settings and the Game and Location IDs (used for audit dumps).
- **Devices**
 - » Allows you to disable certain game devices, so the game will ... continue to function while repairs are being made.
- **Coil Settings**
 - » Adjust the power settings of flippers and coils, and any settings relevant to any game specific devices.
- **LCD/Lamp**
 - » Brightness settings for lamps and the LCD screen.
- **Audio Settings**
 - » Main volume settings, plus any individual volume settings specific to this game.
- **Audio Configuration**
 - » Speaker, Volume, and sound setup settings.
- **Attract Mode**
 - » Control of some attract mode displays.

Stern Insider Connected™

- **About**
 - » Network connection details
- **Setup Connection**
 - » Connect this game to the internet.
- **Test Connection**
 - » Test the machine's internet connection.
- **Game Registration**
 - » Register this game with Stern Insider Connected. Display the .. registration details, and unregister games.
- **Software Update**
 - » Check for, download, and install any software updates. Enable/Disable updates and change the download scheduling.
- **Setup Home Team™**
 - » For non-commercial settings, scan players to the Stern Insider . Connected™ account, so connected games can be played without having to scan in each time.
- **Change Settings**
 - » Stern Insider Connected™ related adjustments, including start . button behavior, play again times, and home team settings.

Utilities

- **Presets**
 - » Change the game settings en-mass from a selection of grouped adjustment settings.
- **Start Guided Setup**
 - » Enter the guided setup menu, setting up the machine for the first time.
- **Enter Custom Message**
 - » Enter a message unique to this specific game that will **display in the attract mode.**
- **Save Settings**
 - » Save the settings to a USB storage device.
- **Restore Settings**
 - » Restore the settings from a USB storage device.
- **Resets**
 - » Allows resetting coin, game, and high score audits, credits, audio and other settings back to default values.

Tournament Menu

- » Allows the configuration of a built-in tournament on this game.

Redemption Menu

- » Allows the configuration of a game that dispenses tickets during game play.

1.3 GAME PRICING REFERENCE TABLE

Country	ID	Pricing (Credits / Cost)						Unit per Pulse	Coin Door Pulse Settings					
									Left	Center	Right	4th	5th	6th
Australia	1	1/\$1.00 AU	3/\$2.00 AU					\$0.10 AU	2	10	20	50	5	0
	2	1/\$1.00 AU												
	3	1/\$2.00 AU												
	4	1/\$2.00 AU	2/\$4.00 AU	3/\$5.00 AU										
	5	1/\$2.00 AU	2/\$3.00 AU											
Canada	1	1/\$0.50 CN	2/\$0.75 CN	3/\$1.00 CN				\$0.25 CN	1	1	4	8	0	0
	2	1/\$1.00 CN	3/\$2.00 CN					\$1.00 CN	1	1	2	2	0	0
China	1	1/5 Yaun	3/10 Yuan					1 Yuan	1	1	1	0	0	0
	2	1/10 Yaun	2/15 Yuan											
Croatia		1/3 kuna	2/5 kuna					1 kuna	1	2	5	1	0	0
Denmark	1	1/3 DKr	2/5 DKr					1 DKr	1	5	10	20	0	0
	2	1/2 DKr	2/4 DKr	3/5 DKr	4/7 DKr	5/9 DKr	7/10 DKr							
	3	1/5 DKr												
	4	1/10 DKr												
	5	1/20 DKr												
	6	1/10 DKr	3/20 DKr											
Euro	1	1/EUR 0.50						Electronic EUR 0.10	5	10	20	2	0	0
	2	1/EUR 0.50	2/EUR 1.00	3/EUR 1.50	5/EUR 2.00									
	3	1/EUR 0.50	3/EUR 1.00											
	4	1/EUR 1.00	2/EUR 2.00	3/EUR 3.00	5/EUR 4.00									
	5	1/EUR 1.00	3/EUR 2.00											
	6	1/EUR 1.00	2/EUR 1.50	3/EUR 2.00										
	7	1/EUR 1.00	3/EUR 2.00	7/EUR 3.00				Mechanical EUR 0.10	5	1	5	1	0	0
	8	1/EUR 1.00	4/EUR 2.00											
	9	2/EUR 1.00	4/EUR 2.00	6/EUR 3.00	9/EUR 4.00									
	10	1/EUR 2.00	2/EUR 3.00	3/EUR 4.00										
	11	1/EUR 2.00	2/EUR 4.00	3/EUR 5.00										
	12	1/EUR 2.00	3/EUR 4.00	7/EUR 6.00										
Indonesia	1	1/20000 Rp	2/40000 Rp	3/50000 Rp	4/60000 Rp	5/80000 Rp	8/100000 Rp	10,000 Rp	0	0	0	0	0	1
	2	1/20000 Rp	2/40000 Rp	4/50000 Rp	5/60000 Rp	6/80000 Rp	10/100000 Rp							
	3	2/20000 Rp	4/40000 Rp	6/50000 Rp	8/60000 Rp	10/80000 Rp	13/100000 Rp							
Japan	1	1/YEN 100						Yen 100	1	1	1	1	0	0
	2	1/YEN 100	3/YEN 200											
	2	1/YEN 200												
Lithuania		1/2 LTL						1 LTL	1	2	5	0	0	0
Middle East		1/1 token						1 token	1	1	1	1	0	0
New Zealand	1	1/\$1 NZ						\$1 NZ	1	1	2	1	0	0
	2	1/\$1 NZ	3/\$2 NZ											
	3	1/\$2 NZ	2/\$3 NZ											
Norway	1	1/10 Nkr						1 Nkr	1	5	10	20	0	0
	2	1/10 Nkr	3/20Nkr											
	3	1/20 Nkr												
	4	1/20 Nkr	3/40 Nkr											
	5	1/5 Nkr												
Russia		1/5 RUB						1 RUB	10	5	1	1	0	0
South Africa	1	1/R2						R 0.50	1	2	4	10	0	0
	2	1/R3	2/R5											
Sweden	1	1/10 SKr	2/15 SKr	3/20 SKr				1 SKr	1	5	10	2	0	0
	2	1/5 SKr												
	3	1/10 SKr												
	4	1/20 SKr												
	5	1/10 SKr	3/20 SKr											
Switzerland	1	1/1 SwF	2/2 SwF	3/3 SwF	4/4 SwF	6/5 SwF		1 SwF	1	2	5	1	0	0
	2	1/2 SwF	2/4 SwF	3/5 SwF										
Taiwan		1/10 TWD						10 TWD	1	1	1	1	0	0
UK	1	1/2.00						10p	1	5	10	2	20	0
	2	1/1.00												
	3	1/50p	2/1.00	3/1.50	5/2.00									
	4	1/2.00	2/3.00	4/5.00										
	5	1/1.00	3/2.00											
USA	1	1/\$0.25						\$0.25	1	4	1	1	0	0
	2	1/\$0.50	2/\$0.75	3/\$1.00										
	3	1/\$0.50												
	5	1/\$0.50	2/\$1.00	3/\$1.50	5/\$2.00									
	7	1/\$0.50	2/\$1.00	4/\$1.50	6/\$2.00									
	8	1/\$0.50	3/\$1.00											
	9	1/\$1.00												
	10	1/\$0.75	2/\$1.50	3/\$2.00										
	11	1/\$1.00	3/\$2.00											
	12	1/\$0.25	2/\$0.50	3/\$0.75	5/\$1.00									
	13	1/\$1.00	2/\$2.00	3/\$3.00	4/\$4.00	7/\$5.00								

1.4 TRANSPORTING THE GAME

When transporting the game, such as in the back of a truck or with a hand truck, the game's backbox must be secured to prevent damage to the side rails.

1. SECURE THE BACKBOX

1. Ensure that the pinballs are removed from the playfield, and secure any free-moving mechanisms that may get damaged in transport.


TOOLS REQUIRED

- STRAP (500LB OR GREATER)
- AN ASSISTANT
- HAND TRUCK


CAUTION

NEVER TRANSPORT THE GAME IN A MOVING VEHICLE WITH THE BACKBOX RAISED! TWO PEOPLE ARE REQUIRED TO REMOVE THE LEGS!


2. REMOVE THE LEGS AND STAND UP

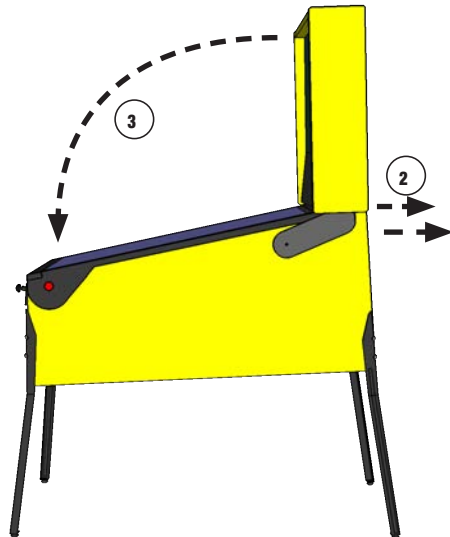


2. Remove the backbox securing bolts.
3. Carefully lower the backbox onto the side rails. Use a piece of cardboard or suitable padding between the backbox and the game.

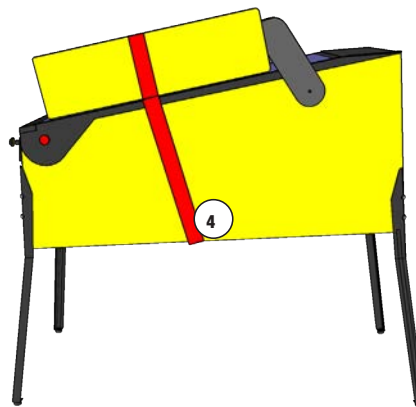


4. Securely strap the back box to the game.
5. The game may be transported with the legs on. If the legs must be removed, follow the remaining steps.

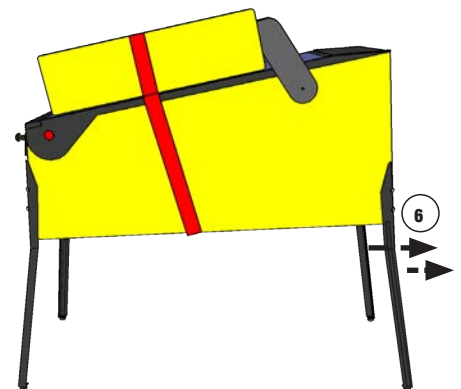


6. Remove the legs, rear legs first. Use a stool or a friend to support the rear of the game.
7. Rest the rear of the game on the ground.

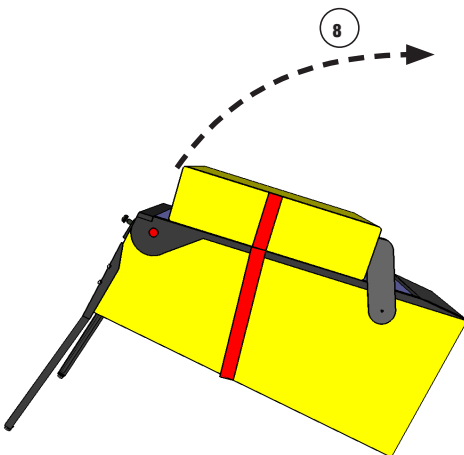

8. Stand the game up on its back.

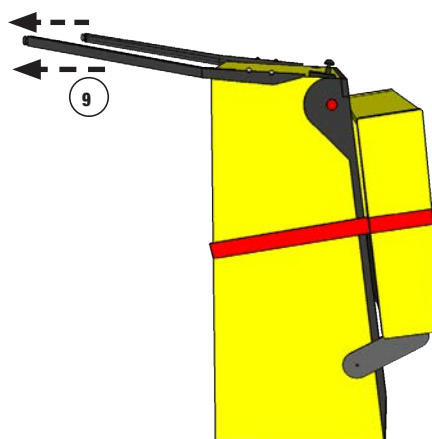

9. Remove the front two legs.

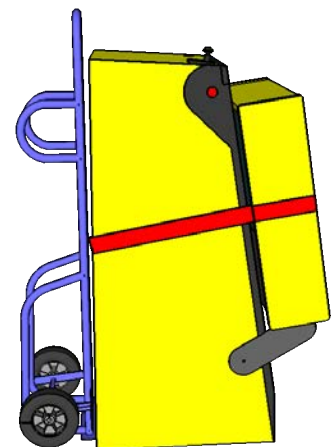

10. Secure all loose parts and transport with a hand truck in the upright position.

1.5 MAINTENANCE

REGULAR MAINTENANCE - (MONTHLY/500 GAMES)

- Remove the playfield glass
- Enter the software diagnostics menu, start lamp test, then clean and wax the playfield.
 - While cleaning the playfield, identify and repair malfunctioning lights, loose parts, cracked plastics and worn rubber parts.
- While in diagnostics, enter the switch test.
 - Use a pinball to actuate all switches and verify the correct switch registers with the switch test.
 - The game will play a sound to confirm the switch.
- Lift the playfield and inspect all assemblies for loose parts, broken wires or excessive wear. Look at the bottom of the cabinet for any parts that may have worked loose, then find the source.
- Check all coin door mechanisms and bill acceptor (if installed) for proper operation
- Play the game to ensure all coils and features are working
- Check the playfield to ensure it is level and set to the proper pitch using the bubble level on the right side wood rail.
- Check game audits: Replay % and Ball Time and note abnormal values which can indicate problems.
- Ensure game volume is set appropriately for the location.
- Clean both sides of the playfield glass and reinstall.
- Check and clean pinballs and replace if excessively worn or scuffed. Dirty pinballs accelerate game wear.

OVERHAUL MAINTENANCE - (5000 GAMES)

- Verify latest game software is installed
- Check flippers for excessive wear. Excessive flipper sloppiness (vertical or horizontal) or weakness indicates a flipper rebuild is required.
- Clean machine inside and out and check leg levelers for free operation.
- Visual check for loose or broken playfield and cabinet parts and repair as necessary.
- Electrical check: Plug into grounded outlet and check for proper operation through DIAGNOSTICS.
- Replace worn or dirty rubbers.
- Replace pinballs.
- Check all playfield switches with a pinball.
- Check all settings (refer to manual for factory settings).
- Check coin door: With door closed, insert coins to verify proper operation.
- Check for proper adjustment of the plumb bob tilt.
- Play game: Check for satisfactory operation.

COMMON PINBALL TOOLS

- Common nut drivers (1/4", 5/16", 11/32", 3/8")
- Phillips screwdriver
- Standard Allen wrench/Hex key set
- 5/8" Socket with ratchet
- Adjustable wrench (5/8" & 9/16")
- 6" Torpedo Level (or use a pinball)
- Flashlight or headlamp
- Soldering Iron (60w with flat tip), lead-free solder
- Wire cutter
- Wire stripper
- Long nose ("needle nose") pliers

1.6 MAINTENANCE KITS

Description	Part Number
Fallout Pro Playfield Plastics Kit	803-5000-AD
Fallout Pro Playfield Decals Kit	802-5000-AD
Fallout Pro Backbox Decal Left	820-81AD-01
Fallout Pro Backbox Decal Right	820-81AD-02
Fallout Pro Cabinet Decal Left	820-81AD-03
Fallout Pro Cabinet Decal Right	820-81AD-04
Fallout Pro Cabinet Decal Front	820-81AD-05
Fallout Pro Playfield, Bare	830-5100-AD
Fallout Pro Translite	830-8427-AD

1.7 COMMON PARTS

Description	Part Number
8 oz Pinball Playfield wax (Novus # 2)	675-0003-01
Standard Pinball, 1-1/16 in	260-5000-00
Flipper Rebuild Kit Left (Standard)	500-6307-10
Flipper Base Plate Kit Left	515-6617-01
Flipper Rebuild Kit Right	500-6307-00
Flipper Base Plate Kit Right	515-6617-00
Memory Card - MicroSD	970-0141-64

2. SPIKE SYSTEM AND NODE GUIDE

2.1 SPIKE SYSTEM OVERVIEW

The SPIKE Pinball system is a rugged, distributed, and embedded platform custom-designed for the rigors of the pinball machine environment. SPIKE takes advantage of modern technologies to deliver an immersive pinball experience that supports modern features, reduces cabling, and increases serviceability and reliability.

A Stern Pinball machine based on the SPIKE system will have at least two nodes networked together with the SPIKE node bus, a custom industrial pinball control bus that is designed around industry standards and optimized for the pinball environment. The primary CPU node is networked to one or more input/output nodes over standard Category 5 UTP (unshielded twisted pair) ethernet cabling.

There are five primary types of nodes that are found in the game.

- CPU node (Node 0) - The primary node that controls other nodes in the system. Contains the primary game software for the system and provides SPIKE node bus power for other nodes.
- Cabinet 48V node (Node 1) - Specialized node with specific inputs and outputs for coin doors, tilt mechanisms, and other bottom-cabinet devices.
- 48V playfield node - Controls high power devices such as coils and flashers, and also supports a few switch and low-power outputs. Powered by the system 48V power supply.
- Light and switch node - High-density switch and low-power LED outputs, bus-powered from the node bus. These boards contain as many 32 switch inputs and light outputs.
- Node extensions - These sub-nodes add additional low-power input and outputs to a specific Power or I/O node and are connected with simple serial bus.

2.2 NODE BUS CABLING

The SPIKE node bus utilizes standard Ethernet-style RJ45 8-pin modular jacks, and off-the-shelf Category 5e or better ethernet cabling. The node bus is electrically different from Ethernet and does not utilize Ethernet or TCP/IP protocols or signaling standards. SPIKE nodes are not compatible with standard computer networking equipment.

CAUTION: *Plugging a SPIKE Node or CPU board into a standard Ethernet port may damage one or both devices and void your warranty.*

2.3 SYSTEM POWER

The SPIKE System is powered from an 48V DC power supply bus. Each SPIKE node converts this voltage to lower voltages required by the node and its specific components. A SPIKE 48V node typically controls high-power outputs such as game coil mechanisms and high-brightness LEDs. These powered nodes are supplied directly with 48V system power. SPIKE standard I/O nodes are low-power nodes that read switch inputs and output to standard-brightness LEDs. Standard I/O nodes use the node bus power, which is supplied by the main CPU node over the node bus modular jack connectors.

2.4 SPIKE NODE ADDRESSES

Each SPIKE node has a unique address ranging from 0 to 15. Not all addresses are used in all games. Nodes can be of the same part number, so the address is specified on the DIP switches on each node. When replacing a node, be certain that the correct address is set. Nodes can have 3-position and 4-position DIP switches. Refer to the appropriate table to set the address for each type of Node. The correct address for a node can be found in the SPIKE node reference section of the manual or in the game diagnostic software. Address 0 is reserved for the backbox CPU node, where the game software resides. Address 1 is reserved for the cabinet node, located inside the coin door. These two nodes do not have DIP switches as their address is not configurable.

Address	1	2	3	4
8	OFF	OFF	OFF	OFF
9	OFF	OFF	ON	OFF
10	OFF	ON	OFF	OFF
11	OFF	ON	ON	OFF
12	ON	OFF	OFF	OFF
13	ON	OFF	ON	OFF
14	ON	ON	OFF	OFF
15	ON	ON	ON	OFF

SPIKE node addresses for nodes with 4-position DIP switches. Addresses 0-7 are reserved for fixed-function nodes and do not require configuration.

SPIKE SYSTEM AND NODE GUIDE CONTINUED

2.5 SPIKE NODE PROGRAMMING

The SPIKE nodes are smart nodes that have on-board processors and run embedded code. The nodes are programmed automatically by the CPU node whenever software updates are installed to the CPU. When replacing a node, the CPU node will detect and update the node to the latest software with no user intervention. Always replace nodes with the power to the game turned OFF.

2.6 SPIKE SYSTEM TERMINOLOGY

MULTI GENERAL ILLUMINATION LIGHTING

General Illumination Lighting is two or more lights powered by one control source. These are often a number of LEDs connected in parallel and the system controls these as one large LED. A missing LED will not affect these circuits, however a shorted LED can cause the entire string of LEDs to turn off.

SINGLE LIGHTS

Single lights and LEDs are direct-controlled from SPIKE node boards. A common power source is grounded by individual transistors to turn individual LEDs on and off. Groups of LEDs, usually by node connector, share a common power source, so if a group of LEDs is out, check the wiring for the power source.

FLASHERS

SPIKE games treat flashers the same as single LEDs that draw more power. Flashers are controlled from the same circuits that power regular lights.

DRIVERS

A driver is a circuit that controls a high power-device such as a coil, magnet, or motor. Each device has a common 48V power source that is then connected to ground by a dedicated control transistor. Each driver is protected against shorting, static electricity, and over-current conditions. Take caution as 48V is always present on a device even when it is not energized.

OPTOS

Certain types of optical switches ("optos") require external signal conditioning. For these optos, they will interface to a SPIKE node via an opto signal conditioning board. Other optical switches connect directly to the Spike node board.

CAUTION: Unless explicitly directed by an Authorized Stern Repair technician, perform ALL work on your pinball machine with the power disabled!

INPUT/OUTPUT PROTECTIONS (OVERCURRENT)

SPIKE features built-in short-circuit, static electricity, and other protections to maximize reliability. If an LED, coil or other device shorts, it will be disabled but will not shut down the entire system in most circumstances. Groups of LEDs, coils, and switches often share common power supplies or other circuits, so it is possible that a bad device will affect the group of related devices and require removal or repair to fix the group. The system diagnostics will inform the technician of shorted or otherwise malfunctioning devices whenever possible. While the system is protected against permanent damage, it is strongly recommended to repair or replace these bad components as soon as possible to minimize downtime and maximize game earnings.


2.7 COMMON SPIKE NODE BOARDS

Description	Type	Part Number
SPIKE CPU Node	Node	524-1002-00
Cabinet Node	Node	520-6967-72
Playfield 48V Core-Driver Node	Node	520-1070-00 520-1057-00
Trough Serial Opto Receiver Extension	Extension	520-8516-00
QR Scanner Assembly	Node	524-1001-00

3. LIGHT, SWITCH, AND DRIVER REFERENCE

Fallout

Pro Model



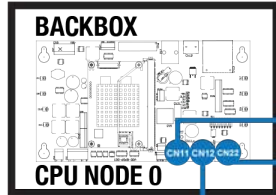


Node Bus Cable (RJ45)
604-5004-08-XX

Serial Data Cable
036-8054-XX

When replacing node boards,
ensure DIP address switches
are set correctly!

**OPTIONAL
TOPPER**

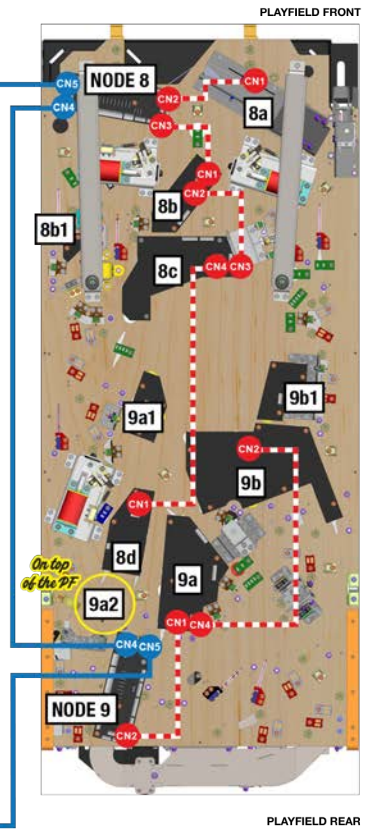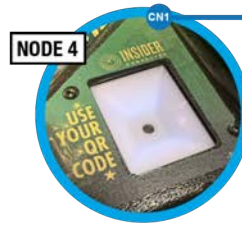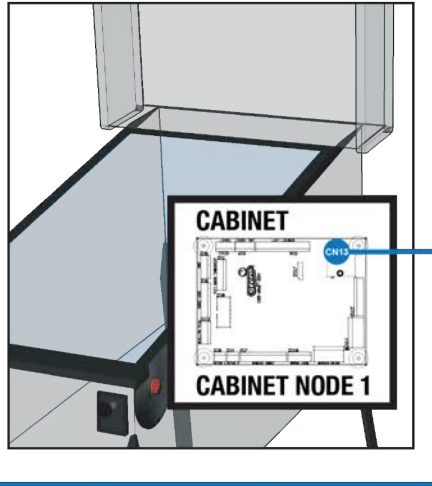

3.1 SPIKE NODE BOARDS

ID	DIP Address	Description	Location	Part Number
Node 0	n/a	SPIKE 2 CPU Node	Backbox	524-1002-00
Node 1	n/a	Cabinet Node	Cabinet	520-6967-72
Node 4	n/a	QR Reader Node	Bottom Arch	524-1001-00
Node 8	OFF-OFF-OFF-OFF	Core - Driver Node	Lower Playfield	520-1070-00 520-1057-00
8a	n/a	Trough Serial Opto Receiver Extension	Playfield	520-8516-00
8b	n/a	LED Board - 1R 5W BC	Playfield	520-9889-00
8b1	n/a	LED Board - 3W ML	Playfield	520-9905-00
8c	n/a	LED Board - 2R 12W LC	Playfield	520-9890-00
8d	n/a	LED Board - 3R 5W UL	Playfield	520-9906-00
Node 9	OFF-OFF-ON-OFF	Core - Driver Node	Playfield	520-1070-00 520-1057-00
9a	n/a	LED Board - 6R 6W MC	Playfield	520-9895-00
9a1	n/a	LED Board - 6W LC	Playfield	520-9891-00
9a2	n/a	LED Board - Pip Boy	Playfield	515-3269-00
9a3	n/a	LED Board - 3W UC	Playfield	520-9896-00
9b	n/a	LED Board - 3R 17W 1F	Playfield	520-9893-00
9b1	n/a	LED Board - 6W RC	Playfield	520-9892-00
Node 0(2)	n/a	(LE Option)	Cabinet-Expression	
Node 0(7)	n/a	(LE Option)	Speaker-Expression	520-5370-72
Node 12	ON-OFF-OFF-OFF	Topper (Optional)	Topper	
Node 13	ON-OFF-ON-OFF	Topper (Optional)	Topper	
Node 14	ON-ON-OFF-OFF	Universal Topper (Optional)	Topper	520-5370-72

3.2 DRIVER REFERENCE

ID	Name	Node	Connector	Ret. Pin	Ret. Wire	Voltage	V+ Pin	V+ Color	Location	Type	Address	Part Number
1	Trough	8	CN8	7	ORG GRY	48V	1-4	GRY ORG	Playfield	Coil - 27-1500	8-DR-1	090-5004-ND
2	Auto Plunger	8	CN8	9	ORG WHT	48V	1-4	GRY ORG	Playfield	Coil - 23-800	8-DR-4	090-5001-ND
3	Left Flipper	8	CN8	6	ORG YEL	48V	1-4	GRY ORG	Playfield	Coil - 23-1080	8-DR-5	090-5032-ND
4	Right Flipper	8	CN8	5	ORG GRN	48V	1-4	GRY ORG	Playfield	Coil - 23-1080	8-DR-0	090-5032-ND
5	Left Pop Bumper	9	CN8	9	ORG BLU	48V	1-4	GRY BRN	Playfield	Coil - 26-1200	9-DR-4	090-5044-ND
6	Right Slingshot	8	CN8	10	ORG VIO	48V	1-4	GRY ORG	Playfield	Coil - 26-1200	8-DR-2	090-5044-ND
7	Shaker Motor	1	CN16	1	BLU	48V	5	RED	Cabinet	Motor	1-DR-0	041-5029-04
8	Upper Left Flipper	8	CN7	4	YEL BLK	48V	1	GRY ORG	Playfield	Coil - 23-1080	8-DR-7	090-5032-ND
9												
10												
11	Sundries Scoop	9	CN8	10	ORG BLK	48V	1-4	GRY BRN	Playfield	Coil - 23-800	9-DR-2	090-5001-ND
12												
13												
14												
15	Pip-Boy Magnet	9	CN7	3	BRN ORG	48V	1	GRY BRN	Playfield	Coil - 20-700	9-DR-6	500-6915-03 (090-5086-00)
16	Bottle Cap Spinner	9	CN7	4	YEL BLU	48V	1	GRY BRN	Playfield	Coil - 26-1200	9-DR-7	090-5044-ND
17												
18												
19												
20												
21												
22												
23												
24												
25												
26												
27												
28												
29												
30												
31												
32												
33	Coin Meter	1	CN3	2	BLK	12V	1	RED	Cabinet	Digital Out	1-DR-2	500-9946-00
34	Ticket Meter	1	CN4	2	BLK	12V	1	RED	Cabinet	Digital Out	1-DR-3	500-9946-00
35	Ticket Dispenser	1	CN11	3		12V	1		Cabinet	Digital Out	1-DR-4	

Continued on next page...

DRIVER REFERENCE CONTINUED

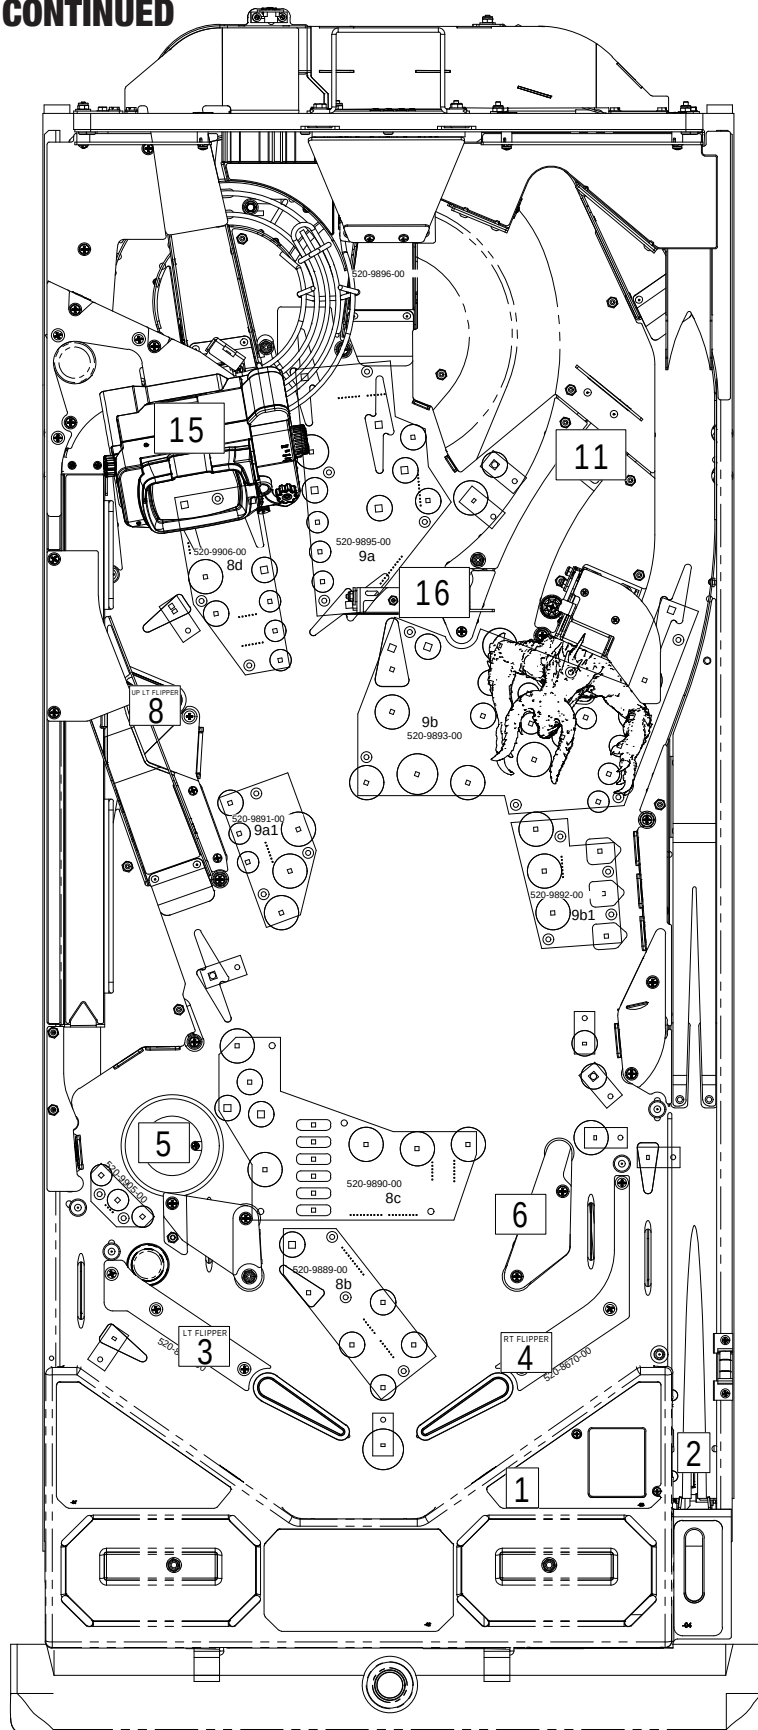


Figure 3.2.1. Playfield driver locations (top view).

3.3 SWITCH REFERENCE

ID	Name	Node	Node Ext	Conn.	Input Pin	Input Wire	GND Pin	Ground Wire	Location	Type	Address	Part Number
1	Left Outlane	8	-	CN11	4	LGN RED	11/12	BLK ORG	Playfield	Rollover	8-SW-17	500-2567-04
2	Left Inlane-Inner	8	-	CN11	5	LGN ORG	11/12	BLK ORG	Playfield	Rollover	8-SW-18	500-2567-04
3	Left Rollover Button	8	-	CN11	8	LGN VIO	11/12	BLK ORG	Playfield	Rollover	8-SW-21	520-8527-00
4												
5	Right Inlane	8	-	CN11	6	LGN YEL	11/12	BLK ORG	Playfield	Rollover	8-SW-19	500-2567-04
6	Right Outlane	8	-	CN11	7	LGN BLU	11/12	BLK ORG	Playfield	Rollover	8-SW-20	500-2567-04
7	Left Pop Bumper	9	-	CN12	7	WHT BLU	10	BLK WHT	Playfield	Leaf	9-SW-13	180-5232-00
8	Right Slingshot	8	-	CN10	3	GRY VIO	8	BLK GRN	Playfield	Leaf	8-SW-29	180-5231-00
9	Left Flipper Button	8	-	CN9	4	GRY BRN	7	BLK GRN	Cabinet	Leaf	8-SW-25	180-5164-01
10	Right Flipper Button	8	-	CN9	3	GRY RED	7	BLK GRN	Cabinet	Leaf	8-SW-24	180-5160-01
11	Left Flipper EOS	8	-	CN10	6	GRY YEL	9	BLK GRN	Playfield	Leaf	8-SW-16	180-5149-00
12	Right Flipper EOS	8	-	CN10	5	GRY GRN	9	BLK GRN	Playfield	Leaf	8-SW-31	180-5149-00
13	Up Left Flipper Button	8	-	CN9	6	VIO	8	BLK VIO	Playfield	Leaf	8-SW-27	180-5164-01
14	Up Left Flipper EOS	8	-	CN12	8	PNK BLK	10	BLK RED	Playfield	Leaf	8-SW-14	180-5149-00
15	Trough 6	8	8a	CN14	-		-		Playfield	Opto	8-SW-32	520-5344-00 tx 520-8516-00 rx
16	Trough 5	8	8a	CN14	-		-		Playfield	Opto	8-SW-33	520-5344-00 tx 520-8516-00 rx
17	Trough 4	8	8a	CN14	-		-		Playfield	Opto	8-SW-34	520-5344-00 tx 520-8516-00 rx
18	Trough 3	8	8a	CN14	-		-		Playfield	Opto	8-SW-35	520-5344-00 tx 520-8516-00 rx
19	Trough 2	8	8a	CN14	-		-		Playfield	Opto	8-SW-36	520-5344-00 tx 520-8516-00 rx
20	Trough 1	8	8a	CN14	-		-		Playfield	Opto	8-SW-37	520-5344-00 tx 520-8516-00 rx
21	Trough Jam	8	8a	CN14	-		-		Playfield	Opto	8-SW-38	520-5344-00 tx 520-8516-00 rx
22	Shooter Lane	8	-	CN10	2	GRY WHT	7	BLK GRN	Playfield	Micro	8-SW-28	180-5157-01
23												
24												
25												
26	Junk Target	8	-	CN12	2	WHT BRN	10	BLK RED	Playfield	Leaf, Target	8-SW-8	515-9783-00-00
27	Pop Target-Left	8	-	CN12	3	WHT RED	10	BLK RED	Playfield	Leaf, Target	8-SW-9	515-9783-00-00
28	Pop Target-Center	8	-	CN12	4	WHT ORG	10	BLK RED	Playfield	Leaf, Target	8-SW-10	515-9783-00-00
29	Pop Target-Right	8	-	CN12	5	WHT YEL	10	BLK RED	Playfield	Leaf, Target	8-SW-11	515-9783-00-00
30												
31												
32	Left Lane	8	-	CN12	7	WHT BLU	10	BLK RED	Playfield	Rollover	8-SW-13	500-2567-04
33												
34												
35	Radroach 2 Target	9	-	CN11	2	TAN BLK	11/12	BLK GRY	Playfield	Leaf, Target	9-SW-26	515-9785-00-00
36	Radroach 3 Target	9	-	CN12	6	WHT GRN	10	BLK WHT	Playfield	Leaf, Target	9-SW-12	515-9785-00-00
37	Bottle Cap Spinner Opto	9	-	CN12	2	WHT BRN	10	BLK WHT	Playfield	Opto	9-SW-8	520-8115-00 tx 520-8116-00 rx
38	Radio Tower Target	9	-	CN12	3	WHT RED	10	BLK WHT	Playfield	Leaf, Target	9-SW-9	515-9783-00-00
39	3 Bank-Top	8	-	CN13	6	PNK BLU	10	BLK BRN	Playfield	Opto	8-SW-4	515-9783-00-00
40	3 Bank-Middle	8	-	CN13	7	PNK VIO	10	BLK BRN	Playfield	Opto	8-SW-5	515-9783-00-00
41	3 Bank-Bottom	8	-	CN13	8	PNK GRY	10	BLK BRN	Playfield	Opto	8-SW-6	515-9783-00-00
42	Radroach 4 Target	8	-	CN11	10	LGN WHT	11/12	BLK ORG	Playfield	Leaf, Target	8-SW-23	515-9783-00-00
43												
44												
45	10 Pt Sw	9	-	CN10	2	GRY BLK	7/8/9	BLK BLU	Playfield	Leaf	9-SW-28	180-5231-00

Continued on next page...

SWITCH REFERENCE CONTINUED

ID	Name	Node	Node Ext	Conn.	Input Pin	Input Wire	GND Pin	Ground Wire	Location	Type	Address	Part Number
46	Radroach 1 Target	9	-	CN10	3	GRY BRN	7/8/9	BLK BLU	Playfield	Leaf, Target	9-SW-29	515-9784-00-00
47	Outer Loop Exit Opto	9	-	CN10	4	GRY RED	7/8/9	BLK BLU	Playfield	Opto	9-SW-30	515-0215-00 tx 515-0215-01 rx
48												
49	Pip-Boy Opto-Left	9	-	CN10	5	GRY ORG	7/8/9	BLK BLU	Playfield	Opto	9-SW-31	515-0215-00 tx 515-0215-01 rx
50	Pip-Boy Opto-Right	9	-	CN10	6	GRY YEL	7/8/9	BLK BLU	Playfield	Opto	9-SW-16	515-0215-00 tx 515-0215-01 rx
51												
52												
53	Outer Loop	9	-	CN11	3	TAN RED	11/12	BLK GRY	Playfield	Rollover	9-SW-27	500-2567-04
54	Inner Loop	9	-	CN11	4	TAN ORG	11/12	BLK GRY	Playfield	Rollover	9-SW-17	500-2567-03
55	Right Ramp Made Opto	9	-	CN11	5	TAN YEL	11/12	BLK GRY	Playfield	Opto	9-SW-18	515-0215-00 tx 515-0215-01 rx
56	Jump Ramp Opto	9	-	CN11	6	TAN GRN	11/12	BLK GRY	Playfield	Opto	9-SW-19	515-0215-00 tx 515-0215-01 rx
57												
58	Loop Ramp Opto	9	-	CN11	8	TAN VIO	11/12	BLK GRY	Playfield	Opto	9-SW-21	515-0215-00 tx 515-0215-01 rx
59												
60												
61												
62												
63	Sundries Scoop Opto	9	-	CN12	4	WHT ORG	10	BLK WHT	Playfield	Opto	9-SW-10	515-0215-00 tx 515-0215-01 rx
64	Deathclaw Hit	9	-	CN12	5	WHT YEL	10	BLK WHT	Playfield	Micro	9-SW-11	180-5010-04
65												
66												
67												
68												
69												
70												
71												
72												
73												
74												
75												
76												
77												
78												
79												
80												
81												
82												
83												
84												
85												
86												
87												
88												

Continued on next page...

SWITCH REFERENCE CONTINUED

ID	Name	Node	Node Ext	Conn.	Input Pin	Input Wire	GND Pin	Ground Wire	Location	Type	Address	Part Number
89												
90	Action Button	1	-	CN7	10	TAN WHT	9	BLK WHT	Cabinet	Leaf	1-SW-2	180-5218-00
91												
92												
93	Start Button	1	-	CN6	11	GRY	12	BLK WHT	Cabinet	Micro	1-SW-11	500-1060-44-LED
94	Tournament Start Button	1	-	CN6	9	-	5	-	Cabinet	-	1-SW-12	
95												
96	Left Coin	1	-	CN5	9	PNK BRN	3	BLK	Coin Door	Micro	1-SW-16	
97	Right Coin	1	-	CN5	7	PNK ORG	3	BLK	Coin Door	Micro	1-SW-18	
98	Center Coin	1	-	CN5	8	PNK RED	3	BLK	Coin Door	Micro	1-SW-17	
99	Fourth Coin	1	-	CN5	6	-	3	-	Coin Door	-	1-SW-19	
100	Fifth Coin	1	-	CN5	5	-	3	-	Coin Door	-	1-SW-20	
101	Tilt Pendulum	1	-	CN6	7	WHT	5	BLK WHT	Cabinet	Plumb Bob	1-SW-14	516-0007-00
102	Sixth Coin	1	-	CN9	5	-	6	-	Coin Door	-	1-SW-21	
103	Ticket Notch	1	-	CN11	5	BLU	4	BLK	Cabinet	-	1-SW-8	
104	Slam Tilt	1	-	CN5	4	-	3	-	Coin Door	-	1-SW-22	
105	Ticket Low	1	-	CN2	2	-	1	-	Cabinet	-	1-SW-7	
106												
107												
108												
109												
110												
C9	Service Select	0	-	CN25	1	LGN GRY	11	BLK WHT	Coin Door		0-SW-8	515-1963-00
C10	Service Plus	0	-	CN25	2	LGN VIO	11	BLK WHT	Coin Door		0-SW-9	515-1963-00
C11	Service Minus	0	-	CN25	3	LGN BLU	11	BLK WHT	Coin Door		0-SW-10	515-1963-00
C12	Service Back	0	-	CN25	4	LGN BLK	11	BLK WHT	Coin Door		0-SW-11	515-1963-00
C17	Headphone Detect	0	-	-	-	-	-	-	Coin Door		0-SW-16	-
C18	Headphone Kit Detect	0	-	CN3	5	BLK	4	BLK	Coin Door		0-SW-17	-
C19	Volume Encoder 1	0	-	CN3	6	WHT	1	DRAIN	Coin Door		0-SW-18	-
C20	Volume Encoder 2	0	-	CN3	7	GRN	1	DRAIN	Coin Door		0-SW-19	-
C21	Jumper LVDS Resolution 1	0	-	-	-	-	-	-	CPU Node		0-SW-20	-
C22	Jumper LVDS Resolution 2	0	-	-	-	-	-	-	CPU Node		0-SW-21	-
C23	Jumper Unused	0	-	-	-	-	-	-	CPU Node		0-SW-22	-
C24	Coin Door Interlock	0	a	CN4	1	WHT GRY	4	BLK WHT	Cabinet		0-SW-23	-

Continued on next page...

SWITCH REFERENCE CONTINUED

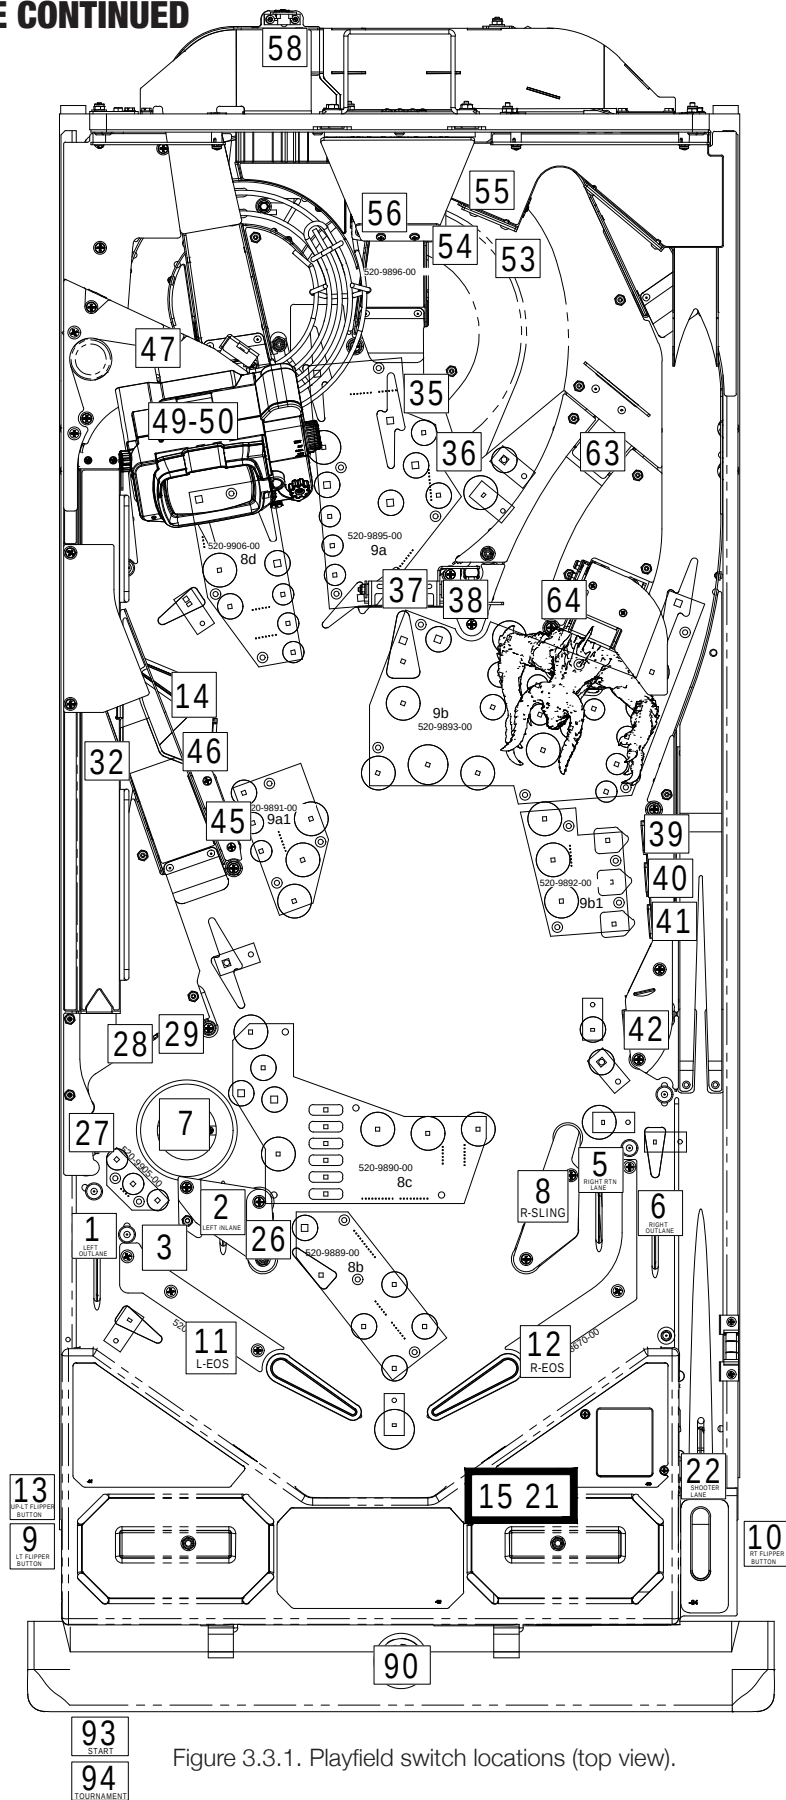


Figure 3.3.1. Playfield switch locations (top view).

3.4 LIGHT REFERENCE

ID	Name	Node	Node Ext.	Conn.	Ret. Pin	Ret. Wire	Src. Pin	Src. Wire	Location	Type	Light Color	Address	Part Number
1	Coin Enable	1	-	CN8	6	BLK GRY	2	GRY RED	Coin Door	Digital Out		1-LP-0	
2	Start Button	1	-	CN6	3	YEL BRN	1	RED	Cabinet	Feature	White	1-LP-2	113-5071-00
3	Tournament Start	1	-	CN6	2	YEL RED	1	RED	Cabinet	Feature	White	1-LP-3	112-5031-01
4	Action Button-R	1	-	CN7	2	RED WHT	1	RED	Cabinet	Feature	RGB	1-LP-5	520-5333-00
5	Action Button-G	1	-	CN7	3	GRN WHT	1	RED	Cabinet	Feature	RGB	1-LP-4	520-5333-00
6	Action Button-B	1	-	CN7	4	BLU WHT	1	RED	Cabinet	Feature	RGB	1-LP-7	520-5333-00
7	Ticket Low	1	-	CN2	4		5		Cabinet	Feature	White	1-LP-8	
8													
9													
10													
11	Stimpak Left	8	b	CN3	3	BRN RED	1/2	RED	Playfield	Feature	White	8-LP-16	520-5307-00
12	Left Rollover Button	8	-	CN14	2	YEL VIO	7/8	YEL	Playfield	Feature	RGB	8-LP-7	520-8527-00
13	Left Inlane 3	8	b	CN3	9	YEL BRN	1/2	RED	Playfield	Feature	White	8-LP-22	520-8670-00
14	Left Inlane 2	8	b	CN3	8	YEL RED	1/2	RED	Playfield	Feature	White	8-LP-21	520-8670-00
15	Left Inlane 1	8	b	CN3	7	YEL ORG	1/2	RED	Playfield	Feature	White	8-LP-20	520-8670-00
16	Right Inlane 1	8	c	CN1	6	YEL GRN	1/2	RED	Playfield	Feature	White	8-LP-27	520-8670-00
17	Right Inlane 2	8	c	CN1	7	YEL BLU	1/2	RED	Playfield	Feature	White	8-LP-28	520-8670-00
18	Right Inlane 3	8	c	CN1	8	YEL VIO	1/2	RED	Playfield	Feature	White	8-LP-29	520-8670-00
19	Nuka Cap Right	8	c	CN2	7	ORG RED	1/2	RED	Playfield	Feature	White	8-LP-35	520-5307-00
20	Stimpak Right	8	-	CN14	6	BRN BLU	7/8	YEL	Playfield	Feature	White	8-LP-3	520-5307-00
21	Shoot Again	8	c	CN1	9	YEL WHT	1/2	RED	Playfield	Feature	White	8-LP-30	520-5307-00
22	Victor	8	b	LED6	-	-	-	-	Playfield	Feature	White	8-LP-15	520-9889-00
23	Mr Handy	8	b	LED3	-	-	-	-	Playfield	Feature	White	8-LP-12	520-9889-00
24	Protectron	8	b	LED5	-	-	-	-	Playfield	Feature	White	8-LP-14	520-9889-00
25	Dogmeat	8	b	LED4	-	-	-	-	Playfield	Feature	White	8-LP-13	520-9889-00
26	Junk	8	b	LED2	-	-	-	-	Playfield	Feature	White	8-LP-11	520-9889-00
27	Fallout Radio Junk Target-R	8	b	LED1	-	-	-	-	Playfield	Feature	RGB	8-LP-8	520-9889-00
28	Fallout Radio Junk Target-G	8	b	LED1	-	-	-	-	Playfield	Feature	RGB	8-LP-9	520-9889-00
29	Fallout Radio Junk Target-B	8	b	LED1	-	-	-	-	Playfield	Feature	RGB	8-LP-10	520-9889-00
30	Nuka Cap Left	8	c	LED25	-	-	-	-	Playfield	Feature	White	8-LP-52	520-9890-00
31													
32													
33	Pop Target Left	8	b	CN3	4	BRN ORG	1/2	RED	Playfield	Feature	White	8-LP-17	520-9905-00
34	Pop Target Center	8	b	CN3	5	BRN YEL	1/2	RED	Playfield	Feature	White	8-LP-18	520-9905-00
35	Pop Target Right	8	b	CN3	6	BRN GRN	1/2	RED	Playfield	Feature	White	8-LP-19	520-9905-00
36	Fallout Radio Pop-R	8	c	LED23	-	-	-	-	Playfield	Feature	RGB	8-LP-46	520-9890-00
37	Fallout Radio Pop-G	8	c	LED23	-	-	-	-	Playfield	Feature	RGB	8-LP-47	520-9890-00
38	Fallout Radio Pop-B	8	c	LED23	-	-	-	-	Playfield	Feature	RGB	8-LP-48	520-9890-00
39													
40	Fusion Core Power 1	8	c	LED15	-	-	-	-	Playfield	Feature	White	8-LP-38	520-9890-00
41	Fusion Core Power 2	8	c	LED16	-	-	-	-	Playfield	Feature	White	8-LP-39	520-9890-00
42	Fusion Core Power 3	8	c	LED17	-	-	-	-	Playfield	Feature	White	8-LP-40	520-9890-00
43	Fusion Core Power 4	8	c	LED18	-	-	-	-	Playfield	Feature	White	8-LP-41	520-9890-00
44	Fusion Core Power 5	8	c	LED19	-	-	-	-	Playfield	Feature	White	8-LP-42	520-9890-00
45	Fusion Core Power 6	8	c	LED20	-	-	-	-	Playfield	Feature	White	8-LP-43	520-9890-00
46													
47													
48	Filly	8	c	LED26	-	-	-	-	Playfield	Feature	White	8-LP-53	520-9890-00
49	Gulper	8	c	LED27	-	-	-	-	Playfield	Feature	White	8-LP-54	520-9890-00
50	Super Duper Mart	8	c	LED28	-	-	-	-	Playfield	Feature	White	8-LP-55	520-9890-00
51	Radroach Target 4	8	c	CN2	3	ORG BRN	1/2	RED	Playfield	Feature	White	8-LP-31	520-5307-00

Continued on next page...

LIGHT REFERENCE CONTINUED

ID	Name	Node	Node Ext.	Conn.	Ret. Pin	Ret. Wire	Src. Pin	Src. Wire	Location	Type	Light Color	Address	Part Number
52	Fallout Radio Radroach 4-R	8	c	CN2	4	RED YEL	1/2	RED	Playfield	Feature	RGB	8-LP-32	520-5333-00
53	Fallout Radio Radroach 4-G	8	c	CN2	5	GRN YEL	1/2	RED	Playfield	Feature	RGB	8-LP-33	520-5333-00
54	Fallout Radio Radroach 4-B	8	c	CN2	6	BLU YEL	1/2	RED	Playfield	Feature	RGB	8-LP-34	520-5333-00
55	Mini Nuke Top	9	b	CN1	7	BLU YEL	1/2/3	RED	Playfield	Feature	White	9-LP-51	520-9892-00
56	Mini Nuke Middle	9	b	CN1	8	BLU GRN	1/2/3	RED	Playfield	Feature	White	9-LP-52	520-9892-00
57	Mini Nuke Bottom	9	b	CN1	9	BLU VIO	1/2/3	RED	Playfield	Feature	White	9-LP-53	520-9892-00
58													
59	Main Quest-Mind Control	9	b	CN1	4	BLU BRN	1/2/3	RED	Playfield	Feature	White	9-LP-48	520-9892-00
60	Main Quest-Novac	9	b	CN1	5	BLU RED	1/2/3	RED	Playfield	Feature	White	9-LP-49	520-9892-00
61	Main Quest-Find The Target	9	b	CN1	6	BLU ORG	1/2/3	RED	Playfield	Feature	White	9-LP-50	520-9892-00
62	What Makes You SPECIAL	9	b	LED41	-	-	-	-	Playfield	Feature	White	9-LP-94	520-9893-00
63	Cold Fusion	9	b	LED42	-	-	-	-	Playfield	Feature	White	9-LP-95	520-9893-00
64	Observatory	9	b	LED29	-	-	-	-	Playfield	Feature	White	9-LP-80	520-9893-00
65	Main Quest-Wedding Day	9	a	CN2	3	GRN BRN	1/2	RED	Playfield	Feature	White	9-LP-32	520-9891-00
66	Main Quest-Radscorpion Attack	9	a	CN2	4	GRN RED	1/2	RED	Playfield	Feature	White	9-LP-33	520-9891-00
67	Main Quest-The Kings	9	a	CN2	5	GRN ORG	1/2	RED	Playfield	Feature	White	9-LP-34	520-9891-00
68	Radroach Target 1	9	a	CN2	6	GRN YEL	1/2	RED	Playfield	Feature	White	9-LP-35	520-9891-00
69	Extra Ball	9	a	CN2	7	GRN BLU	1/2	RED	Playfield	Feature	White	9-LP-36	520-9891-00
70	Terminal	9	a	CN2	8	GRN VIO	1/2	RED	Playfield	Feature	White	9-LP-37	520-9891-00
71													
72	Pip-Boy Left Ramp-R	8	c	CN1	3	RED BRN	1/2	RED	Playfield	Feature	RGB	8-LP-24	520-5333-00
73	Pip-Boy Left Ramp-G	8	c	CN1	4	GRN BRN	1/2	RED	Playfield	Feature	RGB	8-LP-25	520-5333-00
74	Pip-Boy Left Ramp-B	8	c	CN1	5	BLU BRN	1/2	RED	Playfield	Feature	RGB	8-LP-26	520-5333-00
75	Vault-1	8	c	LED21	-	-	-	-	Playfield	Feature	White	8-LP-44	520-9890-00
76	Pip-Boy Lit Left	8	c	LED22	-	-	-	-	Playfield	Feature	White	8-LP-45	520-9890-00
77	Fallout Radio Left Ramp-R	8	c	LED24	-	-	-	-	Playfield	Feature	RGB	8-LP-49	520-9890-00
78	Fallout Radio Left Ramp-G	8	c	LED24	-	-	-	-	Playfield	Feature	RGB	8-LP-50	520-9890-00
79	Fallout Radio Left Ramp-B	8	c	LED24	-	-	-	-	Playfield	Feature	RGB	8-LP-51	520-9890-00
80													
81													
82													
83													
84													
85													
86													
87													
88													
89													
90													
91													
92													
93													
94													
95													
96													
97													
98													
99													
100													
101													
102													

Continued on next page...

LIGHT REFERENCE CONTINUED

ID	Name	Node	Node Ext.	Conn.	Ret. Pin	Ret. Wire	Src. Pin	Src. Wire	Location	Type	Light Color	Address	Part Number
103													
104													
105													
106													
107													
108													
109	Pip-Boy Right Ramp-R	8	d	LED6	-	-	-	-	Playfield	Feature	RGB	8-LP-65	520-9906-00
110	Pip-Boy Right Ramp-G	8	d	LED6	-	-	-	-	Playfield	Feature	RGB	8-LP-66	520-9906-00
111	Pip-Boy Right Ramp-B	8	d	LED6	-	-	-	-	Playfield	Feature	RGB	8-LP-67	520-9906-00
112	Vault-2	8	d	LED9	-	-	-	-	Playfield	Feature	White	8-LP-70	520-9906-00
113	Pip-Boy Lit Right	8	d	LED10	-	-	-	-	Playfield	Feature	White	8-LP-71	520-9906-00
114													
115													
116	Center Ramp-R	8	d	LED5	-	-	-	-	Playfield	Feature	RGB	8-LP-62	520-9906-00
117	Center Ramp-G	8	d	LED5	-	-	-	-	Playfield	Feature	RGB	8-LP-63	520-9906-00
118	Center Ramp-B	8	d	LED5	-	-	-	-	Playfield	Feature	RGB	8-LP-64	520-9906-00
119	Fallout Radio Center Ramp-R	8	d	LED4	-	-	-	-	Playfield	Feature	RGB	8-LP-59	520-9906-00
120	Fallout Radio Center Ramp-G	8	d	LED4	-	-	-	-	Playfield	Feature	RGB	8-LP-60	520-9906-00
121	Fallout Radio Center Ramp-B	8	d	LED4	-	-	-	-	Playfield	Feature	RGB	8-LP-61	520-9906-00
122	Side Quest Center Ramp	8	d	LED3	-	-	-	-	Playfield	Feature	White	8-LP-58	520-9906-00
123	Companion Center Ramp	8	d	LED2	-	-	-	-	Playfield	Feature	White	8-LP-57	520-9906-00
124	Stimpak Center Ramp	8	d	LED1	-	-	-	-	Playfield	Feature	White	8-LP-56	520-9906-00
125													
126													
127	Mini Loop-R	9	a	LED1	-	-	-	-	Playfield	Feature	RGB	9-LP-8	520-9895-00
128	Mini Loop-G	9	a	LED1	-	-	-	-	Playfield	Feature	RGB	9-LP-9	520-9895-00
129	Mini Loop-B	9	a	LED1	-	-	-	-	Playfield	Feature	RGB	9-LP-10	520-9895-00
130	Vault-3	9	a	LED2	-	-	-	-	Playfield	Feature	White	9-LP-11	520-9895-00
131	Fallout Radio Mini Loop-R	9	a	LED3	-	-	-	-	Playfield	Feature	RGB	9-LP-12	520-9895-00
132	Fallout Radio Mini Loop-G	9	a	LED3	-	-	-	-	Playfield	Feature	RGB	9-LP-13	520-9895-00
133	Fallout Radio Mini Loop-B	9	a	LED3	-	-	-	-	Playfield	Feature	RGB	9-LP-14	520-9895-00
134	Side Quest Mini Loop	9	a	LED4	-	-	-	-	Playfield	Feature	White	9-LP-15	520-9895-00
135	Companion Mini Loop	9	a	LED5	-	-	-	-	Playfield	Feature	White	9-LP-16	520-9895-00
136	Stimpak Mini Loop	9	a	LED6	-	-	-	-	Playfield	Feature	White	9-LP-17	520-9895-00
137													
138	Jump Ramp Top-Enter Vault	9	a	CN3	8	BLU YEL	1/2	RED	Playfield	Feature	White	9-LP-45	520-9896-00
139	Jump Ramp Mid-Open Vault	9	a	CN3	7	BLU ORG	1/2	RED	Playfield	Feature	White	9-LP-44	520-9896-00
140	Jump Ramp Bot-Vault Letter	9	a	CN3	6	BLU RED	1/2	RED	Playfield	Feature	White	9-LP-43	520-9896-00
141	Jump Ramp-R	9	a	LED12	-	-	-	-	Playfield	Feature	RGB	9-LP-29	520-9895-00
142	Jump Ramp-G	9	a	LED12	-	-	-	-	Playfield	Feature	RGB	9-LP-30	520-9895-00
143	Jump Ramp-B	9	a	LED12	-	-	-	-	Playfield	Feature	RGB	9-LP-31	520-9895-00
144													
145	Fallout Radio Jump Ramp-R	9	a	LED8	-	-	-	-	Playfield	Feature	RGB	9-LP-21	520-9895-00
146	Fallout Radio Jump Ramp-G	9	a	LED8	-	-	-	-	Playfield	Feature	RGB	9-LP-22	520-9895-00
147	Fallout Radio Jump Ramp-B	9	a	LED8	-	-	-	-	Playfield	Feature	RGB	9-LP-23	520-9895-00
148	Radroach Target 2	9	a	LED11	-	-	-	-	Playfield	Feature	White	9-LP-28	520-9895-00
149	Fallout Radio Target 3-R	9	a	LED10	-	-	-	-	Playfield	Feature	RGB	9-LP-25	520-9895-00

Continued on next page...

LIGHT REFERENCE CONTINUED


ID	Name	Node	Node Ext.	Conn.	Ret. Pin	Ret. Wire	Src. Pin	Src. Wire	Location	Type	Light Color	Address	Part Number
150	Fallout Radio Target 3-G	9	a	LED10	-	-	-	-	Playfield	Feature	RGB	9-LP-26	520-9895-00
151	Fallout Radio Target 3-B	9	a	LED10	-	-	-	-	Playfield	Feature	RGB	9-LP-27	520-9895-00
152	Radroach Target 3	9	a	LED9	-	-	-	-	Playfield	Feature	White	9-LP-24	520-9895-00
153													
154	Fallout Radio Outer Loop-R	9	b	CN3	3	RED WHT	1/2	RED	Playfield	Feature	RGB	9-LP-56	520-5333-00
155	Fallout Radio Outer Loop-G	9	b	CN3	4	GRN WHT	1/2	RED	Playfield	Feature	RGB	9-LP-57	520-5333-00
156	Fallout Radio Outer Loop-B	9	b	CN3	5	BLU WHT	1/2	RED	Playfield	Feature	RGB	9-LP-58	520-5333-00
157	Radaway Jackpot	9	b	CN3	6	BRN WHT	1/2	RED	Playfield	Feature	White	9-LP-59	520-5307-00
158	Outer Loop Bolt-R	9	a	LED7	-	-	-	-	Playfield	Feature	RGB	9-LP-18	520-9895-00
159	Outer Loop Bolt-G	9	a	LED7	-	-	-	-	Playfield	Feature	RGB	9-LP-19	520-9895-00
160	Outer Loop Bolt-B	9	a	LED7	-	-	-	-	Playfield	Feature	RGB	9-LP-20	520-9895-00
161													
162	Spinner Arrow	9	b	LED39	-	-	-	-	Playfield	Feature	White	9-LP-92	520-9893-00
163	Cap Stash	9	b	LED40	-	-	-	-	Playfield	Feature	White	9-LP-93	520-9893-00
164	Radio Tower Target 5-R	9	b	LED37	-	-	-	-	Playfield	Feature	RGB	9-LP-88	520-9893-00
165	Radio Tower Target 5-G	9	b	LED37	-	-	-	-	Playfield	Feature	RGB	9-LP-89	520-9893-00
166	Radio Tower Target 5-B	9	b	LED37	-	-	-	-	Playfield	Feature	RGB	9-LP-90	520-9893-00
167	Begin Quest	9	b	LED34	-	-	-	-	Playfield	Feature	White	9-LP-85	520-9893-00
168	Sundries	9	b	LED35	-	-	-	-	Playfield	Feature	White	9-LP-86	520-9893-00
169	Loot	9	b	LED36	-	-	-	-	Playfield	Feature	White	9-LP-87	520-9893-00
170	Deathclaw FIRE	9	b	LED31	-	-	-	-	Playfield	Feature	White	9-LP-82	520-9893-00
171	Deathclaw 1	9	b	LED33	-	-	-	-	Playfield	Feature	White	9-LP-84	520-9893-00
172	Deathclaw 2	9	b	LED32	-	-	-	-	Playfield	Feature	White	9-LP-83	520-9893-00
173	Deathclaw 3	9	b	LED30	-	-	-	-	Playfield	Feature	White	9-LP-81	520-9893-00
174	Deathclaw 4	9	b	LED25	-	-	-	-	Playfield	Feature	White	9-LP-72	520-9893-00
175													
176	Right Ramp-R	9	b	LED28	-	-	-	-	Playfield	Feature	RGB	9-LP-77	520-9893-00
177	Right Ramp-G	9	b	LED28	-	-	-	-	Playfield	Feature	RGB	9-LP-78	520-9893-00
178	Right Ramp-B	9	b	LED28	-	-	-	-	Playfield	Feature	RGB	9-LP-79	520-9893-00
179	Vault-4	9	b	LED27	-	-	-	-	Playfield	Feature	White	9-LP-76	520-9893-00
180	Fallout Radio Right Ramp-R	9	b	LED26	-	-	-	-	Playfield	Feature	RGB	9-LP-73	520-9893-00
181	Fallout Radio Right Ramp-G	9	b	LED26	-	-	-	-	Playfield	Feature	RGB	9-LP-74	520-9893-00
182	Fallout Radio Right Ramp-B	9	b	LED26	-	-	-	-	Playfield	Feature	RGB	9-LP-75	520-9893-00
183	Side Quest Right Ramp	9	b	LED24	-	-	-	-	Playfield	Feature	White	9-LP-71	520-9893-00
184	Companion Right Ramp	9	b	LED23	-	-	-	-	Playfield	Feature	White	9-LP-70	520-9893-00
185	Stimpak Right Ramp	9	b	LED22	-	-	-	-	Playfield	Feature	White	9-LP-69	520-9893-00
186													
187	Pip-Boy Rad-Meter R	9	a	CN3	3	YEL RED	1/2	RED	Playfield	Feature	White	9-LP-40	515-3269-00
188	Pip-Boy Rad-Meter G	9	a	CN3	4	YEL GRN	1/2	RED	Playfield	Feature	White	9-LP-41	515-3269-00
189	Pip-Boy Radio W	9	a	CN3	5	YEL WHT	1/2	RED	Playfield	Feature	White	9-LP-42	515-3269-00
190													
191													
192													
193													
194													
195													
196													
197													
198													
199													

Continued on next page...

LIGHT REFERENCE CONTINUED

ID	Name	Node	Node Ext.	Conn.	Ret. Pin	Ret. Wire	Src. Pin	Src. Wire	Location	Type	Light Color	Address	Part Number
200													
201													
202													
203													
204													
205													
206													
207													
208													
209													
210	Coin Door Gl	1	-	CN5	2	YEL	1	YEL-WHT	Coin Door	G.I.	White	1-LP-1	112-5033-08
211	Bottom GI-WHT (x7)	8	-	CN15	5	WHT BLK	1	YEL BLK	Playfield	G.I.	White	8-LP-0	511-3294-08
212	Bottom GI-RED (x7)	8	-	CN15	6	RED BLK	2	YEL RED	Playfield	G.I.	White	8-LP-1	511-3294-02
213	Bottom Arch Gl	8	-	CN15	7	BLU BLK	3	YEL BLU	Playfield	G.I.	White	8-LP-2	520-7000-00
214													
215	Top GI-WHT (x6)	9	-	CN15	5	WHT BLK	1	YEL BLK	Playfield	G.I.	White	9-LP-0	511-3294-08
216	Top GI-RED (x6)	9	-	CN15	6	RED BLK	2	YEL RED	Playfield	G.I.	White	9-LP-1	511-3294-02
217													
218													
219													
220	Pop Flash	8	b	CN3	10	BRN BLU	1/2	RED	Playfield	Flash	White	8-LP-23	520-8059-00
221	Deathclaw Spot	8	c	CN2	8	ORG YEL	1/2	RED	Playfield	Flash	White	8-LP-36	113-5032-08
222													
223	Bottle Cap Flash	9	b	LED38	-	-	-	-	Playfield	Flash	White	9-LP-91	520-9893-00
224	Pip Boy Flash	9	a	CN2	9	ORG VIO	1/2	RED	Playfield	Flash	White	9-LP-38	520-7000-00
225	Vault Spot	9	a	CN2	10	ORG WHT	1/2	RED	Playfield	Flash	White	9-LP-39	520-7000-00
226	Sundries Flash	8	c	CN2	9	ORG GRN	1/2	RED	Playfield	Flash	White	8-LP-37	520-8457-00
227													
228	Nuka Cola Quantum Flash	8	d	CN2	2	ORG VIO	1	RED	Playfield	Flash	White	8-LP-68	520-8655-00
229													
230													
231													
232													
233													
234													
235													
236													
237													
238													
239													
240													
241													

LIGHT REFERENCE CONTINUED

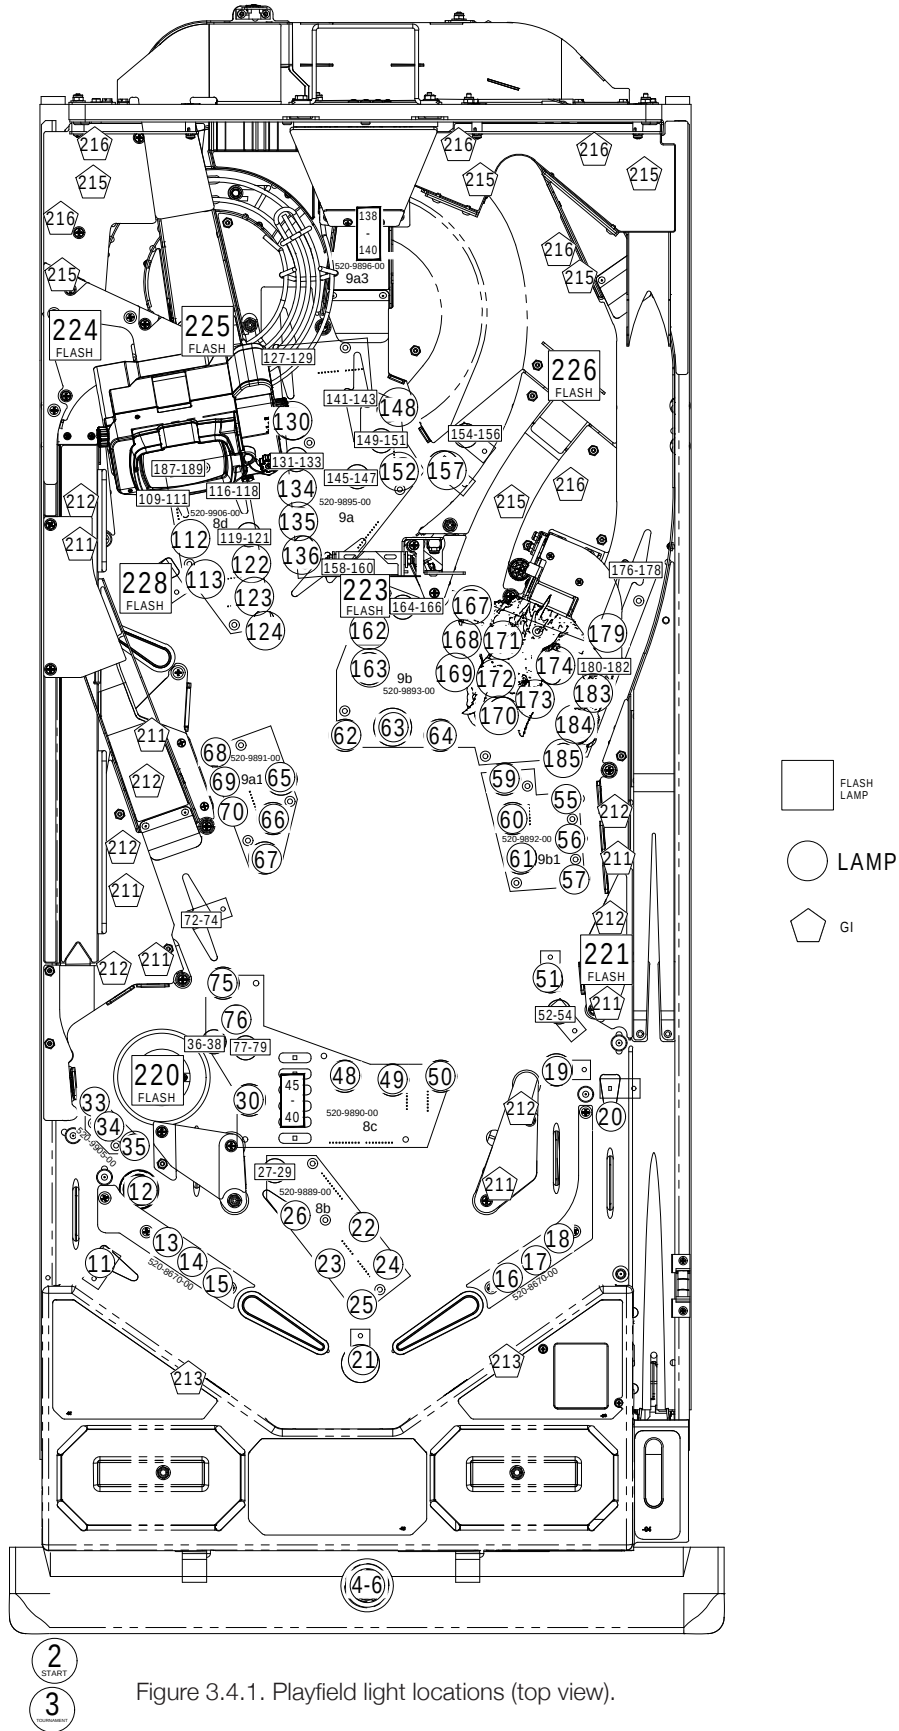

3.5 DIAGNOSTICS MENU REFERENCE

Single Coil Test

#1: Trough Ⓐ

Node: 8 - Lower Playfield

Connector: CN8

Voltage: 48V

Return pin: 7 Org-Gry

Voltage pin: 1-4 Gry-Org


Location: Playfield

Type: Coil - 27-1500

Part Number: 090-5004-ND

Address: 8-DR-1


Kicks a ball out of the trough and into the shooter lane. Ⓒ

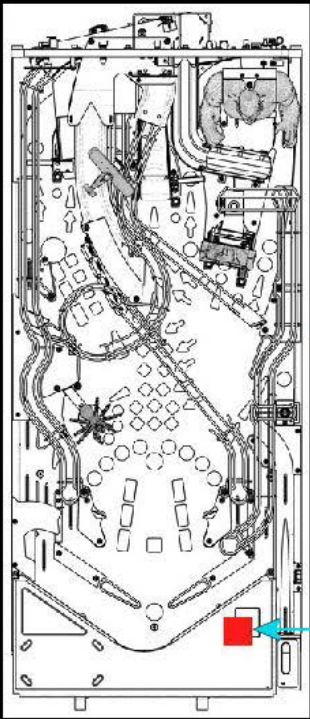


Press Enter to fire coil Ⓕ

- A.** This is the currently selected Coil. Use the - / + Volume buttons to go to the previous / next coil.
- B.** This is the information for the currently selected coil.
- Node is the board that controls it, and the Connector is the connector on that board the output is coming from.
 - Voltage is how much voltage is output to the coil. Measuring voltage from the Voltage Pin to a ground connection should measure close to the Voltage listed. Voltage pin is typically live while the controlling board is active.
 - Return and Voltage Pins show the exact pin of the connector, and the color of the wires for each pin. The return wire completes the circuit to energize / activate the coil.
 - Type and Part Number show what the wires are going to. In this case, it shows that it is a coil made up of wire that is 27 gauge thick, with 1,500 windings,. The Stern part number for the specific coil used is 090-5004-ND.
- C.** This is a brief description of what the Coil does when activated. May not be present for all Coils.
- D.** This is a map of the playfield. The image will change to help show location of currently selected Coil.
- E.** This is the relative position of the currently selected Coil.
- F.** Pressing the Select button will cause the game to briefly energize the Coil.
- For magnets that only hold the ball when energized, this may not be long enough to hold the ball. Instead, place a ball near the magnet and see if the ball is affected by the magnet when energized.

DIAGNOSTICS MENU REFERENCE CONTINUED

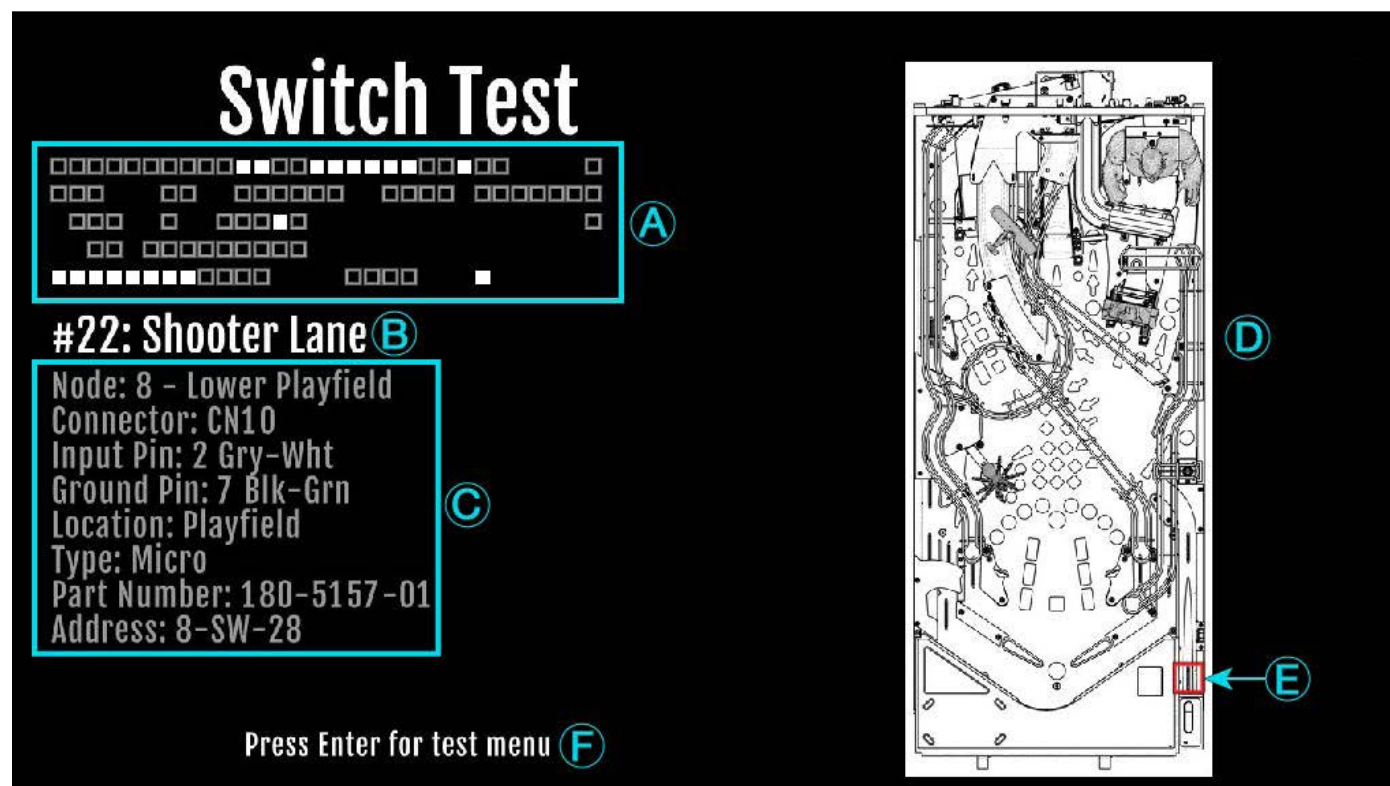

- A. This top area shows all the currently active switches. The filled boxes are currently registering as active, and the empty boxes are not being registered. It updates live, so blocking an optic sensor's path or pressing a switch will cause its box to fill in.
-Some inputs are normally active, such as device position switches, and the DIP switches on the main CPU Node 0.
- B. This is the last switch input the game registered. In this sample image, we pressed down on the Shooter Lane switch to activate it.
- C. This is the switch input's information. Node is the board the switch plugs into, and Connector is where the switch plugs into that circuit board. Input and Ground Pin shows what pin and color wire goes into that connector.
-In this sample image, the text is greyed out because the input is not currently active. There is currently no ball in the Shooter Lane.
- D. This is a map of the playfield. The image will change to help show location of currently selected switch.
- E. The last active input will show up highlighted. If it is currently active, it will be a full shape. In the sample, it is a hollow box because the input is not currently being triggered.
- F. Pressing the Select button will pop up a menu for other testing options.

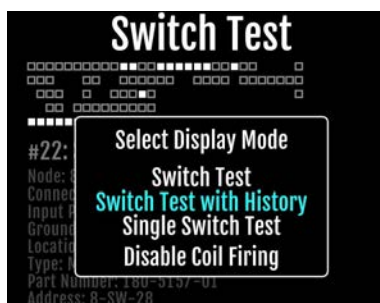

The starting screen is Switch Test.

Switch Test with History will show a list of the previously activated switches.

Single Switch Test allows the - / + Volume buttons to scroll through the boxes in the top area.

Disable Coil Firing will stop coils from firing when their respective switch is activated. For the sample image, that would mean the Auto-Plunger would not fire when the Shooter Lane Switch is activated.


After disabling the coils, re-entering the menu will show the bottom option as Enable Coil Firing to turn that feature back on.

DIAGNOSTICS MENU REFERENCE CONTINUED

LED/Flasher Test

#18: Shoot Again **A**


Node: 8 - Lower Playfield / 8b: 9W MC LED Brd.
 Connector: CN2
 Return Pin: 11 / Yel-Wht
 Source Pin: 1/2/3 / Red
 Location: Playfield
 Type: Feature
 Part Number: 520-5307-00
 Address ID: 8-LP-15

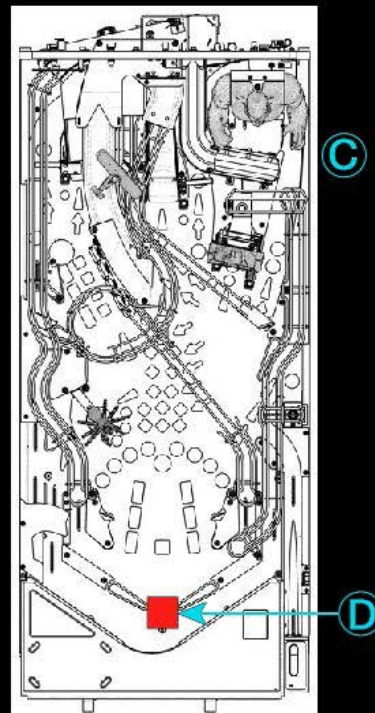BPress Enter to change LED test **E**

- A.** This is the currently selected LED. Use the - / + Volume buttons to go to the previous / next LED.
- B.** This is the information for the currently selected LED.
- Node is the board that controls it, and the Connector is the labeled connector on that board. In this sample, LED Serial board 8b, which is connected to Node 8, is what turns this LED On / Off.
 - Return and Source Pins show the exact pin of the connector, and the color of the wires that go to the LED. The source wire is typically live, and the return wire is what completes the circuit to turn on the LED.
 - Type and Part Number show what type of light is selected, and the Stern part number for the board or light bulb.
- C.** This is a map of the playfield. The image will change to help show location of currently selected LED.
- D.** This is the relative position of the currently selected LED.
- E.** Pressing the Select button will cause a small menu to pop up. You can change to G.I. test and ALL LEDS from the pop up menu.

LED/Flasher Test

#2: Start Button
 Node: 1 - Cabinet
 Connector: CNG
 Return Pin: 3 / Yel-Brn
 Source Pin: 1 / Red
 Location: Cabinet
 Type: Feature
 Part Number: 113-5071-00
 Address ID: 1-LP-2

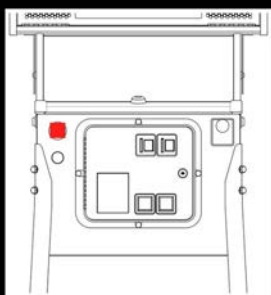

The sample image here shows that the image on-screen for the Start Button shows the cabinet instead of the playfield.

#30: (K)ing Kong

Node: 8 - Lower Playfield / 8b: 9W MC LED Brd.
 Connector: LED32


Location: Playfield
 Type: Feature
 Part Number: 520-8668-00
 Address ID: 8-LP-39

The sample image here shows an LED that is a part of the LED serial board. The Connector instead shows what LED on the board is selected. There are no Return or Source Pins listed since the LED is directly on the board, and there are no wires going to the light.

4. ELECTRONIC PINOUTS AND SCHEMATICS

4.1 SPIKE-3 CPU NODE 0

524-1002-00

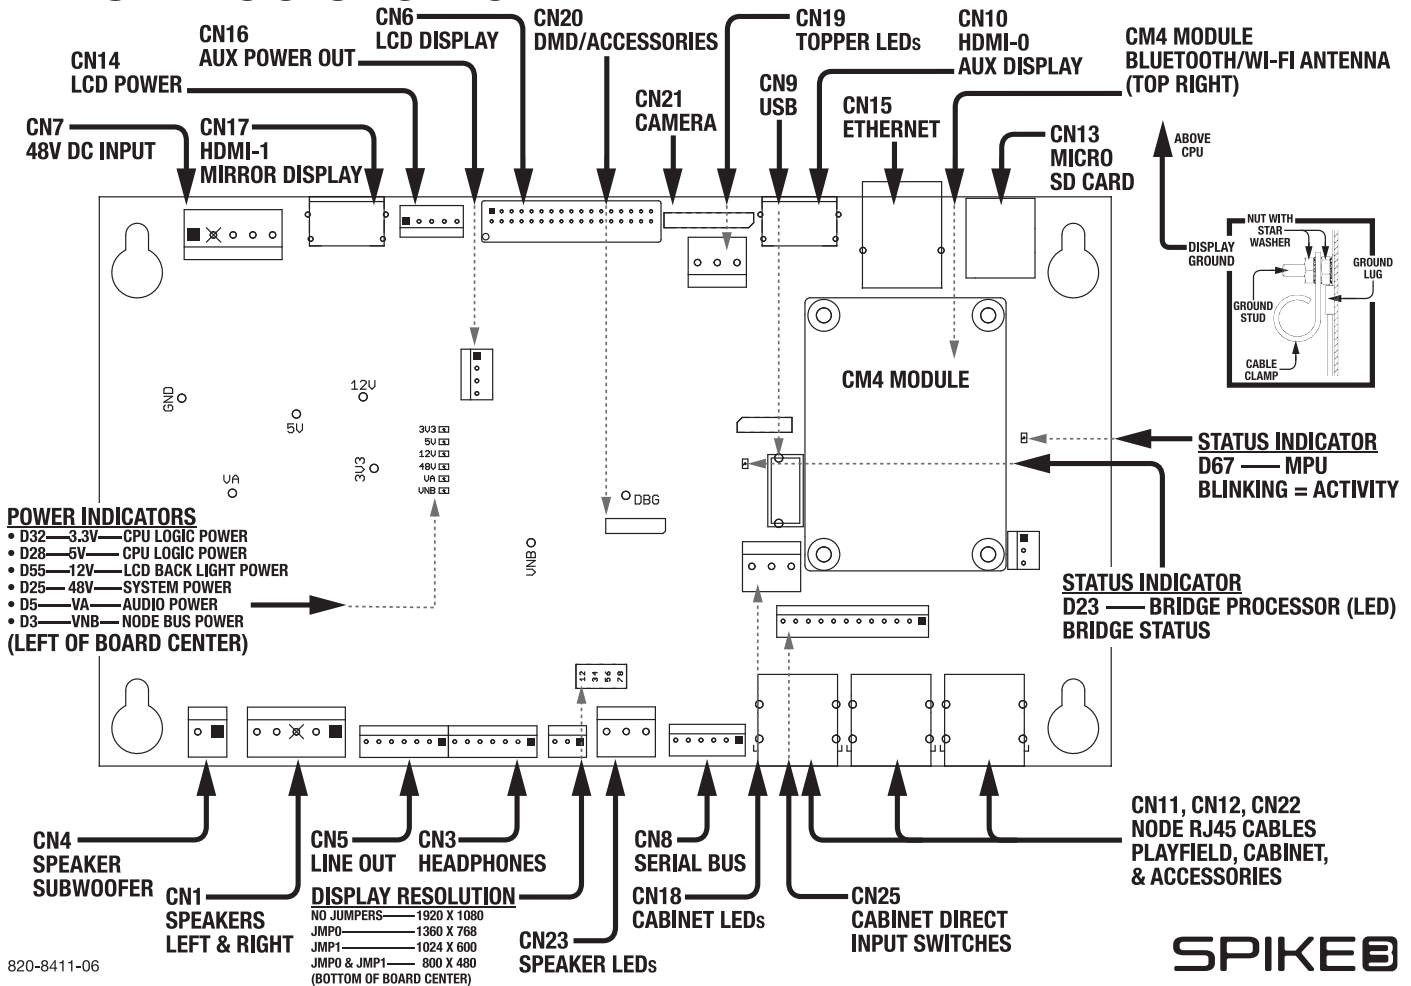

820-8411-06

Figure 4.1.1. SPIKE 3 CPU Node connector and status LED details.

DIRECT SWITCH MAPPING (CN25)

The coin-door diagnostic switches are connected directly to the CPU node via the Cabinet Node. Note that both the CPU and Cabinet nodes are required for diagnostic switch operation.

ID	Name	Conn.	Input Pin	Input Wire	GND Pin	Ground Wire	Location	Type	Address	Part Number
C9	Service Select	CN25	1	LGN-GRY	11	BLK-WHT	Coin Door	Push Button	0-SW-9	180-5192-04
C10	Service Plus	CN25	2	LGN-VIO	11	BLK-WHT	Coin Door	Push Button	0-SW-10	180-5192-02
C11	Service Minus	CN25	3	LGN-BLU	11	BLK-WHT	Coin Door	Push Button	0-SW-11	180-5192-02
C12	Service Back	CN25	4	LGN-BLK	11	BLK-WHT	Coin Door	Push Button	0-SW-12	180-5192-00

COMPONENTS

ID	Name
Micro SD Card (CN13)	For system SD card. Note: only to be removed if instructed to by Stern Service.

DISPLAY RESOLUTION JUMPER SETTINGS

JP1 Config	Setting
No Jumpers	1920 x 1080 (SPIKE-3: 18" LCD)
JMP0	1360 X 768 (SPIKE-2: 15.6" LCD)
JMP1	1024 X 600 (SPIKE-3: 10" Home Edition LCD)
JPMP 0 & 1	800 X 480 (SPIKE-2: 7.6" Home Edition LCD)

SPIKE-3 CPU NODE 0 CONTINUED CONNECTORS

ID	Connector Type	Description
CN1	5-Pin .156" Header	Backbox 2-channel amplified speaker out
CN3	7-Pin .100" Header	Headphone connector
CN4	2-Pin .156" Header	Cabinet 1-channel amplified speaker out
CN5	7-Pin .100" Header	Line In/Out
CN6	34-Pin 2.00mm Header	LCD display connector
CN7	5-Pin .156" Header	48V supply from main power supply
CN8	6-Pin .100" Header	SPI Serial
CN9	USB	USB connector - for software updates, audit dumps, and expansion modules
CN10	HDMI	HDMI Out
CN11	RJ45	SPIKE node bus - To Cabinet Node 1
CN12	RJ45	SPIKE node bus - To Topper accessory kit
CN13	SD CARD	MicroSD Card Connector
CN14	5-Pin .100" Header	LCD Backlight
CN15	ETHERNET	ETHERNET connector
CN16	4-Pin .100" Header	3.3v / 5v / 12v
CN17	HDMI	HDMI-1 Mirror Display
CN18	3-Pin .156" Header	Cabinet LEDs
CN19	3-Pin .156" Header	Topper LEDs
CN20	10-Pin 1.00mm Header	DMD / Accessories
CN21	SATA Header	Camera
CN22	RJ45	SPIKE node bus - To Playfield node board
CN23	3-Pin .156" Header	Speaker LEDs
CN25	12-Pin .100" Header	Dedicated switch inputs - service, volume switches

STATUS LEDs

LED ID	Name	Color	Description
D35 [48V]	48V Supply In	Red	ON: Main system power is connected. OFF: No 48V system power. Check power supply connections, cables, and fuses.
D32 [3.3V]	3.3V Logic	Red	ON: Logic power supply is good. OFF: Logic power supply bad, call tech support.
D20 [5V]	5V Logic	Red	ON: Logic power supply is good. OFF: Logic power supply bad, call tech support.
D55 [12V]	12V Backbox Illumination	Red	ON: Back box LED power good. OFF: Backbox LED power bad, call tech support.
D5 [VA]	30V Audio	Red	ON: Audio power supply is good. OFF: Audio power supply off, call tech support.
D3 [VNB]	9V Node Bus	Red	ON: Power for node bus good. OFF: Power to node bus not detected, call tech support.
D23	CPU Heartbeat	Red	Should blink once every ~1/2 second. OFF: Processor not running, call tech support.
D67 [ACT]	MPU Status	Red	MPU Activity LED. Flashes with use of MPU, typically flicker.

AUDIO PINOUTS

ID	Type	Pin	Description	Minimum Impedance	Max Power (RMS)	Wire Color
CN1	.156" 5-pin Header	1	Speaker Right Ground (-)	4 Ohms	-	BLK-WHT
		2	Speaker Right (+)	4 Ohms	19 W	RED-WHT
		3	n/c	-	-	
		4	Speaker Left Ground (-)	4 Ohms	-	BLK-RED
		5	Speaker Left (+)	4 Ohms	19 W	RED-BLK
CN3	.100" 7-pin Header	1	n/c	-	-	
		2	L-HP	16 Ohms	30 mW	
		3	R-HP	16 Ohms	30 mW	
		4	n/c	-	-	
		5	Headphone Detect	-	-	
		6	Headphone vol +	-	-	
		7	Headphone vol -	-	-	
CN4	.156" 2-pin Header	1	Woofer Ground (-)	6 Ohms	-	YEL-BLK
		2	Woofer Out (+)	6 Ohms	50 W	YEL-WHT
CN5	.100" 7-pin Header	1	n/c	-	-	
		2	n/c	-	-	
		3	n/c	-	-	
		4	n/c	-	-	
		5	L-OUT	10k Ohms	1.95 V	
		6	R-OUT	10k Ohms	1.95 V	
		7	n/c	-	-	

BACK BOX WIRING

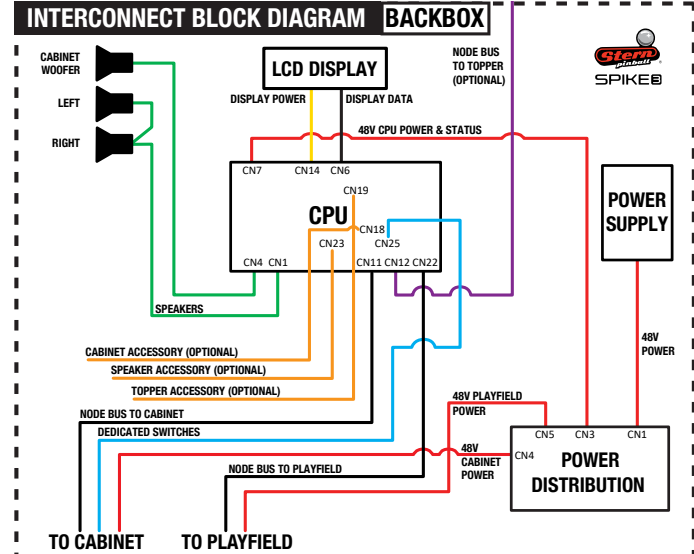


Figure 4.1.2. SPIKE 3 Back box wiring block diagram.

COIN DOOR SERVICE SWITCH WIRING


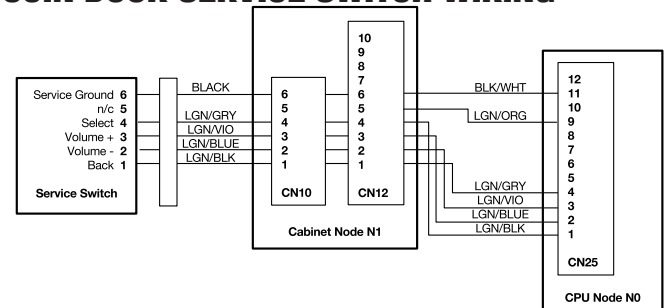


Figure 4.1.3. Service switch wiring. Note that the Cabinet Node must be present and CN10 and CN12 connected for the Coin Door Service Switches to function correctly.

4.2 CABINET NODE 1

520-6967-72


ID	Type	Pin	Description	Wire Color
CN1	.100" 8-Pin Header Universal Card Link	1	12V	-
		2	Coin 1	-
		3	Meter 1	-
		4	N/C	-
		5	Notch	-
		6	Coin Enable	-
		7	Ticket Enable	-
		8	Ground	-
CN2	.100" 5-Pin Header low ticket	1	Ground	-
		2	Ticket Low sw.	-
		3	Key	-
		4	Ticket Low	-
		5	5V Out	-
CN3	.100" 3-Pin Header Meter 1	1	Meter 12V (+)	RED
		2	Meter (-)	BLK
		3	N/C	-
CN4	.100" 3-Pin Header Meter 2	1	Meter 12V (+)	RED
		2	Meter (-)	BLK
		3	N/C	-
CN5	.100" 9-Pin Header	1	5V Out	YEL/WHT
		2	Coin LED Out	YEL
		3	Ground	BLK
		4	Slam Tilt In	LGN/RED
		5	Coin 5	PNK/GRN*
		6	Coin 4	PNK/YEL*
		7	Coin 3	PNK/ORN*
		8	Coin 2	PNK/RED*
		9	Coin 1	PNK/BRN*
CN6	.100" 14-Pin Header Cabinet Left	1	5V LED Power	RED
		2	Start 2 LED	-
		3	Start 1 LED	YEL-BRN
		4	Spare LED	-
		5	Ground	BLK-WHT
		6	Spare Left	-
		7	Tilt Input	WHT
		8	Door Open	-
		9	Start 2 Switch [Tournament]	-
		10	Start 1 Switch	-
		11	Flip Left 2 [Start Signal]	GRY
		12	Flip Left 1 [Start Ground]	BLK-WHT
		13	CTRL RTN	-
		14	N/C	-
CN7	.100" 12-Pin Header Cabinet Right	1	5V LED Power	RED
		2	Plunge 2 LED	RED-WHT
		3	Plunge 1 LED	GRN-WHT
		4	Spare LED 2	BLU-WHT
		5	Ground	-
		6	Spare Right In	-
		7	Plunge 2 Switch	-
		8	Plunge 1 Switch	-
		9	Flip Right 2 [Action Ground]	BLK-WHT
		10	Flip Right 1 [Action Signal]	TAN-WHT
		11	CTRL RTN	-
		12	N/C	-
CN8	.100" 10-Pin Header dual row. Electronic Coin Mech	1	Ground	-
		2	12V	-
		3	Coin 5	-
		4	Coin 6	-
		5	N/C	-
		6	Coin Enable/Inhibit (+)	-
		7	Coin 1	-
		8	Coin 2	-
		9	Coin 3	-
		10	Coin 4	-

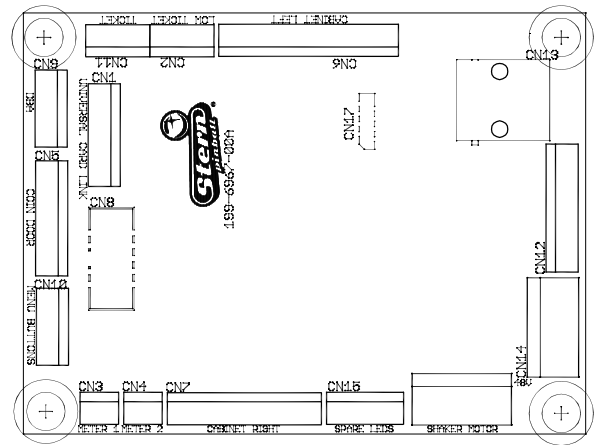

CN9	.100" 6-Pin Header Dollar Bill Acceptor	1	Coin Enable/DBA Inhibit (-)	-
		2	Coin Enable/DBA Inhibit (+)	-
		3	Key	Key
		4	DBA 12V	ORG
		5	Coin 6 / DBA Credit	-
		6	Ground	BLK-ORG
CN10	.100" 6-Pin Header Service Switch In	1	Service Back (To Coindoor)	LGN-BLK
		2	Service - / Down (To Coindoor)	LGN-BLU
		3	Service + / Up (To Coindoor)	LGN-VIO
		4	Service Select (To Coindoor)	LGN-GRY
		5	Key	Key
		6	Service Ground (To Coindoor)	BLK
CN11	.100" 5-Pin Header Ticket Dispenser	1	12V	RED
		2	N/C	-
		3	Ticket Dispenser Enable	WHT
		4	Ground	BLK
		5	Ticket Dispenser Notch	BLU
CN12	.100" 10-Pin Header CPU Direct Switches	1	Service Back (To CPU)	LGN-BLK
		2	Service Down (To CPU)	LGN-BLU
		3	Service Up (To CPU)	LGN-VIO
		4	Service Select (To CPU)	LGN-GRY
		5	Power Present	LGN-ORG
		6	Service Ground (To CPU)	BLK-WHT
		7	Flip Left 2 [Start Signal]	GRY
		8	Flip Left 1 [Start Ground]	BLK-BRN
		9	Flip Right 1 [Action Signal]	TAN-WHT
		10	Flip Right 2 [Action Ground]	BLK-BRN
CN14	.156" 5-Pin Header Power Input	1	Ground	BLK
		2	Key	Key
		3	N/C	-
		4	N/C	-
		5	48VDC In	GRY-YEL
CN15	.100" 6-Pin Header Spare LED's	1	5V LED Power	-
		2	Key	Key
		3	Spare LED 3	-
		4	Spare LED 4	-
		5	Spare LED 5	-
		6	Spare LED 6	-
CN16	.156" 5-Pin Header Shaker Motor	1	Shaker Motor (-)	BLU
		2	Shaker Motor (-)	-
		3	Shaker Motor (+)	-
		4	Key	Key
		5	Shaker Motor (+)	RED
			*Varies by country model	

4.3 LOWER PLAYFIELD 48V DRIVER PINOUT NODE 8

520-1070 / 520-1057-00

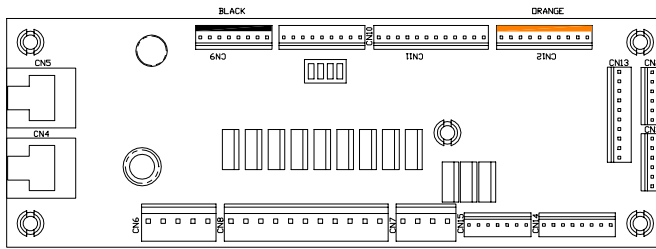


ID	Type	Pin	Description	Wire Color
SW1	Address DIP	-	Node 8 - OFF-OFF-OFF-OFF	-
CN4	RJ45	-	SPIKE Node Bus	Multi
CN5	RJ45	-	SPIKE Node Bus	Multi
CN6	.156" 5-Pin Header Node Power	1	Ground	BLK
		2	Key	Key
		3	N/C	-
		4	N/C	-
		5	48VDC In	GRY
CN7	.156" 4-Pin Header (White)	1	48V Driver Power	GRY ORG
		2	8-DR-8 Driver Return	-
		3	8-DR-6 Driver Return	-
		4	8-DR-7 Driver Return	YEL BLK
CN8	.156" 11-Pin Header (White)	1	48V Driver Power	GRY ORG
		2	48V Driver Power	GRY ORG
		3	48V Driver Power	GRY ORG
		4	48V Driver Power	GRY ORG
		5	8-DR-0 Driver Return	ORG GRN
		6	8-DR-5 Driver Return	ORG YEL
		7	8-DR-1 Driver Return	ORG GRY
		8	8-DR-8 Driver Return	-
		9	8-DR-4 Driver Return	ORG WHT
		10	8-DR-2 Driver Return	ORG VIO
		11	8-DR-3 Driver Return	-
CN9	.100" 8-Pin Header (Black)	1	V+	-
		2	V+	-
		3	8-SW-24 Switch	GRY RED
		4	8-SW-25 Switch	GRY BRN
		5	8-SW-26 Switch	-
		6	8-SW-27 Switch	VIO
		7	Ground	BLK GRN
		8	Ground	BLK VIO
CN10	.100" 9-Pin Header	1	V+	-
		2	8-SW-28 Switch	GRY WHT
		3	8-SW-29 Switch	GRY VIO
		4	8-SW-30 Switch	-
		5	8-SW-31 Switch	GRY GRN
		6	8-SW-16 Switch	GRY YEL
		7	Ground	BLK GRN
		8	Ground	BLK GRN
		9	Ground	BLK GRN

ID	Type	Pin	Description	Wire Color
CN11	.100" 12-Pin Header	1	V+	-
		2	8-SW-26 Switch	-
		3	8-SW-27 Switch	-
		4	8-SW-17 Switch	LGN RED
		5	8-SW-18 Switch	LGN ORG
		6	8-SW-19 Switch	LGN YEL
		7	8-SW-20 Switch	LGN BLU
		8	8-SW-21 Switch	LGN VIO
		9	8-SW-22 Switch	-
		10	8-SW-23 Switch	LGN WHT
		11	Ground	BLK ORG
		12	Ground	BLK ORG
CN12	.100" 10-Pin Header (Orange)	1	V+	RED
		2	8-SW-8 Switch	WHT BRN
		3	8-SW-9 Switch	WHT RED
		4	8-SW-10 Switch	WHT ORG
		5	8-SW-11 Switch	WHT YEL
		6	8-SW-12 Switch	-
		7	8-SW-13 Switch	WHT BLU
		8	8-SW-14 Switch	PNK BLK
		9	8-SW-15 Switch	-
		10	Ground	BLK RED
CN13	.100" 10-Pin Header	1	V+	-
		2	8-SW-0 Switch	-
		3	8-SW-1 Switch	-
		4	8-SW-2 Switch	-
		5	8-SW-3 Switch	-
		6	8-SW-4 Switch	PNK BLU
		7	8-SW-5 Switch	PNK VIO
		8	8-SW-6 Switch	PNK GRY
		9	8-SW-7 Switch	-
		10	Ground	BLK BRN
CN14	.100" 8-Pin Header	1	Ground	-
		2	8-LP-7 Driver Return	YEL VIO
		3	8-LP-6 Driver Return	-
		4	8-LP-5 Driver Return	-
		5	8-LP-4 Driver Return	-
		6	8-LP-3 Driver Return	BRN BLU
		7	LED V+	YEL
		8	LED V+	YEL
CN15	.100" 7-Pin Header	1	LED V+	YEL BLK
		2	LED V+	YEL RED
		3	LED V+	YEL BLU
		4	-	-
		5	8-LP-0 GI Return	WHT BLK
		6	8-LP-1 GI Return	RED BLK
		7	8-LP-2 GI Return	BLU BLK
CN2	.100" 6-Pin Header, Node Extension Bus	1	Ground	BLK
		2	DIN	VIO BLK
		3	DOU	VIO BRN
		4	SCK	VIO RED
		5	RCK	VIO ORG
		6	V+	RED
CN3	.100" 6-Pin Header, Node Extension Bus	1	Ground	BLK
		2	DIN	VIO BLK
		3	DOU	VIO BRN
		4	SCK	VIO RED
		5	RCK	VIO ORG
		6	V+	RED

4.4 MID UPPER PLAYFIELD 48V DRIVER PINOUT NODE 9

520-1070 / 520-1057-00

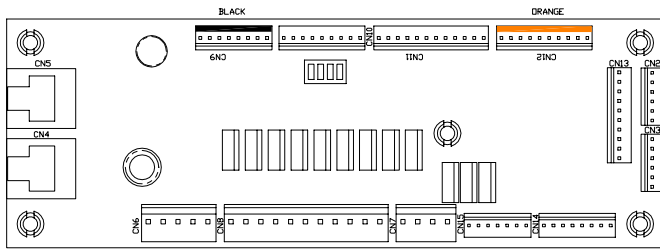


ID	Type	Pin	Description	Wire Color
SW1	Address DIP	-	Node 9 - OFF-OFF-ON-OFF	-
CN13	RJ45	-	SPIKE Node Bus	Mult
CN2	RJ45	-	SPIKE Node Bus	Multi
CN6	.156" 5-Pin Header Node Power	1	Ground	BLK
		2	Key	Key
		3	N/C	-
		4	N/C	-
		5	48VDC In	GRY
CN7	.156" 4-Pin Header (White)	1	48V Driver Power	GRY BRN
		2	9-DR-8 Driver Return	-
		3	9-DR-6 Driver Return	BRN ORG
		4	9-DR-7 Driver Return	YEL BLU
CN8	.156 11-Pin Header (White)	1	48V Driver Power	GRY BRN
		2	48V Driver Power	GRY BRN
		3	48V Driver Power	-
		4	48V Driver Power	-
		5	9-DR-0 Driver Return	-
		6	9-DR-5 Driver Return	-
		7	9-DR-1 Driver Return	-
		8	9-DR-8 Driver Return	-
		9	9-DR-4 Driver Return	ORG BLU
		10	9-DR-2 Driver Return	ORG-BLK
		11	9-DR-3 Driver Return	-
CN9	.100" 8-Pin Header (Black)	1	V+	-
		2	V+	-
		3	9-SW-24 Switch	-
		4	9-SW-25 Switch	-
		5	9-SW-26 Switch	-
		6	9-SW-27 Switch	-
		7	Ground	-
		8	Ground	-
CN10	.100" 9-Pin Header	1	V+	RED
		2	9-SW-28 Switch	GRY BLK
		3	9-SW-29 Switch	GRY BRN
		4	9-SW-30 Switch	GRY RED
		5	9-SW-31 Switch	GRY ORG
		6	9-SW-16 Switch	GRY YEL
		7	Ground	BLK BLU
		8	Ground	BLK BLU
		9	Ground	BLK BLU

ID	Type	Pin	Description	Wire Color
CN11	.100" 12-Pin Header	1	V+	RED
		2	9-SW-26 Switch	TAN BLK
		3	9-SW-27 Switch	TAN RED
		4	9-SW-17 Switch	TAN ORG
		5	9-SW-18 Switch	TAN YEL
		6	9-SW-19 Switch	TAN GRN
		7	9-SW-20 Switch	-
		8	9-SW-21 Switch	TAN VIO
		9	9-SW-22 Switch	-
		10	9-SW-23 Switch	-
		11	Ground	BLK GRY
		12	Ground	BLK GRY
CN12	.100" 10-Pin Header (Orange)	1	V+	RED
		2	9-SW-8 Switch	WHT BRN
		3	9-SW-9 Switch	WHT RED
		4	9-SW-10 Switch	WHT ORG
		5	9-SW-11 Switch	WHT YEL
		6	9-SW-12 Switch	WHT GRN
		7	9-SW-13 Switch	WHT BLU
		8	9-SW-14 Switch	-
		9	9-SW-15 Switch	-
		10	Ground	BLK WHT
CN13	.100" 10-Pin Header	1	V+	-
		2	9-SW-0 Switch	-
		3	9-SW-1 Switch	-
		4	9-SW-2 Switch	-
		5	9-SW-3 Switch	-
		6	9-SW-4 Switch	-
		7	9-SW-5 Switch	-
		8	9-SW-6 Switch	-
		9	9-SW-7 Switch	-
		10	Ground	-
CN14	.100" 8-Pin Header	1	Ground	-
		2	9-LP-7 Driver Return	-
		3	9-LP-6 Driver Return	-
		4	9-LP-5 Driver Return	-
		5	9-LP-4 Driver Return	-
		6	9-LP-3 Driver Return	-
		7	LED V+	-
		8	LED V+	-
CN15	.100" 7-Pin Header	1	LED V+	YEL BLK
		2	LED V+	YEL RED
		3	LED V+	-
		4	-	-
		5	9-LP-0 GI Return	WHT BLK
		6	9-LP-1 GI Return	RED BLK
		7	9-LP-2 GI Return	-
CN2	.100" 6-Pin Header, Node Extension Bus	1	Ground	BLK
		2	DIN	VIO BLK
		3	DOU	VIO BRN
		4	SCK	VIO RED
		5	RCK	VIO ORG
		6	V+	RED
CN3	.100" 6-Pin Header, Node Extension Bus	1	Ground	-
		2	DIN	-
		3	DOU	-
		4	SCK	-
		5	RCK	-
		6	V+	-

4.5 1R 5W BC LED BOARD 8B


520-9889-00

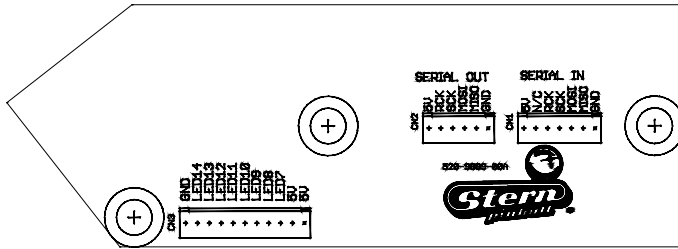

ID	Type	Pin	Description	Wire Color	
CN1	.100" 7-Pin Header	1	Ground	BLK	
		2	MISO Output Data	VIO-BLK	
		3	MOSI Input Data	VIO-BRN	
		4	SCK Serial Clock	VIO-RED	
		5	RCK Register Clock	VIO-ORG	
		6	NC	-	
		7	+5 VDC IN	RED	
CN2	.100" 6-Pin Header	1	Ground	BLK	
		2	MISO Output Data	VIO-BLK	
		3	MOSI Input Data	VIO-BRN	
		4	SCK Serial Clock	VIO-RED	
		5	RCK Register Clock	VIO-ORG	
		6	+5 VDC	RED	
CN3	.100" 11-Pin Header	1	+5 VDC	RED	To 8b1
		2	+5 VDC	RED	
		3	LED 7	BRN-RED	
		4	LED 8	BRN-ORG	To 8b1
		5	LED 9	BRN-YEL	To 8b1
		6	LED 10	BRN-GRN	To 8b1
		7	LED 11	YEL-ORG	
		8	LED 12	YEL-RED	
		9	LED 13	YEL-BRN	
		10	LED 14	BRN-BLU	
		11	GND	-	

4.6 3W ML LED BOARD 8B1


520-9905-00

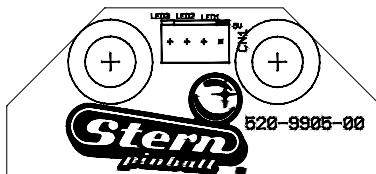


ID	Type	Pin	Description	Wire Color
CN1	.100" 4-Pin Header	1	+5 VDC	RED
		2	LED 1	BRN-GRN
		3	LED 2	BRN-YEL
		4	LED 3	BRN-ORG

4.7 2R 12W LC LED BOARD 8C


520-9890-00

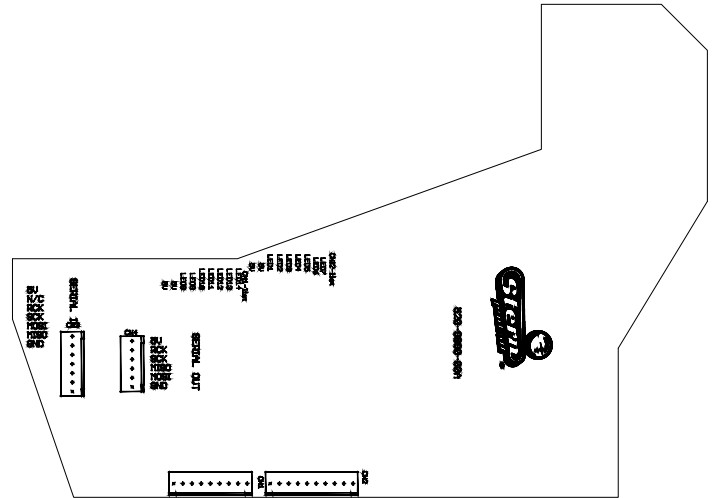


ID	Type	Pin	Description	Wire Color
CN1	.100" 9-Pin Header	1	+5 VDC	RED
		2	+5 VDC	RED
		3	LED 1	RED-BRN
		4	LED 2	GRN-BRN
		5	LED 3	BLU-BRN
		6	LED 4	YEL-GRN
		7	LED 5	YEL-BLU
		8	LED 6	YEL-VIO
		9	LED 7	YEL-WHT
CN2	.100" 10-Pin Header	1	+5 VDC	RED
		2	+5 VDC	RED
		3	LED 8	ORG-BRN
		4	LED 9	RED-YEL
		5	LED 10	GRN-YEL
		6	LED 11	BLU-YEL
		7	LED 12	ORG-RED
		8	LED 13	ORG-YEL
		9	LED 14	ORG-GRN
		10	GND	N/C
CN3	.100" 7-Pin Header	1	Ground	BLK
		2	MISO Output Data	VIO-BLK
		3	MOSI Input Data	VIO-BRN
		4	SCK Serial Clock	VIO-RED
		5	RCK Register Clock	VIO-ORG
		6	N/C	-
CN4	.100" 6-Pin Header	7	+5 VDC IN	RED
		1	Ground	BLK
		2	MISO Output Data	VIO-BLK
		3	MOSI Input Data	VIO-BRN
		4	SCK Serial Clock	VIO-RED
		5	RCK Register Clock	VIO-ORG
		6	+5 VDC	RED

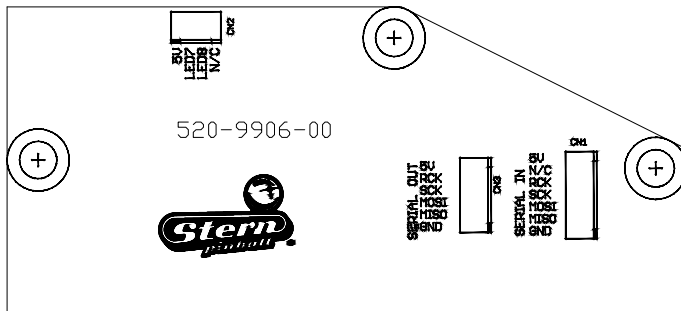4.8 3R 5W UL LED BOARD 8D**520-9906-00**


ID	Type	Pin	Description	Wire Color
CN1	.100" 7-Pin Header	1	Ground	BLK
		2	MISO Output Data	VIO-BLK
		3	MOSI Input Data	VIO-BRN
		4	SCK Serial Clock	VIO-RED
		5	RCK Register Clock	VIO-ORG
		6	NC	-
		7	+5 VDC IN	RED
CN2	.100" 4-Pin Header	1	+5 V	RED
		2	LED 7	ORG-VIO
		3	LED 8	-
		4	N/C	-
CN4	.100" 6-Pin Header	1	Ground	-
		2	MISO Output Data	-
		3	MOSI Input Data	-
		4	SCK Serial Clock	-
		5	RCK Register Clock	-
		6	+5 VDC	-

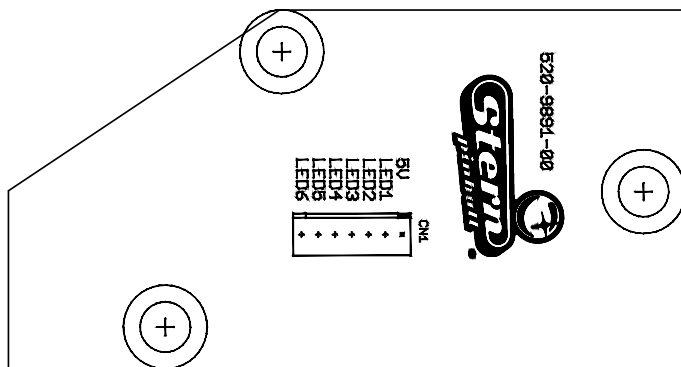4.9 6W LC LED BOARD 9A1**520-9891-00**


ID	Type	Pin	Description	Wire Color
CN1	.100" 7-Pin Header	1	+5 VDC	RED
		2	LED 1	GRN-BRN
		3	LED 2	GRN-RED
		4	LED 3	GRN-ORG
		5	LED 4	GRN-VIO
		6	LED 5	GRN-BLU
		7	LED 6	GRN-YEL

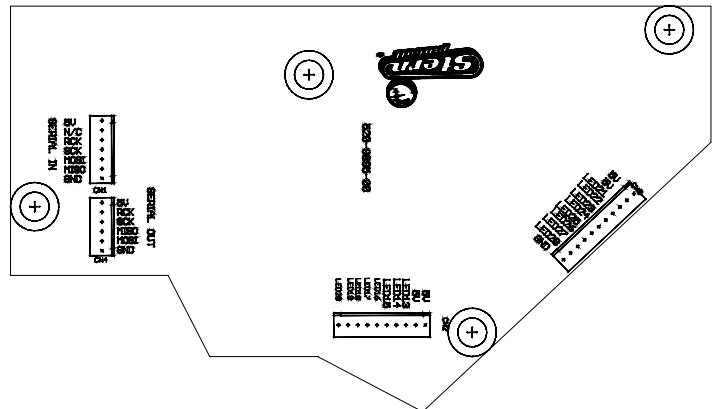4.10 6R 6W MC LED BOARD 9A**520-9895-00**


ID	Type	Pin	Description	Wire Color	
CN1	.100" 7-Pin Header	1	Ground	BLK	
		2	MISO Output Data	VIO-BLK	
		3	MOSI Input Data	VIO-BRN	
		4	SCK Serial Clock	VIO-RED	
		5	RCK Register Clock	VIO-ORG	
		6	N/C	-	
		7	+5 VDC IN	RED	
CN2	.100" 10-Pin Header	1	+5 VDC	RED	To 9a1
		2	+5 VDC	RED	
		3	LED 13	GRN-BRN	To 9a1
		4	LED 14	GRN-RED	To 9a1
		5	LED 15	GRN-ORG	To 9a1
		6	LED 16	GRN-YEL	To 9a1
		7	LED 17	GRN-BLU	To 9a1
		8	LED 18	GRN-VIO	To 9a1
		9	LED 19	ORG-VIO	
		10	LED 20	ORG-WHT	
CN3	.100" 11-Pin Header	1	+5 VDC	RED	To 9a2
		2	+5 VDC	RED	To 9a3
		3	LED 21	YEL-RED	To 9a2
		4	LED 22	YEL-GRN	To 9a2
		5	LED 23	YEL-WHT	To 9a2
		6	LED 24	BLU-RED	To 9a3
		7	LED 25	BLU-ORG	To 9a3
		8	LED 26	BLU-YEL	To 9a3
		9	LED 27	ORG-BRN	
		10	LED 28	ORG-RED	
		11	GND	-	
CN4	.100" 6-Pin Header	1	Ground	BLK	
		2	MISO Output Data	VIO-BLK	
		3	MOSI Input Data	VIO-BRN	
		4	SCK Serial Clock	VIO-RED	
		5	RCK Register Clock	VIO-ORG	
		6	+5 VDC	RED	

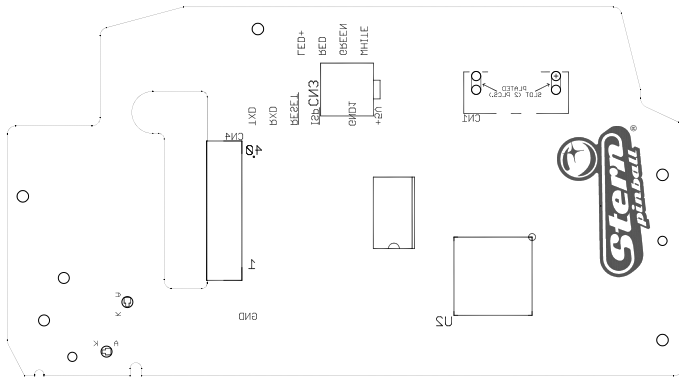4.11 PIP BOY LED BOARD 9A2**515-3269-00**


ID	Type	Pin	Description	Wire Color
CN1	HDMI	-	SPIKE 3 HDMI	Multi
CN3	Mini-Fit Jr® 4-Pin Header	1	+5 VDC	RED
		2	RED	YEL RED
		3	GREEN	YEL GRN
		4	WHITE	YEL WHT

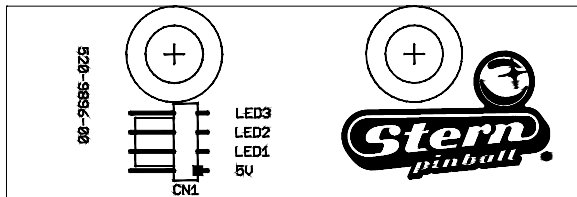4.12 3W UC LED BOARD 9A3**520-9896-00**

ID	Type	Pin	Description	Wire Color
CN1	.100" 4-Pin Header	1	+5 VDC	RED
		2	LED 1	BLU-RED
		3	LED 2	BLU-ORG
		4	LED 3	BLU-YEL

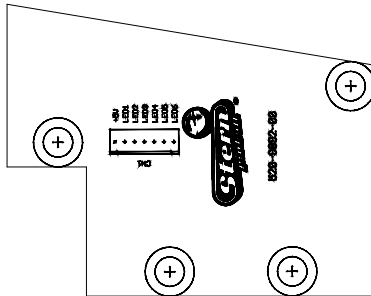4.13 6W RC LED BOARD 9B1**520-9892-00**

ID	Type	Pin	Description	Wire Color
CN1	.100" 7-Pin Header	1	+5 VDC	RED
		2	LED 1	BLU-ORG
		3	LED2	BLU-VIO
		4	LED 3	BLU-GRN
		5	LED 4	BLU-YEL
		6	LED 5	BLU-RED
		7	LED 6	BLU-BRN

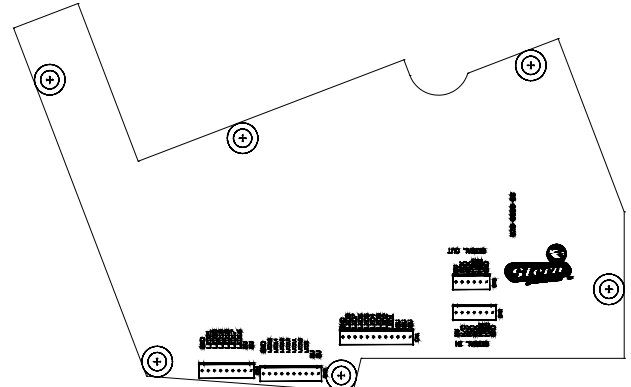
4.14 3R 17W 1F LED BOARD 9B**520-9893-00**

ID	Type	Pin	Description	Wire Color	
CN1	.100" 12-Pin Header	1	+5 VDC	RED	To 9b1
		2	+5 VDC	-	
		3	+5 VDC	-	
		4	LED 1	BLU-BRN	To 9b1
		5	LED 2	BLU-RED	To 9b1
		6	LED 3	BLU-ORG	To 9b1
		7	LED 4	BLU-YEL	To 9b1
		8	LED 5	BLU-GRN	To 9b1
		9	LED 6	BLU-VIO	To 9b1
		10	LED 7	ORG-YEL	
		11	LED 8	ORG-BLU	
		12	GND	-	
CN2	.100" 7-Pin Header	1	Ground	BLK	
		2	MISO Output Data	VIO-BLK	
		3	MOSI Input Data	VIO-BRN	
		4	SCK Serial Clock	VIO-RED	
		5	RCK Register Clock	VIO-ORG	
		6	N/C	-	
		7	+5 VDC IN	RED	
CN3	.100" 10-Pin Header	1	+5 VDC	RED	
		2	+5 VDC	-	
		3	LED 9	RED-WHT	
		4	LED 10	GRN-WHT	
		5	LED 11	BLU-WHT	
		6	LED 12	BRN-WHT	
		7	LED 13	-	
		8	LED 14	-	
		9	LED 15	-	
		10	GND	-	
CN4	.100" 9-Pin Header	1	+5 VDC	-	
		2	+5 VDC	-	
		3	LED 16	-	
		4	LED 17	-	
		5	LED 18	-	
		6	LED 19	-	
		7	LED 20	-	
		8	LED 21	-	
		9	GND	-	
CN5	.100" 6-Pin Header	1	Ground	-	
		2	MISO Output Data	-	
		3	MOSI Input Data	-	
		4	SCK Serial Clock	-	
		5	RCK Register Clock	-	
		6	+5 VDC	-	

4.15 POWER DISTRIBUTION BOARD


520-1092-00

ID	Type	Pin	Description	Wire Color
CN1	.156 in 7-Pin Housing Plug: 045-5259-07 Pin: 055-5331-00 Key: 060-5013-00	1	+48 VDC IN	GRY
		2	+48 VDC IN	GRY
		3	+48 VDC IN	GRY
		4	NC	KEY
		5	Ground	BLK
		6	Ground	BLK
		7	Ground	BLK
CN2	.093 in 3-Pos Plug Plug: 045-5003-03 Pin: 055-5013-09	1	Line In (100-240 VAC)	BLK
		2	Neutral	WHT
		3	Earth Ground	GRN
CN3	0.084 in 4-Pos Plug Plug: 045-5200-04 Pin: 055-5033-08	1	+48 VDC to CPU Node	GRY
		2	Door Interlock Switch Status	GRY RED
		3	Line Voltage Status	VIO
		4	Ground	BLK
CN4	0.084 in 6-Pos Plug Plug: 045-5200-06 Pin: 055-5033-08	1	Door Interlock Switch +48V	WHT GRY
		2	Door Interlock Switch +48V	-
		3	Switched 48V Out (to Node 1)	GRY YEL
		4	Door Interlock Return Ground	BLK WHT
		5	Smart LED Ground	BLK
		6	Ground (to Node 1)	BLK
CN5	0.084 in 12-Pos Plug Plug: 045-5200-12 Pin: 055-5033-08	1	Switched 48V Node Power	GRY
		2	Switched 48V Node Power	GRY
		3	Switched 48V Node Power	GRY
		4	Switched 48V Node Power	-
		5	Switched 48V Node Power	-
		6	Switched 48V Node Power	-
		7	Node Ground	-
		8	Node Ground	-
		9	Node Ground	-
		10	Node Ground	BLK
		11	Node Ground	BLK
		12	Node Ground	BLK
CN6	.156 in 3-Pos Plug: 045-5259-03 Pin: 055-5331-00 (18awg)	1	Ground	-
		2	Ground	-
		3	+12VDC	-
CN7	.084 2-Pos Plug: 045-5200-02 Pin: 055-5033-08	1	+48 VDC to Topper Node	-
		2	Ground	-
CN9	.100 in 4-Pos	1	Start	GRY
		2	Action	TAN-WHT
		3	Ground	BLK-BRN
		4	Ground	BLK-BRN

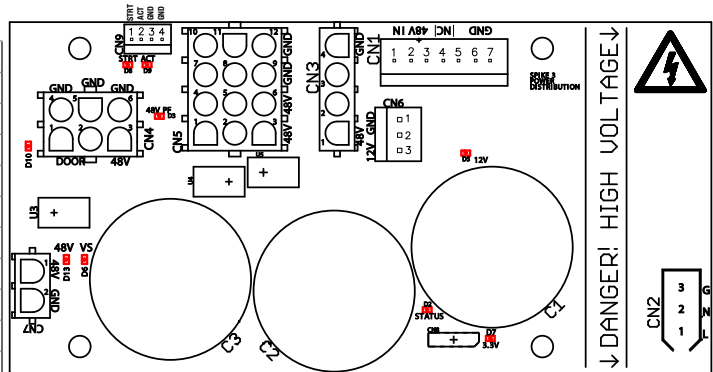

STATUS LEDS

LED ID	Name	Color	Description
D13	48V	Red	48V from the main power supply
D6	VS	Red	Power to the bulk caps, indicates if the caps are charged
D3	48V PF	Red	Power to playfield/cabinet node
D5	12V	Red	12V power supply (for topper), shuts off when DOOR is open
D7	3.3V	Red	3.3V logic supply
D10	DOOR	Red	Cabinet door switch is closed
D8	STRT	Red	Start switch is closed
D9	ACT	Red	Action switch is closed
D2	STATUS	Red	MCU status
			Boot Mode - fast blink (4Hz), 75% duty cycle
			Runtime Mode - slow blink (1Hz), 75% duty cycle
			Blink several times, long pause - error code(s)

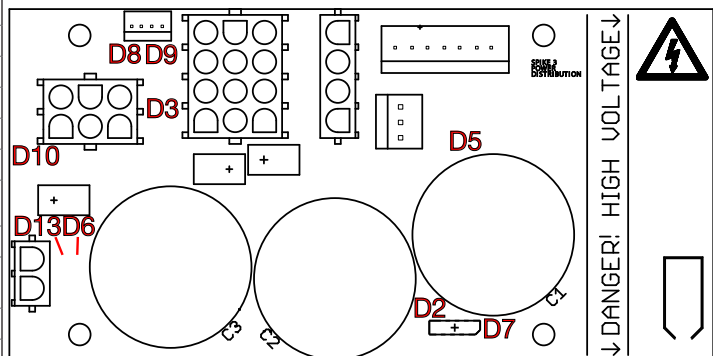

4.16 TROUGH SERIAL OPTO RECEIVER 8A


520-8516-00



ID	Type	Pin	Description	Wire Color
CN1	.100" 7-Pin Header	1	Ground	BLK
		2	MISO Output Data	VIO-BLK
		3	MOSI Input Data	VIO-BRN
		4	SCK Serial Clock	VIO-RED
		5	RCK Register Clock	VIO-ORG
		6	N/C	-
		7	+5 VDC IN	RED
CN2	.100" 3-Pin Header	1	Ground	BLK
		2	N/C	-
		3	+5 VDC IN	RED
CN3	.100" 6-Pin Header	1	Ground	-
		2	MISO Output Data	-
		3	MOSI Input Data	-
		4	SCK Serial Clock	-
		5	RCK Register Clock	-
		6	V+	-

4.17 POWER SUPPLY 48V/600W


011-5011-00 (DELTA)

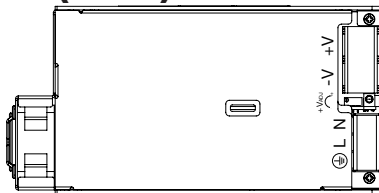

ID	Type	Pin	Description	Wire Color
CN1	Screw Terminal	+V	+48 V System Power	GRY
		-V	DC Ground	BLK
CN2	Potentiometer	+V	V Adjustment	N/A
		ADJ		
CN3	Screw Terminal	N	AC Neutral In	WHT
		L	AC Line In	BLK
		⊕	Earth Ground In	GRN

4.18 POWER SUPPLY 48V/600W


011-5004-00 (MEANWELL)

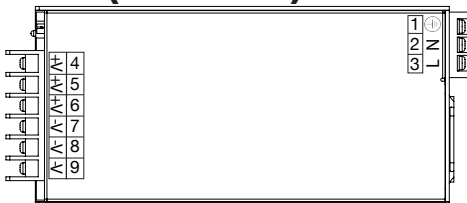

ID	Type	Pin	Description	Wire Color
CN1	Screw Terminal	1	Earth Ground In	GRN
		2	AC Neutral In	WHT
		3	AC Line In	BLK
CN2	Screw Terminal	4	+48 V System Power	GRY
		5	+48 V System Power	GRY
		6	+48 V System Power	GRY
		7	DC Ground	BLK
		8	DC Ground	BLK
		9	DC Ground	BLK

4.19 TROUGH SERIAL OPTO TRANSMITTER

520-5344-00



ID	Type	Pin	Description	Wire Color
CN1	.100" 3-Pin Header	1	Ground	BLK
		2	N/C	-
		3	+5 VDC IN	RED


4.20 POWER PLUG WIRING

CAUTION

TO MAINTAIN SAFETY, GROUND WIRE FROM LINE FILTER IS TO BE MOUNTED FIRST ON GROUNDING STUD AND SECURED WITH NUT. ALL OTHER GROUNDS MAY THEN BE ATTACHED TO GROUNDING STUD.

REPLACE ALL FUSES WITH CORRECT CURRENT RATINGS!

NORTH AMERICA / INTERNATIONAL

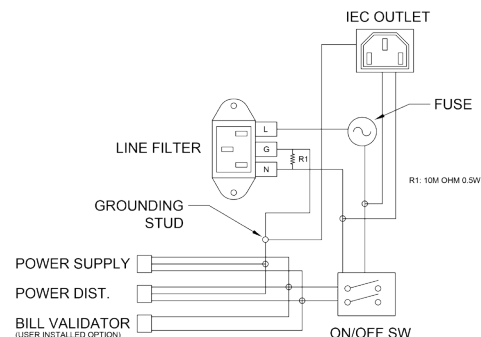

LINE CORDS

Part Number	Description
034-6012-00	Line Cord, 3m, 5-15P USA
034-6012-01	Line Cord, 3m, CEE77P EUROPE
034-6012-02	Line Cord, 3m, BS1363P United Kingdom
034-6012-03	Line Cord, 3m, AS-NZS4417P Australia
034-6012-04	Line Cord, 3m, CEI23-16P Italy
034-6012-05	Line Cord, 3m, SEV1011P Switzerland
034-6012-06	Line Cord, 3m, JIS8303P Japan
034-6012-07	Line Cord, 3m, SI32P Israel
034-6012-08	Line Cord, 3m, BS546P S Africa, India
034-6012-09	Line Cord, 3m, IS6538P S. India

LINE FUSES

Line Voltage (Region)	Fuse Current	Type	Part Number
120/250V (North America / International)	8 A	Slow Blow 5 x 20mm	200-5003-08

5. PARTS REFERENCE

5.1 PLAYFIELD RUBBER PARTS

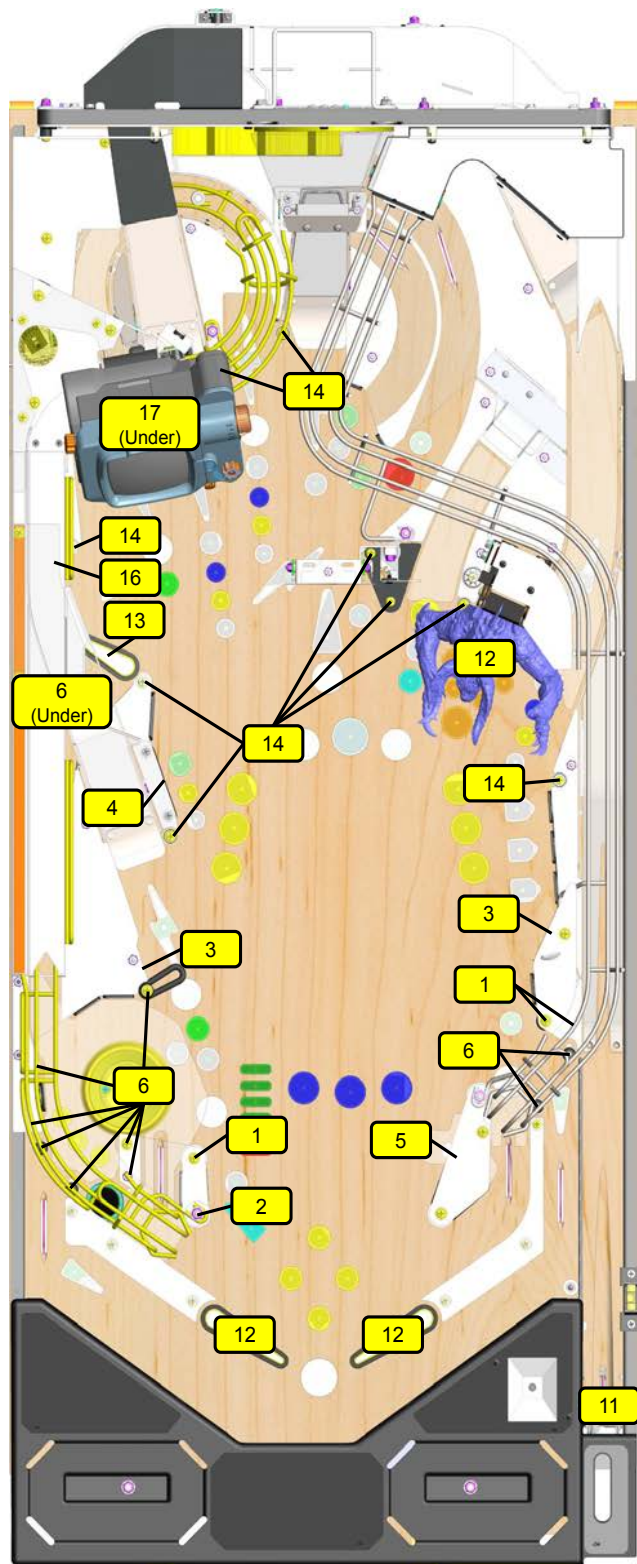


Figure 5.1.1. Rubber o-ring part locations

RUBBER O-RINGS

ID	Qty	Size (ID)	Size (OD)	Durometer	Color	Part Number
1	3	3/16"		50	Black	545-5348-01
2	1	5/16"		50	Black	545-5348-02
3	2	3/4"		50	Black	545-5348-04
4	1	1"		50	Black	545-5348-05
5	1	2 "		50	Black	545-5348-08
6	10		7/16"	50	Black	545-5348-17

Figure 5.1.2. Rubber o-ring part numbers and usage. ID: Inner Diameter, OD: Outer Diameter, Durometer: Higher number is firmer, less bounce, and more durable.

ID	Qty	Description	Color	Part Number
11	1	Plunger Tip	Black	545-5276-00
12	3	Flipper Rubber	Black	545-5277-00
13	1	Small Flipper Rubber	Black	545-5207-00
14	9	Post Sleeve	Black	545-5308-00
15	2	Bumper Pad (Sub assemblies)	Black	545-5105-00
16	5	Bumper Pad (Flippers)	Black	545-5428-00
17	1	Guide Bumper Pad	Black	626-5057-01

Figure 5.1.3. Other rubber part numbers and usage

5.2 RUBBER SIZE CHART


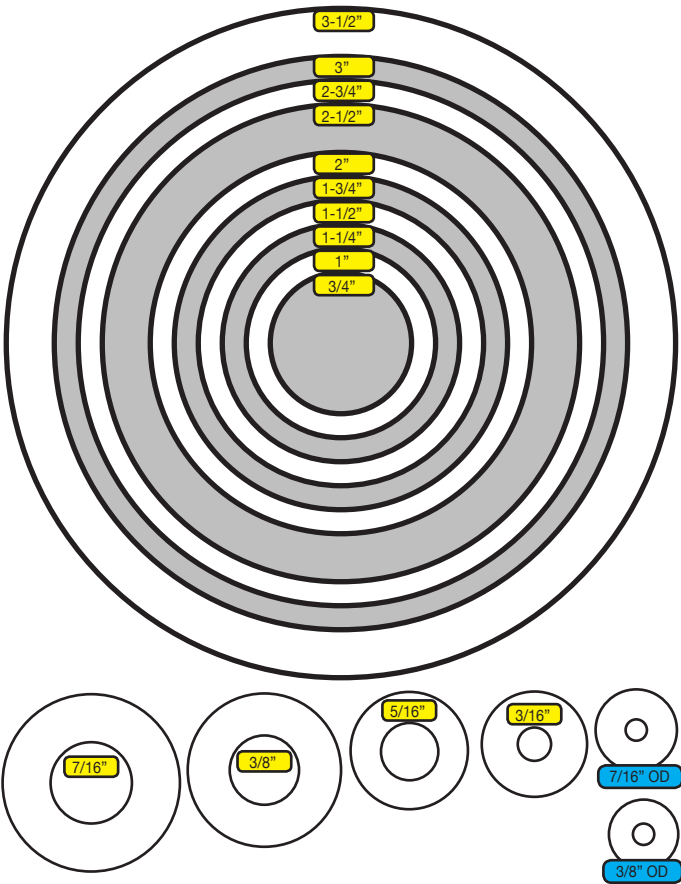


Figure 5.2.1. Rubber ring inner diameter sizing tool. Hold ring up to chart and read largest size on inside of ring. Dimensions are Inner Diameter (ID) unless otherwise noted as Outer Diameter (OD).


5.3 PLAYFIELD ASSEMBLIES, TOP

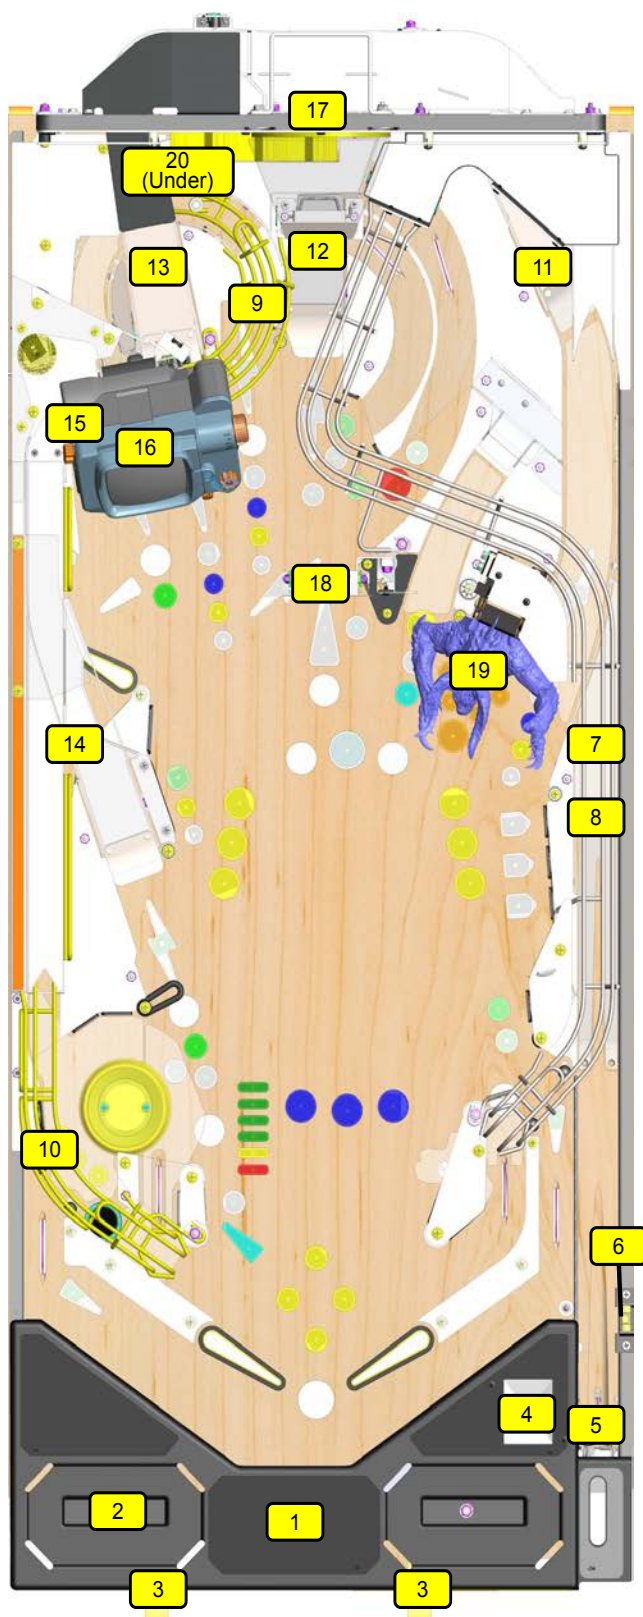

ID	Part Number	Description	Qty
1	500-2440-99	Bottom Arch Assembly	1
2	755-51AF-XX	Instructions Card	1
3	535-8385-00	Welded Hanger Bracket	2
4	524-1001-00	QR Reader	1
5	260-5000-00	Pinballs	6
6	500-6815-00	Bubble Level Assembly	1
7	535-3376-06	Shooter Lane Ramp (Ball Guide -06)	1
8	515-3035-00	Wire Ramp, Right	1
9	515-3033-00	Wire Ramp, Upper Left	1
10	515-3034-00	Wire Ramp, Lower Left	1
11	500-9867-01	Ramp Assembly, Right	1
12	500-9867-12	Ramp Assembly, Jump	1
-	520-9896-00	LED Serial Board - 3W UC (9a3)	1
13	500-9867-03	Ramp Assembly, Center	1
14	500-9867-14	Ramp Assembly, Lower Left	1
15	500-9867-05	Ramp Assembly, Upper Left	1
16	511-3690-00	Pip Boy With Bracket Assembly	1
17	500-9864-01	Backpanel Assembly	1
-	242-5005-00	#8 Washer (Attaches Backpanel to Center Ramp)	1
-	240-5102-00	8-32 Nylon Lock Nut (Attaches Backpanel to Center Ramp)	1
-	535-2288-00	Backpanel Handle	1
18	511-3668-12	Bottle Cap Spinner Top Assembly	1
-	240-5005-00	6-32 Nylon Stop Nut (Attaches BCS Top to Bottom)	2
19	500-7437-30	Passive Deathclaw Assembly	1
20	535-3376-10	Outer Orbit Lane Ramp (Ball Guide -10)	1

Figure 5.3.1. Major playfield assemblies, Top locations.

5.4 PLAYFIELD ASSEMBLIES, BOTTOM

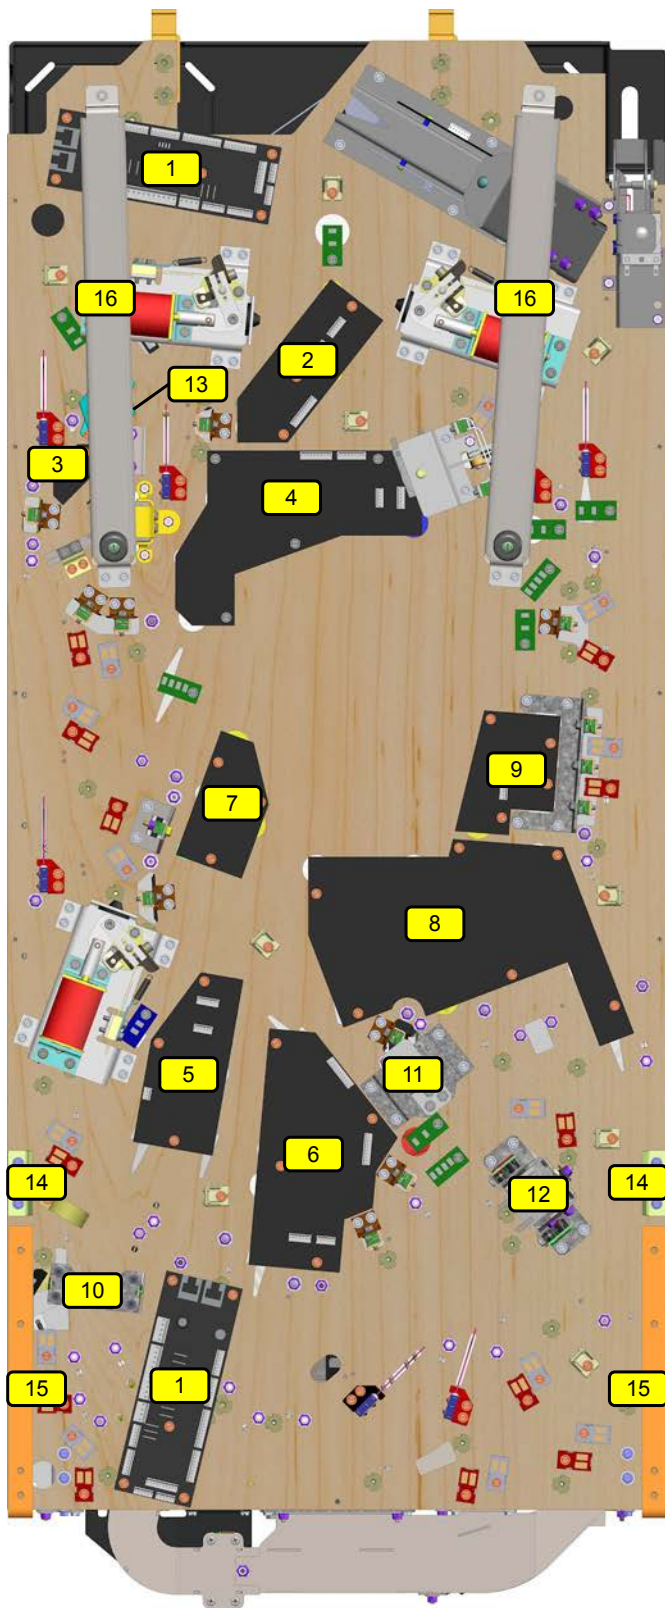

ID	Part Number	Description	Qty
1	520-1070-00 520-1057-00	Core Node Driver Board (8, 9)	2
2	520-9889-00	LED Serial Board - 1R 5W BC (8b)	1
3	520-9905-00	LED Serial Board - 3W ML (8b1)	1
4	520-9890-00	LED Serial Board - 2R 12W LC (8c)	1
5	520-9906-00	LED Serial Board - 3R 5W UL (8d)	1
6	520-9895-00	LED Serial Board - 6R 6W MC (9a)	1
7	520-9891-00	LED Serial Board - 6W LC (9a1)	1
8	520-9893-00	LED Serial Board - 3R 17W 1F (9b)	1
9	520-9892-00	LED Serial Board - 6W RC (9b1)	1
10	511-4912-00	2.31 Tall Optos Assembly	1
11	511-3668-01	Bottle Cap Spinner Bottom Assembly	1
12	500-9868-00	Subway VUK Opto Assembly	1
-	535-3376-27	Ball Guide -27	1
-	511-3287-15	Ball Guide -15 Assembly	1
13	511-3268-01	Rollover Button Assembly	1
-	545-0895-00	Nut, Rollover, 2-Flanges	1
-	545-0895-02	Hex Nut, Rollover	1
14	500-5329-03	Pivot Bracket Assembly	2
15	535-5988-01	Edge Slide Bracket	2
16	511-7621-00	Support Rail Assembly	2

Figure 5.4.1. Major playfield assemblies, Bottom locations.

5.5 BACKBOX PARTS

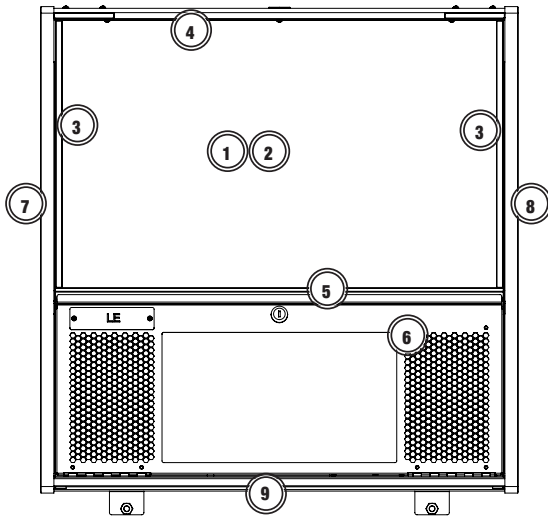


Figure 5.5.1. Backbox external assemblies and components

EXTERNAL

ID	Part Number	Description	Qty
1	660-5052-00	Backglass	1
2	830-8427-AD	Translite Art	1
3	545-5018-17	Plastic Extrusion 15-.450"	2
4	545-5018-15	Glass Channel 26"	1
5	545-6313-01	Glass Lift Channel 26"	1
6	500-9404-11	LCD Speaker Panel Assembly	1
7	820-81AD-01	Left Backbox Decal	1
8	820-81AD-02	Right Backbox Decal	1
9	515-8868-00	Backbox Bottom Bracket	1

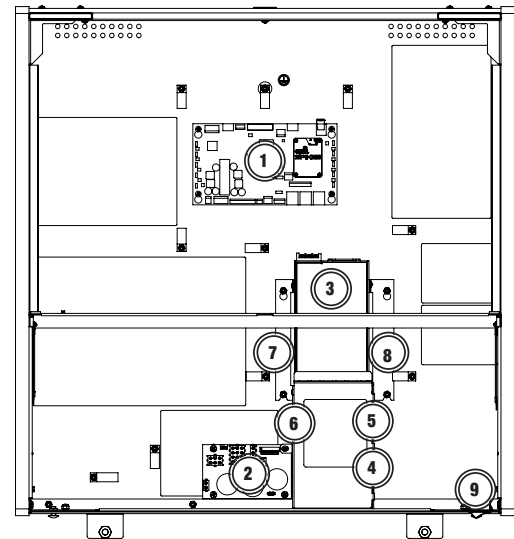



Figure 5.5.2. Backbox internal assemblies and components

INTERNAL

ID	Part Number	Description	Qty
1	524-1002-00	CPU Node Board	1
2	520-1092-00	Power Distribution Board	1
3	011-5004-00	Power Supply 48V/600W (Meanwell)	1
	011-5011-00	Power Supply 48V/600W (Delta)	1
4	205-5004-00	Fuse Holder - Screw In	1
	200-5003-08	8A SB Fuse	1
5	150-5020-00	Utility Outlet (USA)	1
6	535-1130-00	Cover AC, 600W (Meanwell)	1
	535-3366-00	Cover AC, 600W (Delta)	1
7	535-0879-00	P. S. Bracket, 600W Left (Meanwell)	1
*	535-0094-00	P. S. Bracket, 600W (Delta only uses 1)	1
8	535-3370-00	P. S. Bracket, 600W Right (Meanwell)	1
9	180-5001-03	Power Switch	1


5.6 LOCKDOWN BAR ASSEMBLY W/ CENTER BUTTON

500-2440-99

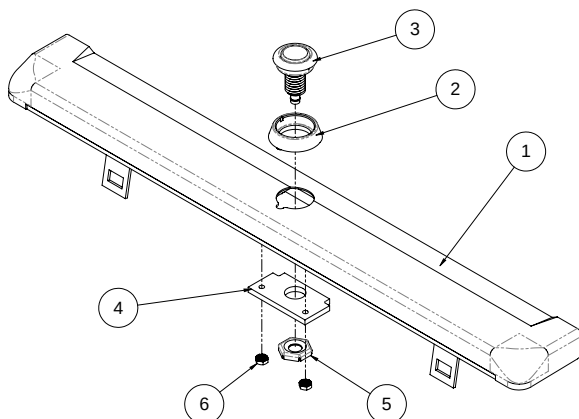


ID	Part Number	Description	Qty
1	500-2441-99	FRONT MOLD ASSEMBLY - CENTER BUTTON - WRINKLE BLACK	1
2	545-7292-10	SPACER, CENTER BUTTON	1
3	515-7791-00	CLEAR CENTER BUTTON ASSEMBLY	1
4	545-7291-00	TOP BUTTON BAR	1
5	240-5003-01	PAL NUT	1
6	240-5104-00	8-32 KEPS NUT	2

5.7 SPEAKER PANEL ASSEMBLY
500-9401-11

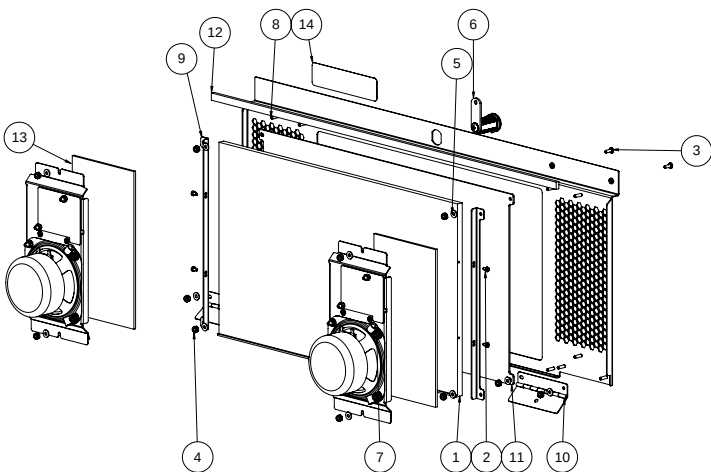


ID	Part Number	Description	Qty
1	116-0036-70	18.5IN LCD (LOGIC TECH)	1
-	037-1115-00	LOGIC TECH LOD BACK LIGHT CABLE	1
-	037-8062-30	LVDS CABLE 18.5 FHD	1
2	237-6188-01P	SCREW, M3x0.5 X 6MM PPH SEMS ZINC, PATCH	4
3	237-6307-06	SCREW, 6-32 X 3/8" PAN TORX SS	2
4	240-5005-00	6-32 NYLON STOP NUT	12
5	242-5001-00	#6 WASHER	12
6	355-5175-00	CAM LOCK 1-3/16" BODY	1
7	511-3645-01	ASM SPEAKER BRKT MOUNT, PREM/PRO SPIKE 3	2
-	036-5600-46	SPEAKER PANEL CABLE W/ CONNECTORS	1
8	515-8870-99	SPEAKER PANEL 18.5IN LCD	1
9	515-8871-00	MOUNTING BRACKET 18.5IN LCD	2
10	515-8872-00	HINGE SPEAKER PANEL 18.5IN LCD	2
11	545-9995-00	LCD LENSE, 18.5IN SCREEN	1
12	626-5001-00	FOAM TAPE - 3/8 X 3/16 THK (BLACK)	1
13	626-5139-00	SPEAKER FOAM - LCD PANEL	2
14	820-6961-01	DECAL SPEAKER PANEL CONNECTED - SPIKE 3	1

5.8 SPEAKER BRACKET MOUNT
ASSEMBLY
511-3645-00

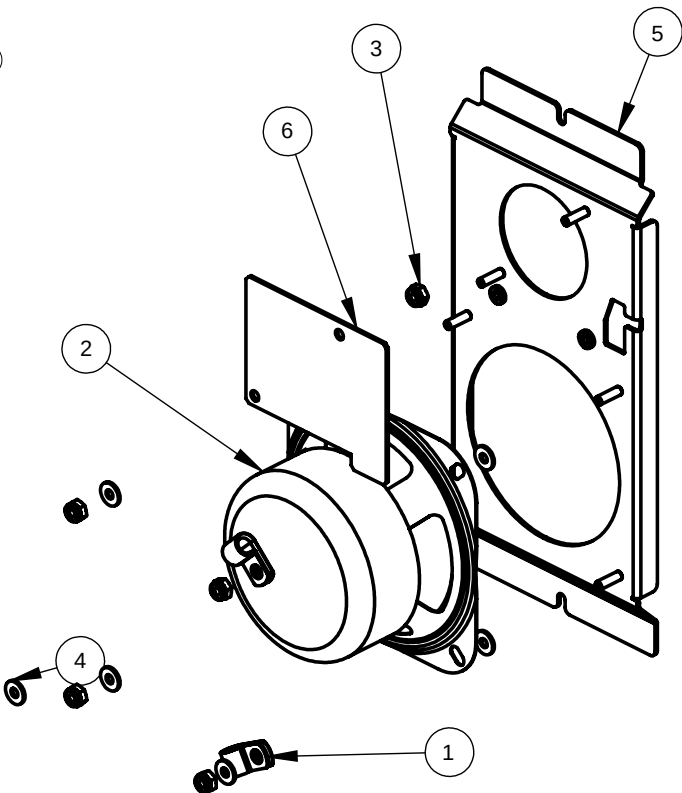

ID	Part Number	Description	Qty
1	040-5000-23	WIRE CLAMP, 1/4" CLOSED TAB	2
2	031-5026-00	SPKR 4 X 4 in 8 OHM MID RANGE	1
3	240-5005-00	6-32 NYLON STOP NUT	8
4	242-5001-00	#6 WASHER	8
5	515-8873-00	BRKT SPEAKER MOUNT SPIKE 3	1
6	535-3367-00	BLANKING PLATE	1


5.9 CABINET PARTS

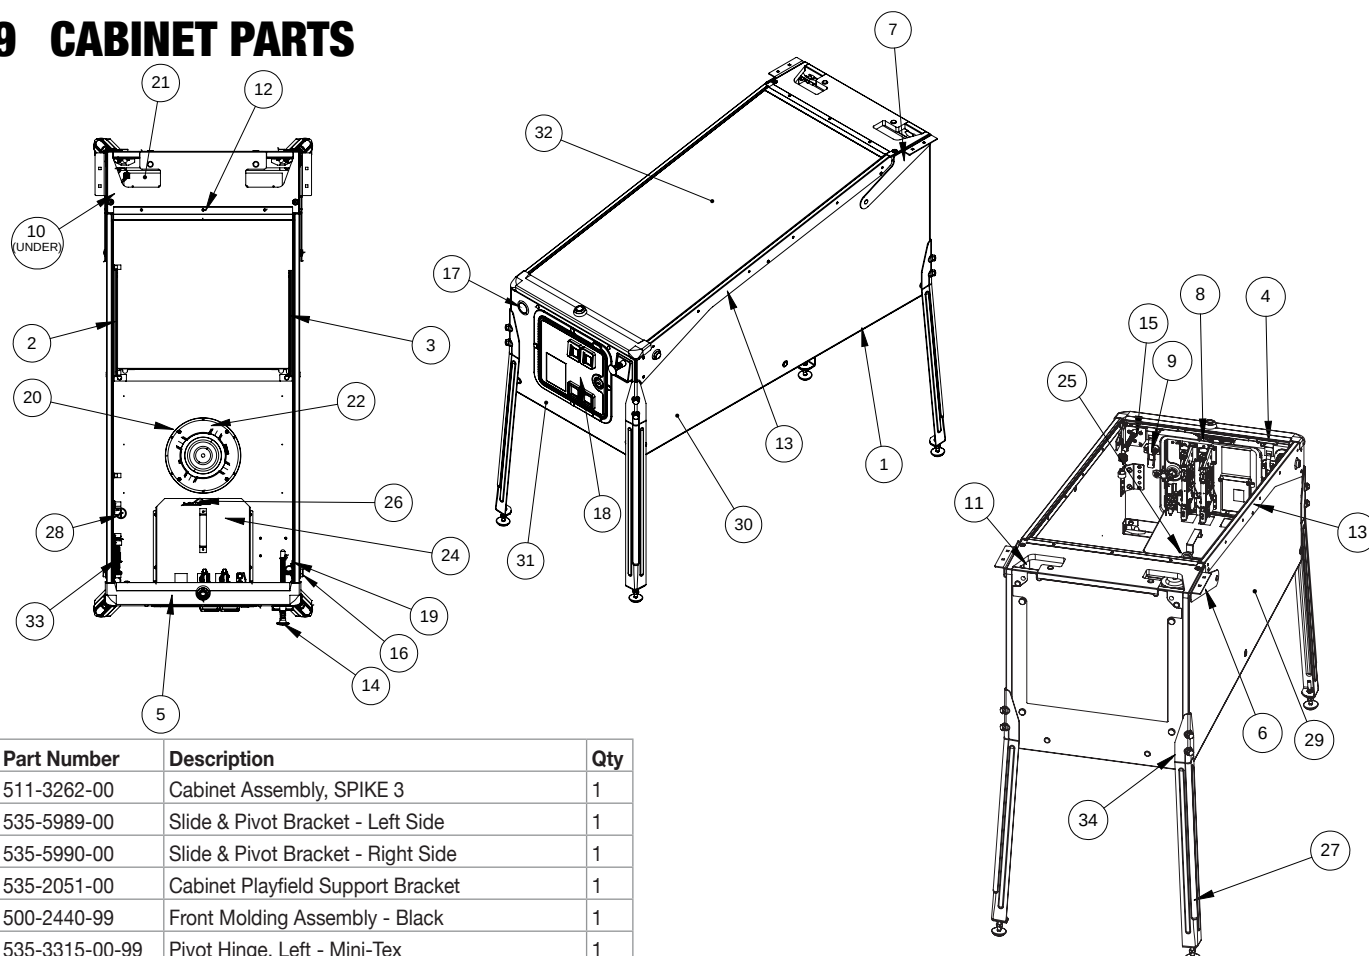

ID	Part Number	Description	Qty
1	511-3262-00	Cabinet Assembly, SPIKE 3	1
2	535-5989-00	Slide & Pivot Bracket - Left Side	1
3	535-5990-00	Slide & Pivot Bracket - Right Side	1
4	535-2051-00	Cabinet Playfield Support Bracket	1
5	500-2440-99	Front Molding Assembly - Black	1
6	535-3315-00-99	Pivot Hinge, Left - Mini-Tex	1
7	535-3315-01-99	Pivot Hinge, Right - Mini-Tex	1
8	511-2014-00	Switch & Light Assembly for Front Button	1
9	355-5038-00	Cabinet Draw Latch, Center Clamp	2
10	535-1759-00-00	Cabinet Side Cleat - Left	1
11	535-1758-00-00	Cabinet Side Cleat - Right	1
12	545-6876-00	SPIKE 3 Glass Rear Extrusion	1
13	500-7941-00-99	Side Armor Left- Mini-Tex	1
	500-7941-01-99	Side Armor Right- Mini-Tex	1
14	500-2604-02	Ball Shooter Assembly - Red Spring	1
15	535-5027-01	Plunger Support Plate, Notched	1
16	500-1169-38	Flipper Button Assy - White	2
17	500-1060-44-LED	Start Button	1
18	501-5018-173	Coin Door 2-Chute No Emboss	1
19	180-5160-01	Flipper Switch, Single [Right]	1
	180-5164-01	Flipper Switch, Double [Left]	1
20	535-2925-00	Grill - Speaker / Vent	1
21	545-9544-02	Grill - Speaker / Vent	1
22	031-5007-01	Speaker, Cabinet 8" Round, 4Ω	1
23	545-5090-00	Cash Box - Plastic	1
24	535-5013-03	Cash Box Cover	1
25	535-2926-00	Cash Box Lock Bracket	1
26	535-7772-00	Hair Pin Clip	1
27	500-5921-50	Leg Assembly - Wrinkle Black	4
28	516-0007-00	Tilt Assembly	1
	535-5029-00	Tilt Plumb Bob	1
29	820-81AD-03	Cabinet Decal, Left, Fallout Pro	1


ID	Part Number	Description	Qty
30	820-81AD-04	Cabinet Decal, Right, Fallout Pro	1
31	820-81AD-05	Cabinet Decal, Front, Fallout Pro	1
32	660-5001-00	Playfield Glass	1
33	520-6967-72	Cabinet Node Board (NODE 1)	1
34	545-7309-00	Leg Spacer Bracket	4
35	234-5101-00	SCREW, #8 X 1/2" SLT HWH AB ZINC	34
	820-81AD-XX	Cabinet Decal Replacement Set, Speaker Panel Decal Not Included	

5.10 SPIKE 3 CABINET ASSEMBLY
511-3262-00

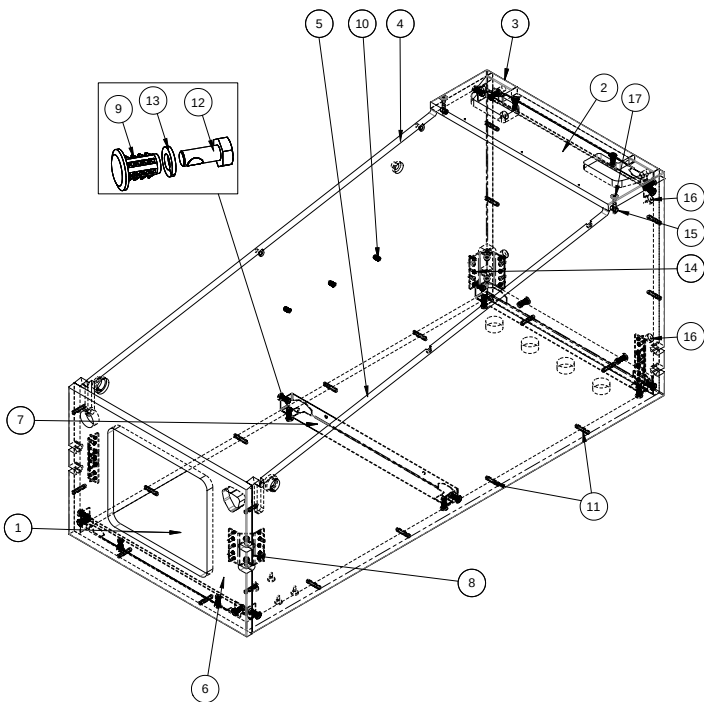


ID	Part Number	Description	Qty
1	525-9771-00	CABINET FLOOR	1
2	525-9770-05	CABINET TOP PANEL	1
3	525-9770-04	CABINET REAR PANEL	1
4	525-9770-01	CABINET LEFT SIDE PANEL	1
5	525-9770-02	CABINET RIGHT SIDE PANEL	1
6	525-9770-13	CABINET FRONT PANEL W/ PLUNGER MOUNT	1
7	535-3314-00	BRACKET, CABINET MAIN BRACE	4
8	535-5374-02	BRACKET, CABINET LEG	4
9	262-5000-00	1/4-20 X 16MM CLOSED-END FLANGED INSERT FOR SOFT WOOD	22
10	262-5001-00	10-32 x 13MM FLUSH INSERT FOR SOFT WOOD	6
11	251-5051-00	DOWEL, 8 MM X 35 MM, SELF-TIGHTENING PLASTIC	20
12	237-9395-00P	BOLT, 1/4-20" X 5/8" HEX HEAD, PATCH	22
13	244-5000-00	1/4" LOCK WASHER, SPLIT	22
14	234-5102-00	SCREW, #8 X 5/8" SLT HWH AB ZINC (6 per leg bracket)	24
15	240-5409-00	CROSS NUT	2
16	285-0101-00	PLASTIC GLIDE W/ NAIL, 3/4 OD X 1/4 L	4
17	237-6357-00	BOLT, 1/4-20 X 40mm	2

5.11 SWITCH & LIGHT ASSEMBLY
FOR FRONT MOLD (LOCKDOWN
BAR) BUTTON
511-2014-00

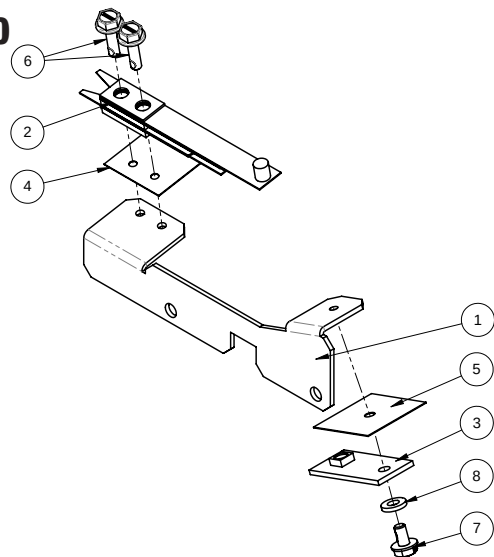

ID	Part Number	Description	Qty
1	535-2050-00	BRACKET, SWITCH AND LIGHT, FRONT MOLD BUTTON	1
2	180-5218-00	SINGLE FLIPPER SWITCH W/ NYLON LIFTER	1
3	520-5333-00	PCB - TRI-COLOR LED	1
4	545-6268-00	FISCHE PAPER	1
5	545-6268-01	FISCHE PAPER	1
6	237-5976-03P	SCREW, 6-32 X 1/2" HWH SWAGE, PATCH	2
7	237-5976-01P	SCREW, 6-32 X 1/4 HWH SWAGE	1
8	242-5079-00	WASHER, .150 I.D. X .312 O.D. X .050 THICK	1


5.12 CABINET PIVOT HINGES

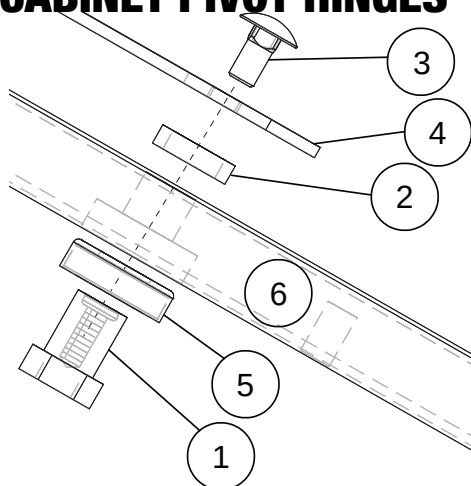

ID	Part Number	Description	Qty
1	254-5042-00	SPACER NUT HEX, 1/2"OD, 1/4-20	1
2	242-5084-00	WASHER, 1/2" I.D., 3/16" THK	1
3	231-5072-00	CARRIAGE BOLT, 1/4-20 X 1/2"	1
4		PIVOT HINGE BRACKET	1
5	544-9930-00	FLANGED WASHER, MOLDED, HOLE TRIM	1
6		CABINET	

5.13 BALL SHOOTER ASSEMBLY


500-2604-02

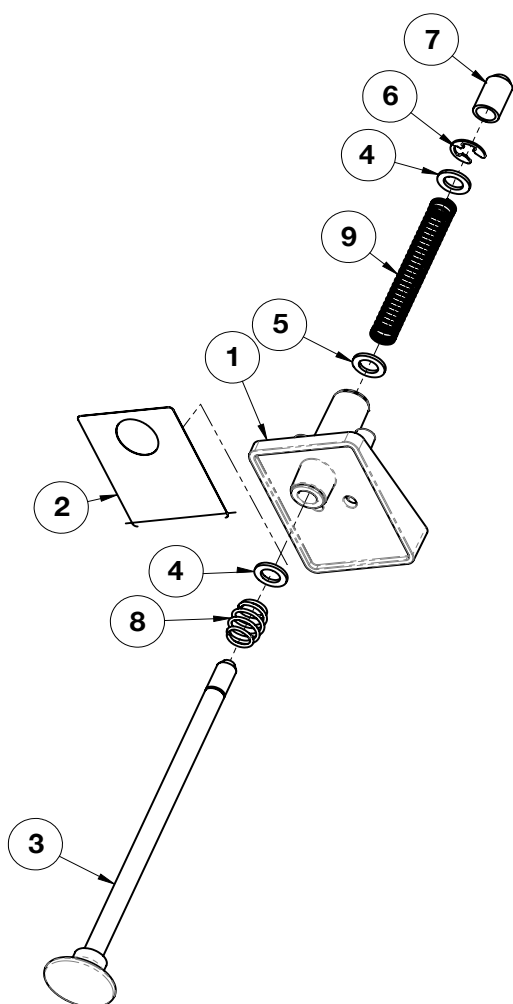

ID	Part Number	Description	Qty
1	515-2436-01	HOUSING ASSEMBLY	1
2	820-1408-00	DECAL - SHOOTER HOUSING SPI	1
3	515-6557-00	ROD ASSEMBLY	1
4	242-5014-00	WASHER 3/8 ID X 5/8 OD X 1/16"	2
5	242-5637-00	NYLON WASHER 3/8 ID X 5/8 OD X 1/16"	1
6	270-5012-00	RETAINING RING, 3/8"	1
7	545-5276-00	RUBBER TIP	1
8	266-5010-00	COMPRESSED SPRING (SHORT)	1
9	266-5001-02	COMPRESSED SPRING (LONG) - RED	1


5.14 AUTO LAUNCH ASSEMBLY

500-9818-02

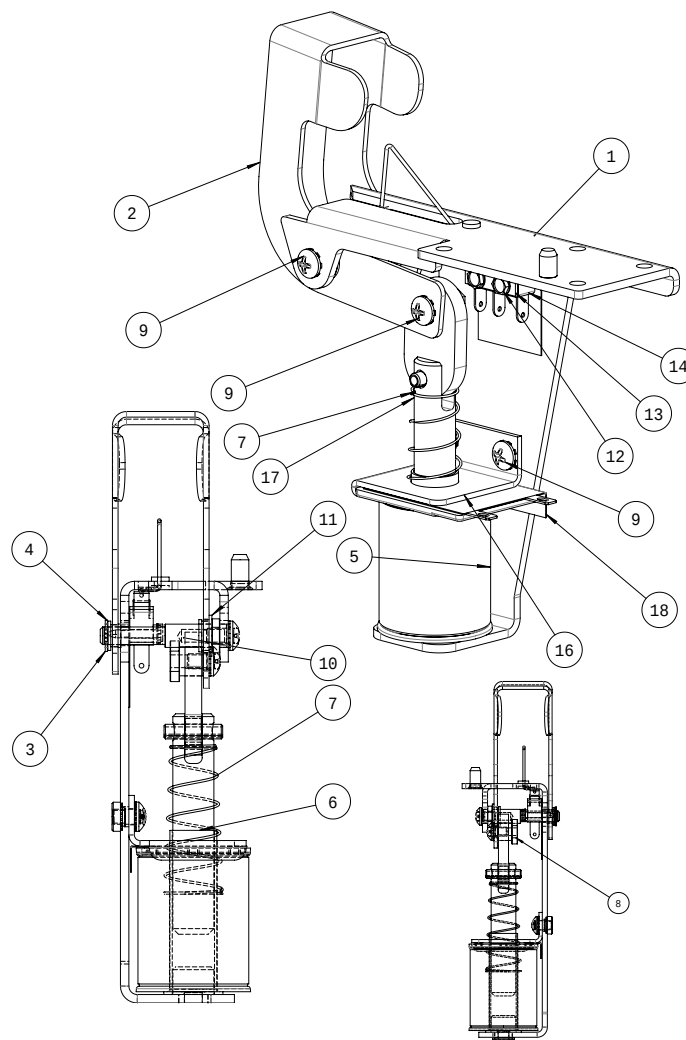


ID	Part Number	Description	Qty
1	515-9689-01	MAIN BRKT: AUTO-PLUNGER	1
2	535-0728-00	KICKER ARM, AUTO-PLUNGER	1
3	270-5001-00	RETAINING E-RING, 3/16" SHAFT OD	1
4	545-5352-00	NYLINER, 3/16" SHAFT	1
5	090-5001-ND	COIL - 23-800, NO DIODE	1
6	545-5411-00	COIL SLEEVE	1
7	266-5020-00	COMPRESSION SPRING-CONICAL	1
8	530-7834-00	PIN: KICKER ARM, AUTO-PLUNGER	1
9	232-5300-00	SCREW, 8-32 X 1/4" PPH SEMS	4
10	530-7835-00	PIVOT, AUTO-PLUNGER	1
11	545-5423-00	NYLINER, 1/4" SHAFT, 4L1-FF	1
12	237-5937-02	SCREW, 2-56 X 1/2" HWH MS	2
13	535-6539-00	SWITCH BODY PROTECT PLATE	1
14	180-5157-01	SHOOTER SWITCH - SHORT ARM	1
15	545-6268-00	FISCHE PAPER	1
16	535-0762-00	COIL BRACKET-AUTO PLUNGER	1
17	515-6304-03	PLUNGER / LINK ASSEMBLY	1
18	545-0762-00	FISCHE PAPER: AUTO-LAUNCHER	1

5.15 BALL TROUGH ASSEMBLY
500-9820-01

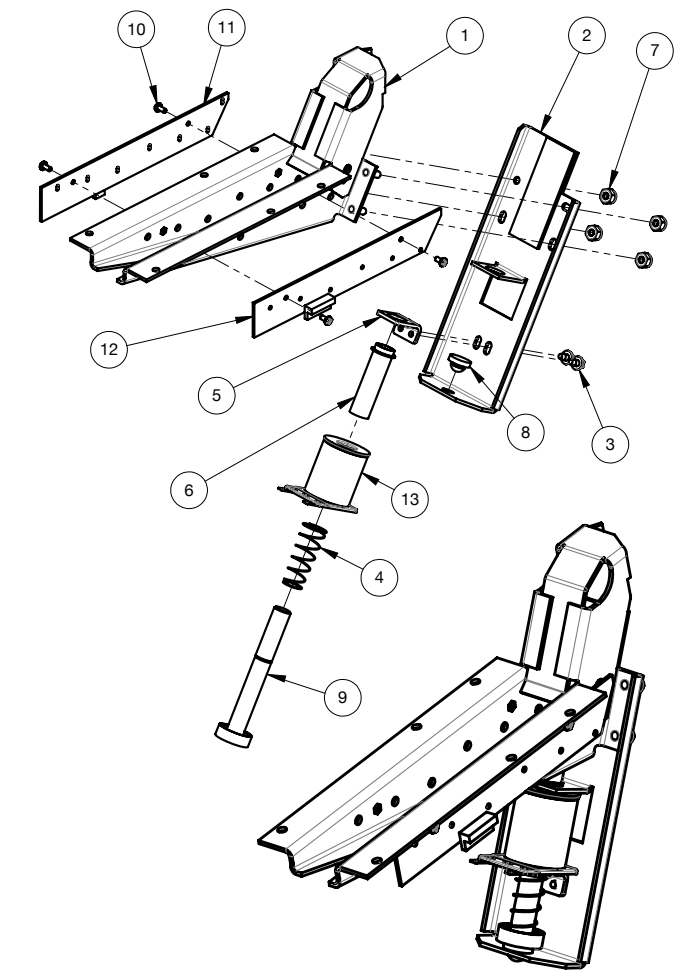


ID	Part Number	Description	Qty
1	515-7811-00	MAIN BRKT. BALL TROUGH	1
2	515-7812-00	COIL BRACKET, BALL TROUGH	1
3	237-5975-04	SCREW, 8-32 X 1/4" HWH SWAGE SERR	2
4	266-5020-00	COMPRESSION SPRING-CONICAL	1
5	535-5203-03	COIL RETAINING BRACKET	1
6	545-5076-01	COIL SLEEVE	1
7	240-5102-00	8-32 NYLON LOCK NUT	4
8	545-5105-00	RUBBER BUMPER	1
9	515-7309-01	PLUNGER ASSEMBLY	1
10	237-5909-00	SCREW, 4-40 X 1/4" PPH SEMS	4
11	520-5344-00	TROUGH SERIAL OPTO TRANSMITTER	1
12	520-8516-00	TROUGH SERIAL OPTO RECEIVER	1
13	090-5004-ND	COIL 27-1500 - NO DIODE	1
98*	605-5006-00	SHRINK TUBING 1/8"	.42 FT.
99*	036-5611-11-F5	CABLE TROUGH OPTOS	1


5.16 SLINGSHOT ASSEMBLY
500-9920-01

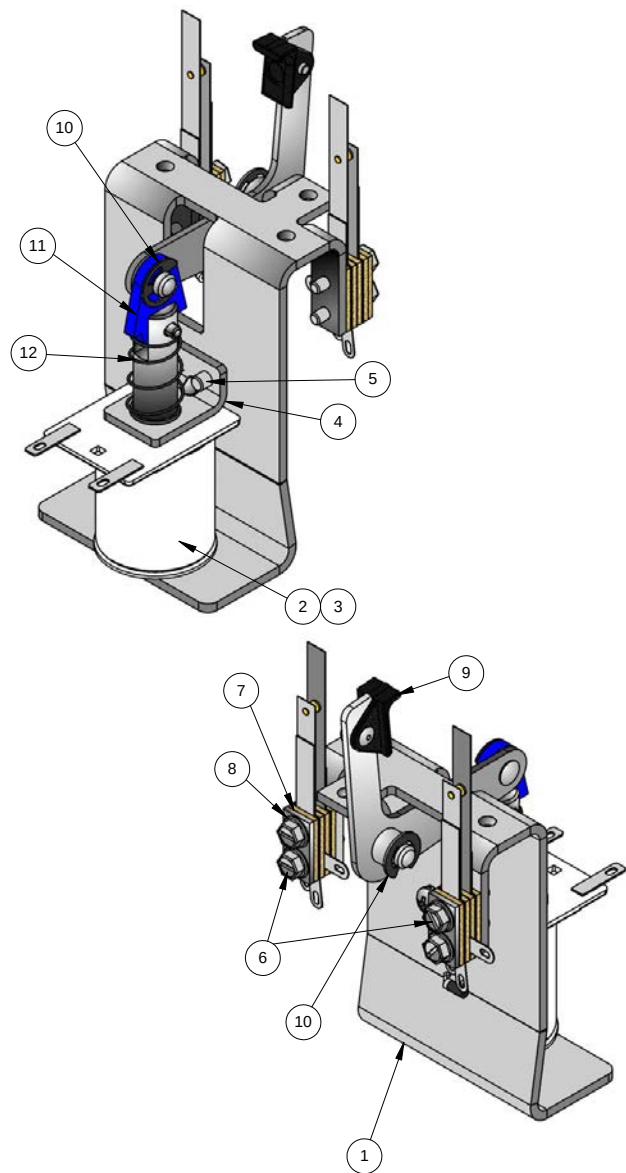

ID	Part Number	Description	Qty
1	515-5339-01	SLINGSHOT BRACKET ASSEMBLY	1
2	090-5044-ND	COIL 26-1200 - NO DIODE	1
3	545-5031-00	COIL SLEEVE	1
4	535-5203-03	COIL RETAINER BRACKET	1
5	232-5301-00	8-32 X 3/8 PPH MS EXT SEMS ZC	2
6	180-5231-00	SWITCH SLING SHOT 2 LUG CENTER	2
7	535-5045-00	SWITCH PLATE	2
8	237-5976-04	6-32 X 5/8 SLOT SER HWH SW	4
9	515-5340-01	ARM & TIP ASSEMBLY	1
10	270-5002-00	RETAINING RING - 1/4 DIA	2
11	515-5338-00	PLUNGER & LINK ASSEMBLY	1
12	266-5020-00	COMP SPRING CONICAL	1
13	036-5604-00	4" GENERIC JUMPER	2

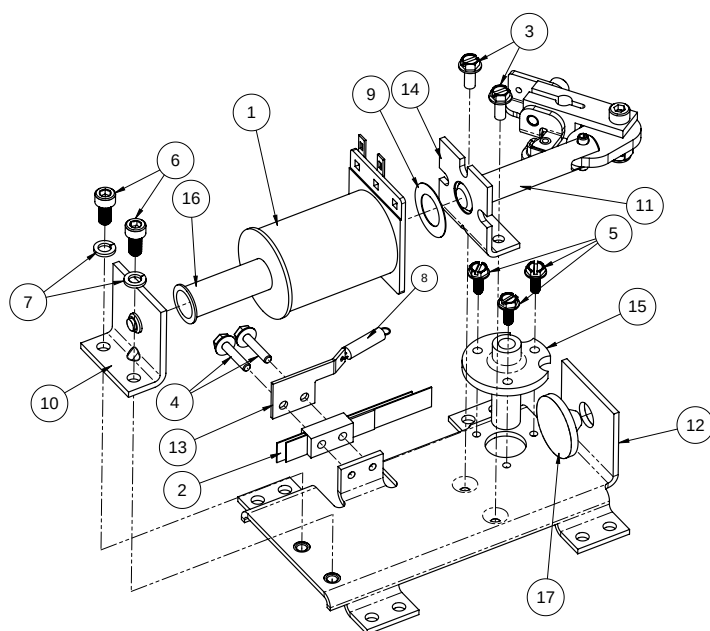
5.17 FLIPPER ASSEMBLY, LEFT**500-6543-12-ND**

ID	Part Number	Description	Qty
1	090-5032-ND	FLIPPER COIL (22-1080)	1
2	180-5149-00	SWITCH, END-OF-STROKE	1
3	237-5975-00	SCREW, 8-32 X 3/8" HWH SWAGE ZN	2
4	237-5976-04	SCREW, 6-32 X 5/8" HWH SWAGE	2
5	237-6388-00	SCREW, 6-32 X 3/8", SLOTTED HWH, TYPE F	3
6	237-6389-00	SCREW, 10-32 X 3/8", SHC	2
7	244-5003-00	#10 LOCK WASHER, SPLIT	2
8	265-5035-00	EXTENSION SPRING	1
9	269-5002-00	SPRING WASHER	1
10	515-6308-01	COIL STOP ASSEMBLY	1
11	515-7203-01	PLUNGER / CRANK ASSEMBLY	1
12	535-7275-01	FLIPPER BASE PLATE, LEFT	1
13	535-7354-01	SWITCH PLATE / SPRING RTN BRKT	1
14	535-7356-00	COIL BRACKET	1
15	545-5070-00	FLIPPER BUSHING	1
16	545-5388-00	COIL SLEEVE	1
17	545-5428-00	RUBBER BUMPER	1
18	515-5133-06-06	FLIPPER BAT AND SHAFT (YELLOW)	1
		DECAL -91 (Vault-Tec)	1
19	545-5277-00	FLIPPER RUBBER	1

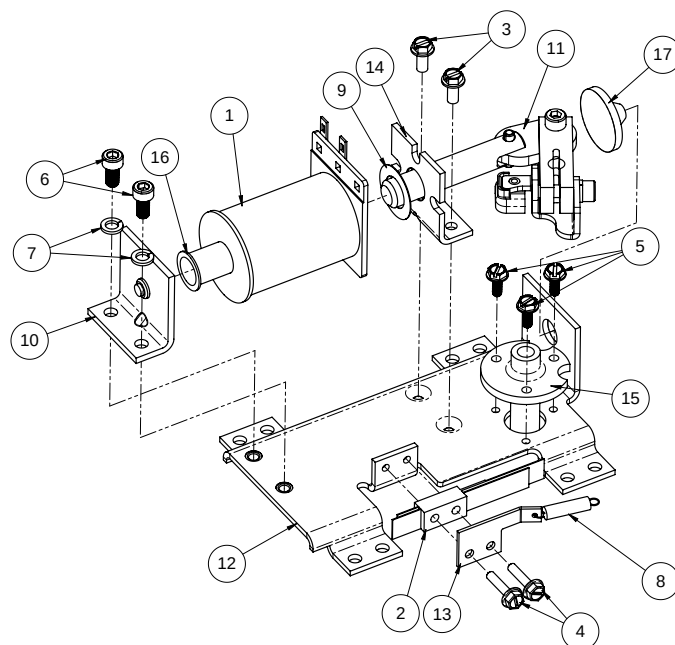
5.18 FLIPPER ASSEMBLY, RIGHT & UPPER LEFT**500-6543-02-ND**

ID	Part Number	Description	Qty
1	090-5032-ND	FLIPPER COIL (22-1080)	1
2	180-5149-00	SWITCH, END-OF-STROKE	1
3	237-5975-00	SCREW, 8-32 X 3/8" HWH SWAGE ZN	2
4	237-5976-04	SCREW, 6-32 X 5/8" HWH SWAGE	2
5	237-6388-00	SCREW, 6-32 X 3/8", SLOTTED HWH, TYPE F	3
6	237-6389-00	SCREW, 10-32 X 3/8", SHC	2
7	244-5003-00	#10 LOCK WASHER, SPLIT	2
8	265-5035-00	EXTENSION SPRING	1
9	269-5002-00	SPRING WASHER	1
10	515-6308-01	COIL STOP ASSEMBLY	1
11	515-7203-00	PLUNGER / CRANK ASSEMBLY	1
12	535-7275-00	FLIPPER BASE PLATE, RIGHT	1
13	535-7354-00	SWITCH PLATE / SPRING RTN BRKT	1
14	535-7356-00	COIL BRACKET	1
15	545-5070-00	FLIPPER BUSHING	1
16	545-5388-00	COIL SLEEVE	1
17	545-5428-00	RUBBER BUMPER	1
18	515-5133-06-06	FLIPPER BAT AND SHAFT (YELLOW) [Right]	1
		DECAL -92 [Right] (Vault-Tec)	1
	544-2001-09-06	SMALL FLIPPER BAT AND SHAFT (YELLOW) [Upper Left]	1
		DECAL -93 [Upper Left] (Mutated Arm)	1
19	545-5277-00	FLIPPER RUBBER [Right]	1
	545-5207-00	SMALL FLIPPER RUBBER [Upper Left]	1

5.19 POP BUMPER ASSEMBLY

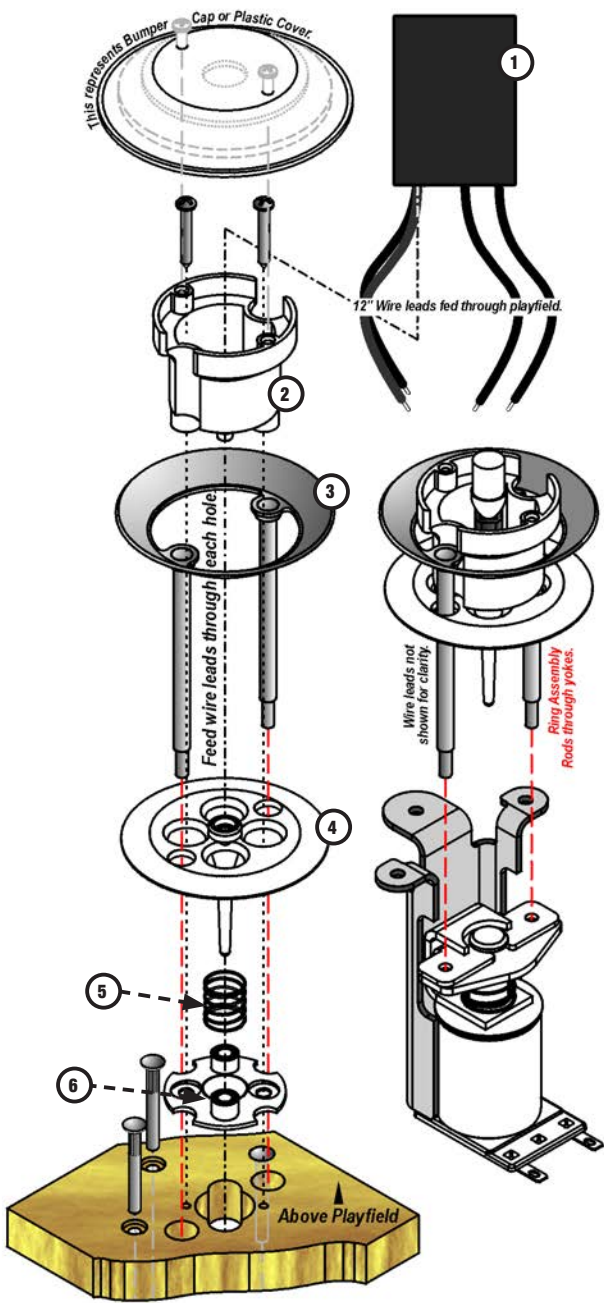

ID	Part Number	Description	Qty
1	511-1982-00	POP BUMPER LED MODULE	1
2	545-5197-00	BUMPER BODY	1
3	515-5085-00	RING AND ROD ASSY	1
4	545-5607-00	BUMPER SKIRT	1
5	266-5048-00	BUMPER SKIRT COMP SPRING	1
6	545-5195-00	BUMPER BASE	1

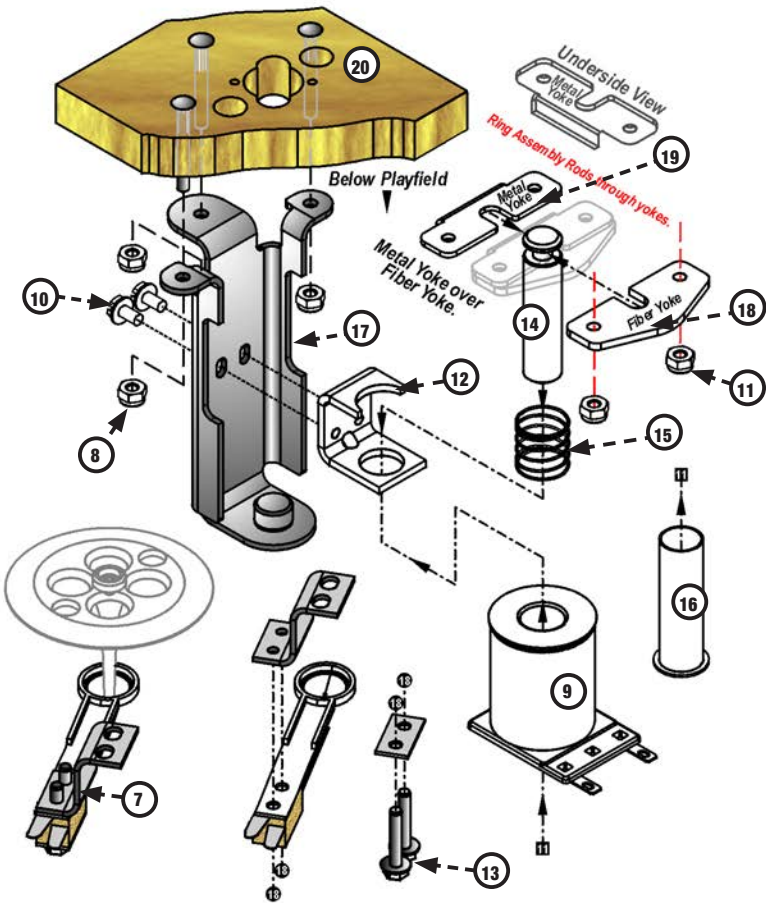


Part Number	Description	Qty
511-1981-01	BUMPER/RING TOP ASSY, W/ LED FLASH	1
515-6459-04-ND	BUMPER BOTTOM ASSY, NO DIODE	1
545-6850-06	BUMPER CAP	1

ID	Part Number	Description	Qty
7	500-9934-00	POP BUMPER SWITCH ASSY-2 - LUG-RIGHT	1
8	240-5005-00	6-32 NYLON STOP NUT	3
9	090-5044-ND	COIL - 26-1200	1
10	237-5976-01	#6-32 X 1/4" SHWH SWAGE ZN	2
11	240-5005-00	#6-32 NYLON STOP NUT	2
12	535-7347-00	METAL YOKE STOP	1
13	234-5101-00	SCREW, 8 X 1/2 SLT	6
14	530-5348-00	PLUNGER, POP BUMPER	1
15	266-5047-00	COMPRESSION SPRING, POP BUMPER	1
16	545-5031-00	COIL SLEEVE	1
17	515-5939-00	COIL BRACKET POP BUMPER ASSY	1
18	545-5609-00	FIBER YOKE	1
19	535-7346-00	METAL YOKE	1
20	237-5957-00	#6-32 x 1-3/16" SPIRAL FIN SHANK SCREW	3

5.20 BOTTOM ARCH ASSEMBLY


500-2512-AD

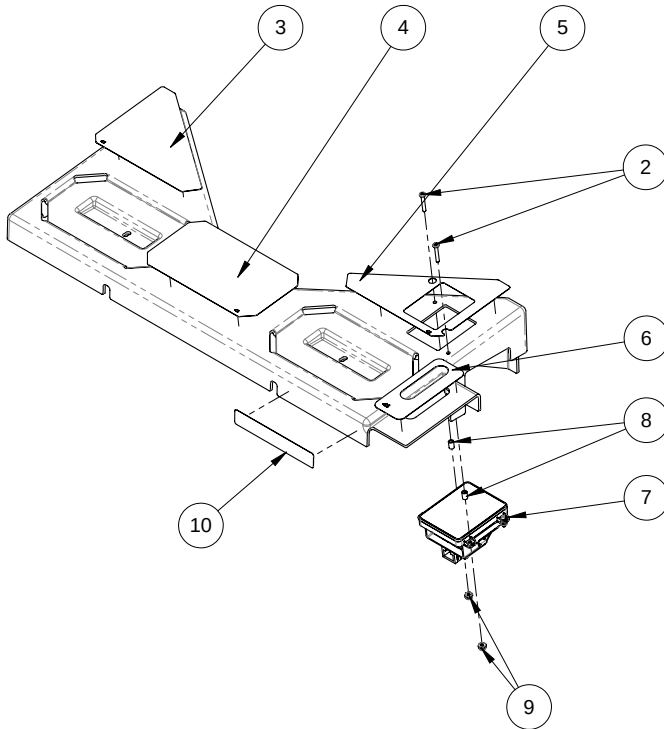

ID	Part Number	Description	Qty
1	545-1238-00	BOTTOM ARCH, PLASTIC, QR READY, W/ FLASHER HOLES	1
2	237-5887-01	SCREW, 4-40 X 3/4" PPH MS BLACK	2
3	820-96XX-01	PLASTIC ARCH DECAL SET -01	1
4	820-96XX-02	PLASTIC ARCH DECAL SET -02	1
5	820-96XX-03	PLASTIC ARCH DECAL SET -03	1
6	820-96XX-04	PLASTIC ARCH DECAL SET -04	1
7	524-1001-00	QR SCANNER M306 ASSEMBLY	1
8	254-5090-04	PLASTIC SPACER #4 SCREW, 3/16" OD - 9/32" LENGTH	2
9	240-5303-00	4-40 NYLON LOCK NUT	2
10	820-5422-00	WARNING DECAL, BOTTOM ARCH, QR READER	1

5.21 RIGHT METAL RAMP ASSEMBLY


500-9867-01

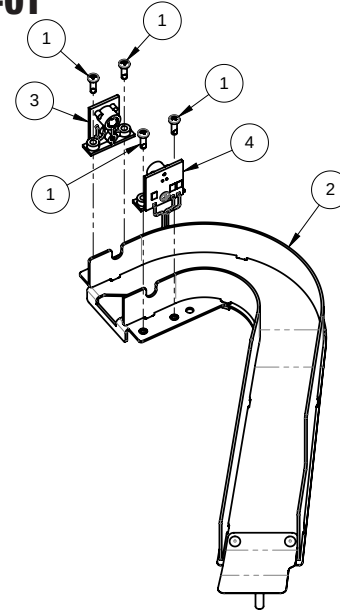

ID	Part Number	Description	Qty
1	237-5997-00P	SCREW, 4-40 X 3/8" PPH MS BLACK, PATCH	4
2	510-3652-01	RIVETED RAMP ASM, FALLOUT, RIGHT	1
3	515-0215-00	LONG RANGE OPTO EMITTER ASSEMBLY	1
4	515-0215-01	LONG RANGE OPTO RECEIVER ASSEMBLY	1


5.22 ROLLOVER BUTTON ASSEMBLY

511-3268-01

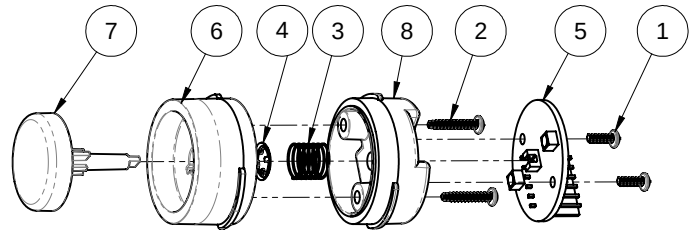


ID	Part Number	Description	Qty
1	237-6312-04	PPH #2-28 x 1/4" PLASTIC CUTTING	2
2	237-6312-08	PPH #2-28 X 1/2" PLASTIC CUTTING	2
3	265-5076-00	SPRING: STAR ROLLOVER	1
4	270-5420-00	4mm PUSH ON RETAINING RING	1
5	520-8527-00	RGB LED, STAR R/O, SPIKE SYSTEM	1
6	544-2002-00	TOP: BUTTON ROLLOVER	1
7	544-2003-01	1" ROLLOVER BUTTON, BLACK	1
8	545-0896-00	BOTTOM: STAR ROLLOVER	1

5.23 SUBWAY VUK OPTO
ASSEMBLY
500-9868-00

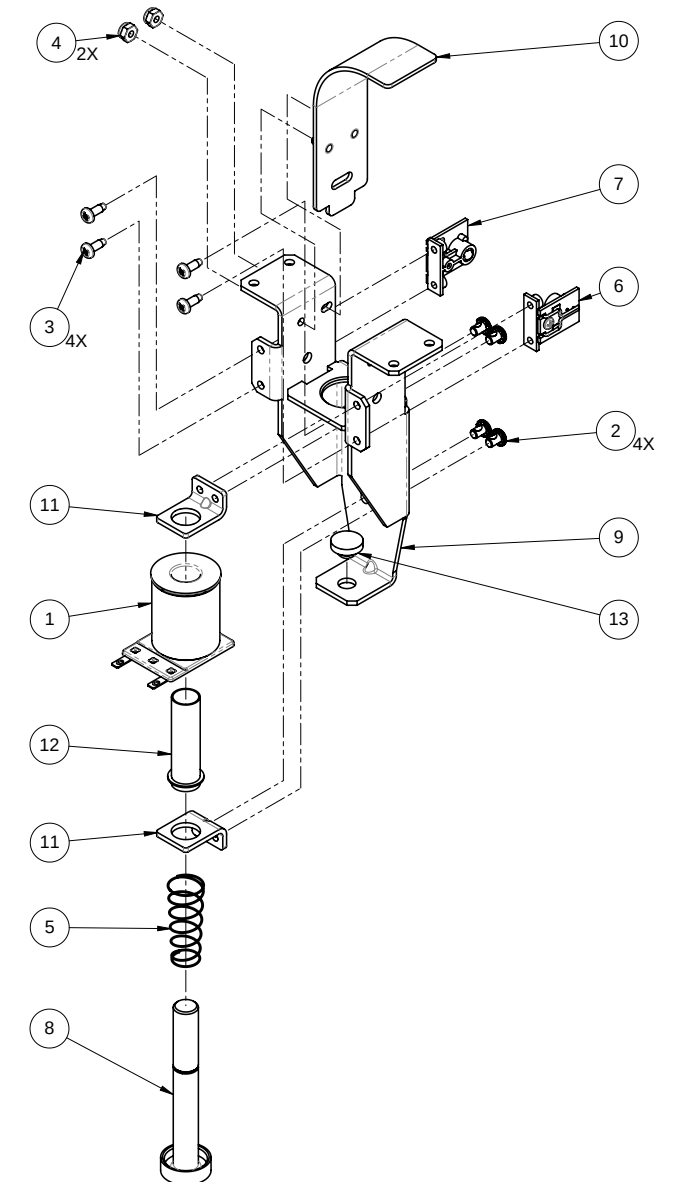


ID	Part Number	Description	Qty
1	090-5001-ND	COIL, 23-800, NO DIODE	1
2	232-5300-00P	SCREW, 8-32 X 1/4" PPH SEMS, PATCH	4
3	237-5880-00	SCREW, #6 X 3/8 PPH T-25	4
4	240-5005-00	6-32 NYLON STOP NUT	2
5	266-5020-00	COMPRESSION SPRING-CONICAL	1
6	515-0215-00	LONG RANGE OPTO EMITTER ASSEMBLY	1
7	515-0215-01	LONG RANGE OPTO RECEIVER ASSEMBLY	1
8	515-7309-00	PLUNGER ASSEMBLY	1
9	535-2367-01	BRACKET, SUBWAY VUK	1
10	535-3399-00	HOOD, OPTO SCOOP	1
11	535-5203-03	COIL RETAINING BRACKET	2
12	545-5076-01	COIL SLEEVE	1
13	545-5105-00	RUBBER BUMPER	1

5.24 OPTOS TALL, 2.31 ASSEMBLY
511-4912-00
(Switch ID 47 - Outer Loop Exit Opto)

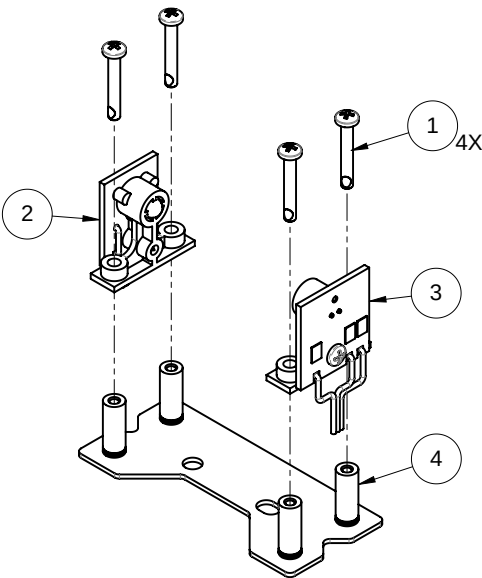

ID	Part Number	Description	Qty
1	237-5887-01P	SCREW, 4-40 X 3/4" PPH MS, BLACK, PATCH	4
2	515-0215-00	LONG RANGE OPTO EMITTER ASSEMBLY	1
3	515-0215-01	LONG RANGE OPTO RECEIVER ASSEMBLY	1
4	535-3263-14	BRACKET, OPTO TALL, 2.625	1


5.25 BALL GUIDE -01 ASSEMBLY
511-3287-01
(Left Flipper Guide)

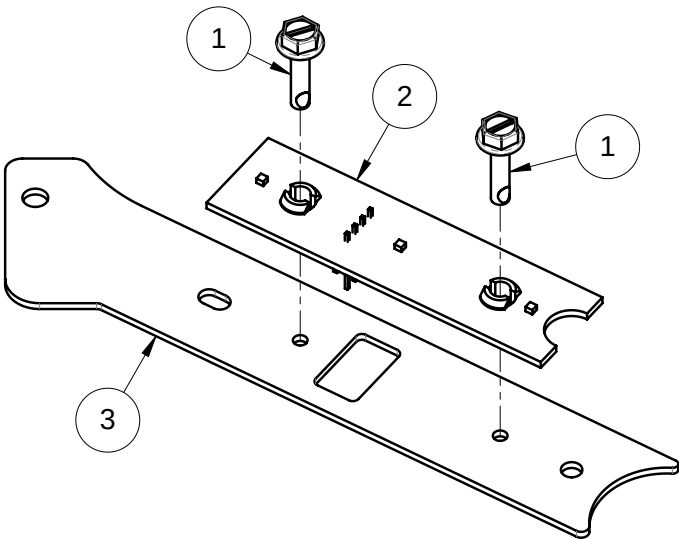

ID	Part Number	Description	Qty
1	237-5976-04P	SCREW, 6-32 X 5/8" HWH SWAGE, SERRATED, PATCH	2
2	520-8670-00	PCA INLANE 3W LED BOARD	1
3	535-3376-01	BALL GUIDE -01, FALLOUT	1

5.26 BALL GUIDE -02 ASSEMBLY


511-3287-02
(Right Flipper Guide)

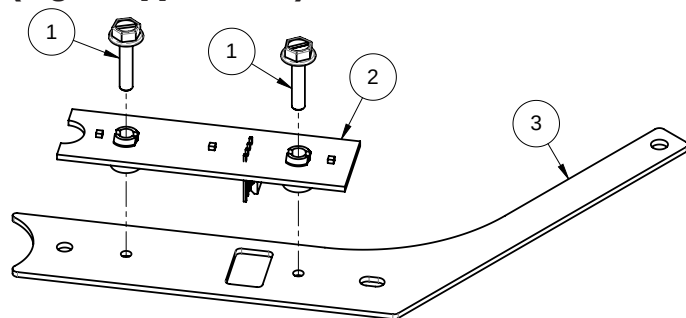

ID	Part Number	Description	Qty
1	237-5976-04	SCREW, 6-32 X 5/8" HWH SWAGE, SERRATED	2
2	520-8670-00	PCA INLANE 3W LED BOARD	1
3	535-3376-02	BALL GUIDE -02, FALLOUT	1

5.27 BALL GUIDE -13 ASSEMBLY


511-3287-13
(Left Side Wall)

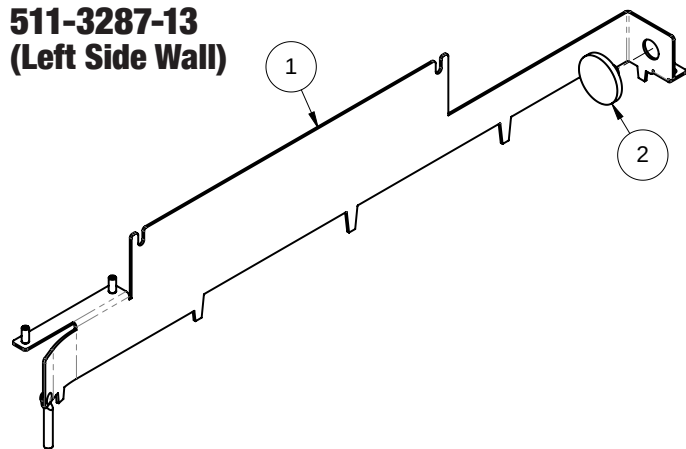

ID	Part Number	Description	Qty
1	535-3376-13	BALL GUIDE -13, FALLOUT	1
2	545-5428-00	RUBBER BUMPER	1

5.28 BALL GUIDE -15 ASSEMBLY


511-3287-15
(VUK Right Entry Wall)

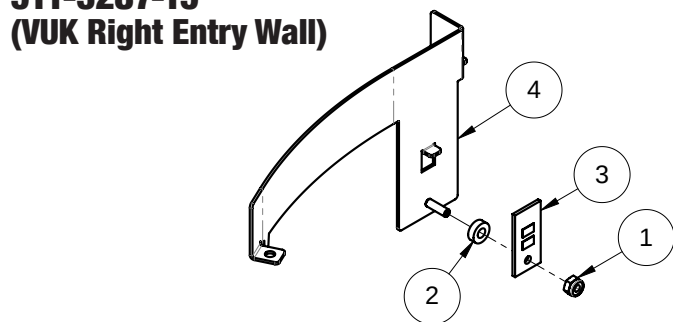

ID	Part Number	Description	Qty
1	240-5005-00	6-32 NYLON STOP NUT	1
2	254-5000-19	NYLON SPACER - BLACK - 3/8 OD X .175 ID X 1/8"	1
3	520-8457-00	PCB, SINGLE FLOOD LED - RED	1
4	535-3376-15	BALL GUIDE -15, FALLOUT	1

5.29 BOTTLE CAP SPINNER BOTTOM ASSEMBLY


511-3668-01

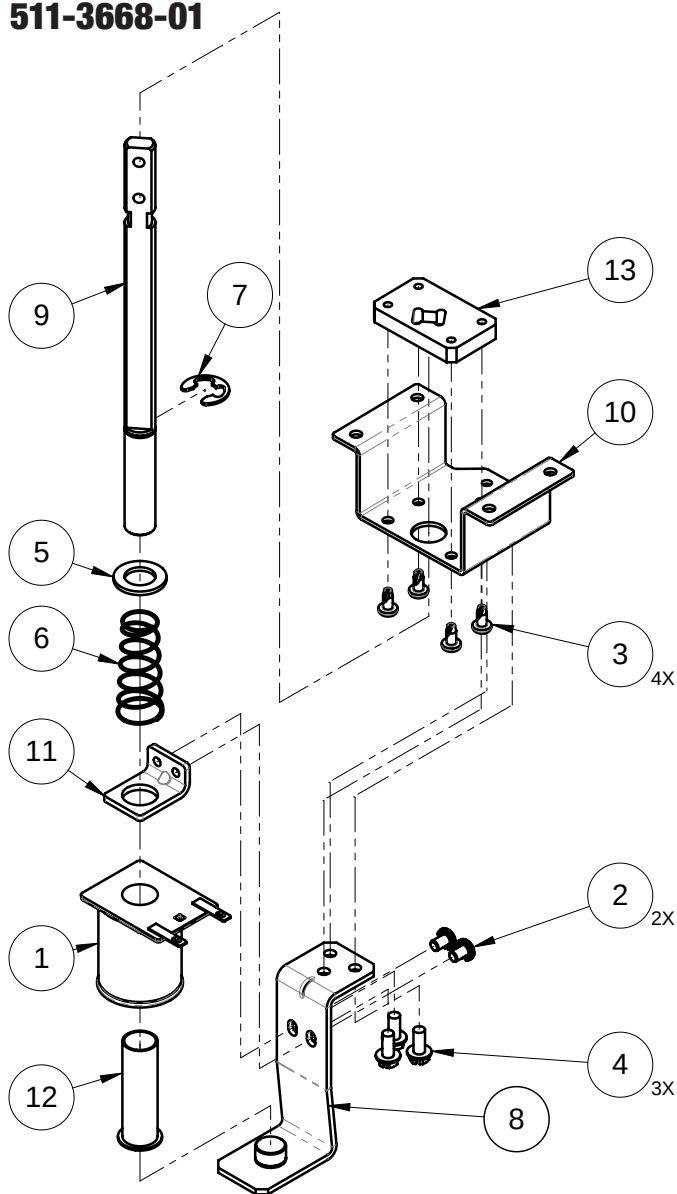

ID	Part Number	Description	Qty
1	090-5044-ND	COIL 26-1200 - NO DIODE	1
2	232-5300-00	SCREW, 8-32 X 1/4" PPH SEMS	2
3	237-5880-01	SCREW, #6 X 5/16 PPH T-25	4
4	237-5975-00	SCREW, 8-32 X 3/8" HWH SWAGE ZN	3
5	242-5081-00	WASHER - NYLON .75 OD x .44 ID	1
6	266-5020-02	COMPRESSION SPRING-CONICAL	1
7	270-5005-00	RETAINING E-RING, 7/16" SHAFT OD	1
8	515-3048-00	ASM, BCS COIL BRACKET	1
9	530-9677-00	PLUNGER, UP/DOWN SPINNER	1
10	535-2911-01	BRACKET, UP/DOWN SPINNER, STANDOFF	1
11	535-5203-03	COIL RETAINING BRACKET	1
12	545-5031-00	COIL SLEEVE	1
13	546-7993-00	SLIDE, BOTTLE CAP SPINNER	1

5.30 BOTTLE CAP SPINNER TOP ASSEMBLY


511-3668-12

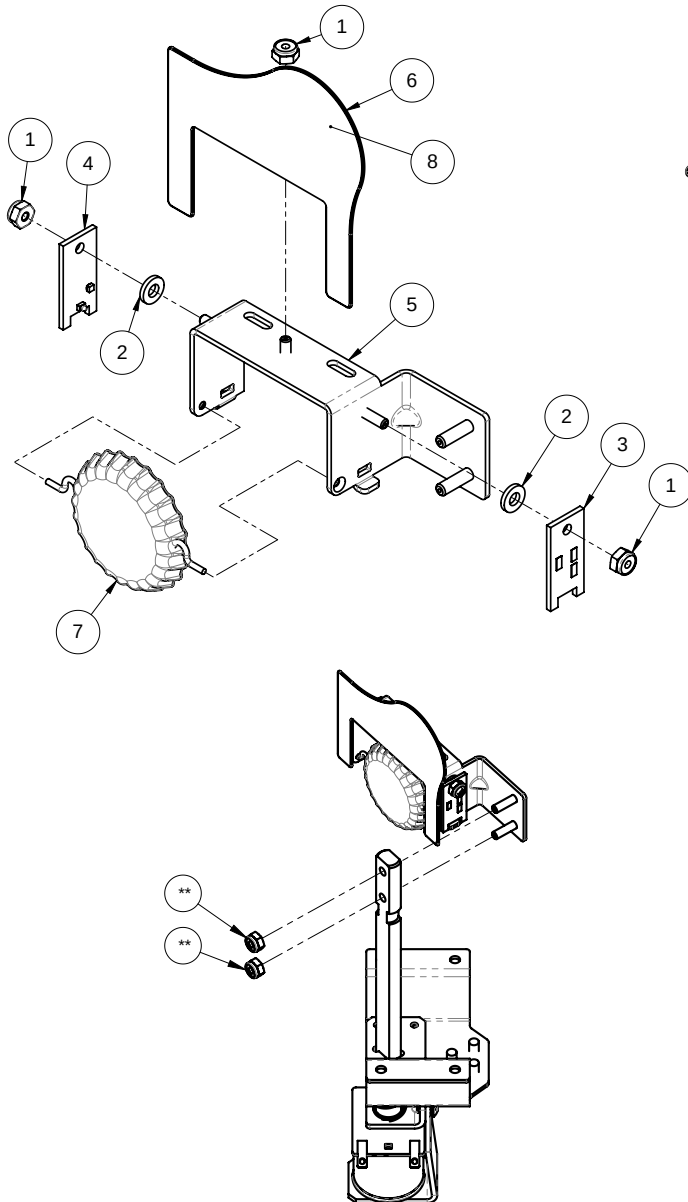


ID	Part Number	Description	Qty
1	240-5303-00	4-40 NYLON LOCK NUT	3
2	242-5079-00	WASHER, .150 I.D. X .312 O.D. X .050 THICK	2
3	520-8115-00	PCA MINI SMT EMITTER	1
4	520-8116-00	PCA MINI SMT RECEIVER	1
5	535-2911-10	BRACKET, BOTTLE CAP SPINNER	1
6	535-2911-11	BRACKET, BCS SIGN	1
7	545-6877-00	SPINNER, BOTTLE CAP, DECORATED	1
8	820-4473-60	DECAL, FALLOUT PRO, -60	1
**	240-5005-00	6-32 NYLON STOP NUT (Used to attach to plunger of the bottom assembly)	2

5.31 JUMP RAMP ASSEMBLY (CONTAINS LED SERIAL BOARD 9A3)


500-9867-12

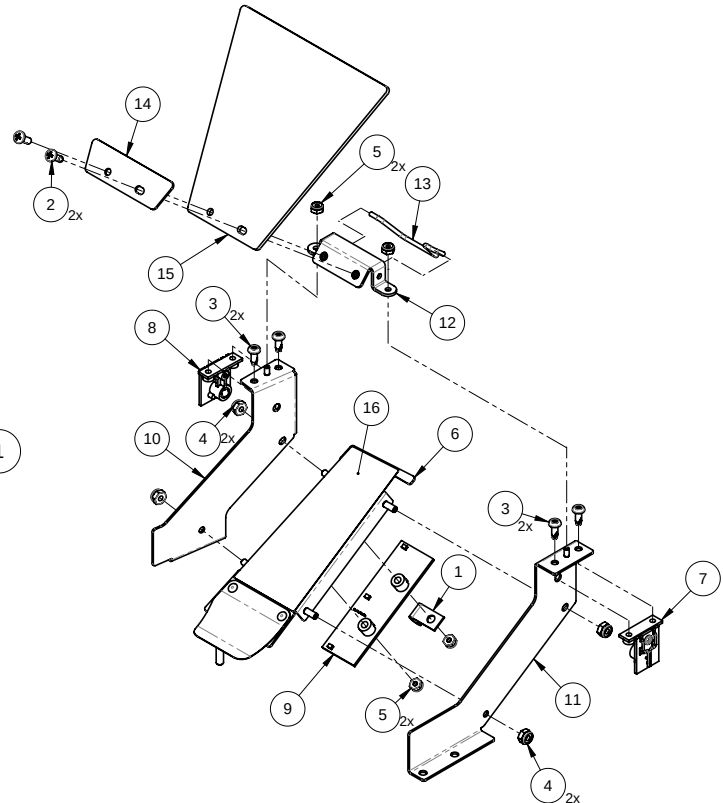


ID	Part Number	Description	Qty
1	040-5000-03	1/4" CABLE CLAMP	1
2	237-5501-00P	SCREW, 6-32 X 3/8" PPH MS ZINC, PATCH	2
3	237-5880-00	SCREW, #6 X 3/8 PPH T-25	4
4	240-5005-00	6-32 NYLON STOP NUT	4
5	240-5303-00	4-40 NYLON LOCK NUT	4
6	510-3652-02	RIVETED ASM, JUMP RAMP BOTTOM	1
7	515-0215-00	LONG RANGE OPTO EMITTER ASSEMBLY	1
8	515-0215-01	LONG RANGE OPTO RECEIVER ASSEMBLY	1
9	520-9896-00	3W UC LED BOARD 9A3	1
10	535-3097-01	METAL RAMP, JUMP RAMP LEFT SIDE	1
11	535-3097-12	METAL RAMP, JUMP RAMP RIGHT SIDE	1
12	535-3263-12	BRACKET, JUMP RAMP GATE	1
13	535-3263-13	WIRE, JUMP RAMP GATE	1
14	535-3263-15	PLATE, VAULT DOOR GUARD	1
15	546-7725-00	PLASTIC, BALL DEFLECTOR	1
16	820-4473-82	DECAL, FALLOUT PRO, -82	1

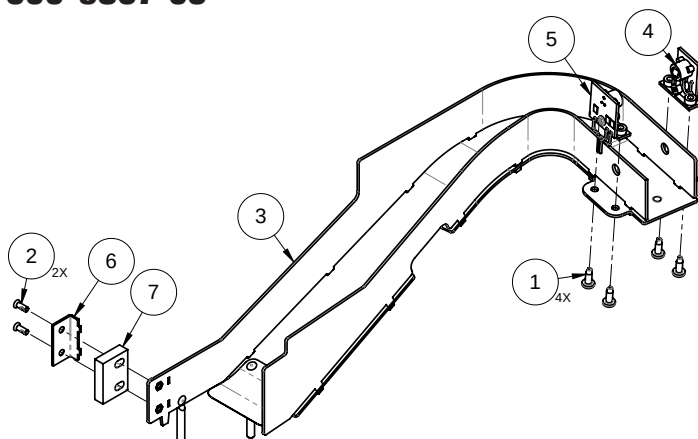5.32 CENTER RAMP ASSEMBLY**500-9867-03**

ID	Part Number	Description	Qty
1	237-5880-00	SCREW, #6 X 3/8 PPH T-25	4
2	237-6151-00P	SCREW, 4-40 X 5/16" PFH U/C MS	2
3	510-3652-03	RIVETED RAMP ASM, CENTER	1
4	515-0215-00	LONG RANGE OPTO EMITTER ASSEMBLY	1
5	515-0215-01	LONG RANGE OPTO RECEIVER ASSEMBLY	1
6	535-9366-01	BUMPER HOLDER	1
7	626-5057-01	GUIDE BUMPER	1

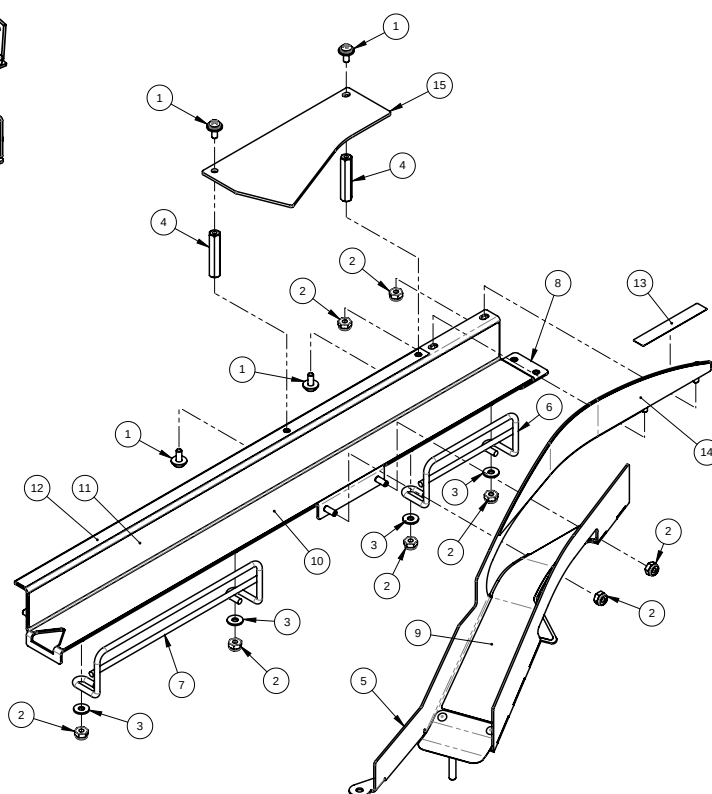5.34 LOWER LEFT RAMP ASSEMBLY**500-9867-14**


ID	Part Number	Description	Qty
1	237-6378-00P	#6-32 X 3/8 PPH w/DOUBLE SEMS, PATCH	4
2	240-5005-00	6-32 NYLON STOP NUT	8
3	242-5001-00	#6 WASHER	4
4	254-5008-11	HEX SPACER - 1 1/4 "	2
5	510-3652-04	RIVETED ASM, LEFT RAMP	1
6	515-3268-00	WIRE FENCE, FALLOUT	1
7	515-3268-01	WIRE FENCE, FALLOUT, LONG	1
8	535-3262-10	RAMP, LEFT EXIT	1
9	820-4473-84	DECAL, FALLOUT PRO, -84	1
10	820-4473-85	DECAL, FALLOUT PRO, -85	1
11	820-4473-86	DECAL, FALLOUT PRO, -86	1
12	820-4473-87	DECAL, FALLOUT PRO, -87	1
13	820-4473-88	DECAL, FALLOUT PRO, -88	1
14	820-4473-89	DECAL, FALLOUT PRO, -89	1
15	830-4457-24	PLASTIC, FALLOUT PRO, -24	1

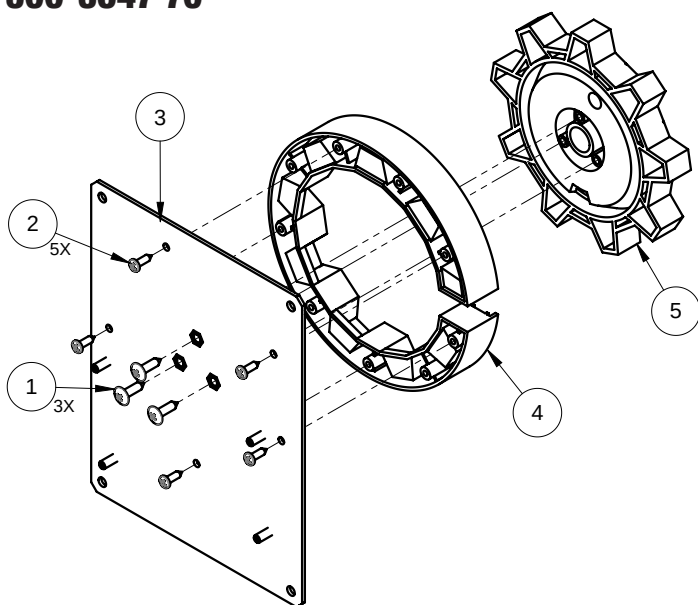5.33 VAULT DOOR ASSEMBLY**500-3647-70**

ID	Part Number	Description	Qty
1	237-5809-00	SCREW, #6 X 1/2" PTH A	3
2	237-5815-00	SCREW, #4 X 3/8" PPH AB	5
3	535-3379-70	BRACKET, VAULT FRAME, PRO	1
4	545-7998-01	TOY, VAULT DOOR FRAME, DECORATED	1
5	545-7998-02	TOY, VAULT DOOR, DECORATED	1

5.35 PIP BOY WITH BRACKET ASSEMBLY


511-3690-00

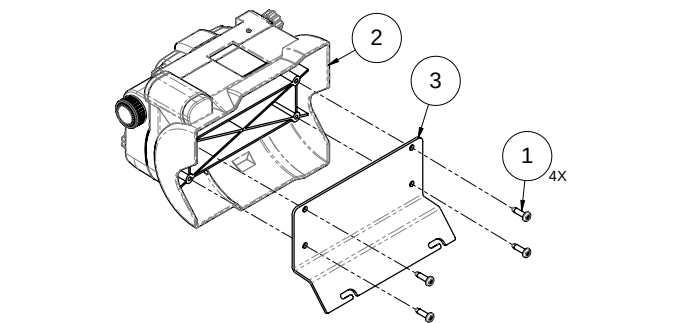

ID	Part Number	Description	Qty
1	237-5880-02	SCREW, #6 X 1/2 PPH T-25	4
2	515-3269-00	ASM, PIPBOY	1
3	535-3262-02	BRACKET, PIPBOY	1

5.36 UPPER LEFT RAMP EXIT ASSEMBLY


500-9867-05

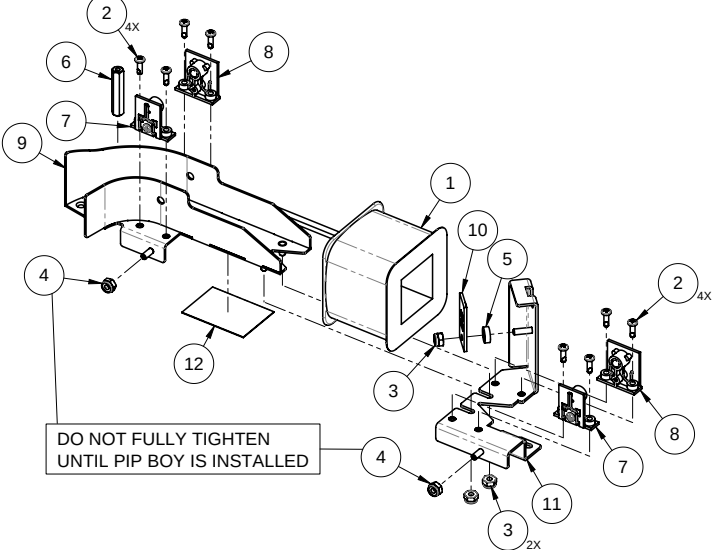


ID	Part Number	Description	Qty
1	090-5086-00	ACCELERATOR COIL	1
2	237-5997-00P	SCREW, 4-40 X 3/8" PPH MS BLACK, PATCH	8
3	240-5005-00	6-32 NYLON STOP NUT	3
4	240-5005-01	6-32 NYLON STOP NUT; 18-8 SS, BLACK OXIDE; REF McMASTER CARR #94407A101	2
5	254-5000-19	NYLON SPACER - BLACK - 3/8 OD X .175 ID X 1/8"	1
6	254-5008-11	HEX SPACER - 1 1/4 "	1
7	515-0215-00	LONG RANGE OPTO EMITTER ASSEMBLY	2
8	515-0215-01	LONG RANGE OPTO RECEIVER ASSEMBLY	2
9	515-5005-00	RAMP, UPPER LEFT	1
10	520-7000-00	SINGLE FLASH LED BOARD	1
11	535-3262-01	BRACKET, SQUARE MAGNET RETAINER	1
12	626-5147-00	TAPE, VHB 5915, 1.25 X 1.75" RECT.	1

5.37 DEATHCLAW PASSIVE ASSEMBLY


500-7437-30

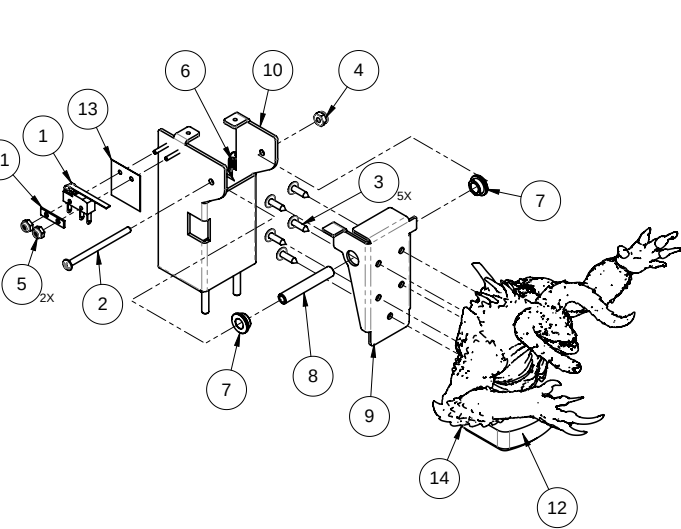


ID	Part Number	Description	Qty
1	180-5010-04	MICRO-SWITCH	1
2	237-5513-00P	SCREW, 6-32 X 2" PPH MS, PATCH	1
3	237-5809-00	SCREW, #6 X 1/2" PTH A	5
4	240-5005-01	6-32 NYLON STOP NUT; 18-8 SS, BLACK OXIDE; REF McMASTER CARR #94407A101	1
5	240-5321-00	2-56 NYLON LOCK NUT	2
6	265-5024-40	SPRING, RETURN, LATCH COIL	1
7	283-5018-01	1/4 ID X 3/8 OD X 3/16 LG. BUNTING SAE 841 BRONZE FLANGED BEARING-PART #EF040603	2
8	530-6586-00	SHAFT, DEATHCLAW PIVOT	1
9	535-3400-22	BRACKET, DEATHCLAW, SWING	1
10	535-3400-30	BRACKET, DEATHCLAW KICKBACK, BASE	1
11	535-6539-00	SWITCH BODY PROTECT PLATE	1
12	545-5277-00	FLIPPER RUBBER, BLACK	1
13	545-6268-00	FISCHE PAPER	1
14	545-8003-00	TOY, DEATHCLAW, DECORATED	1

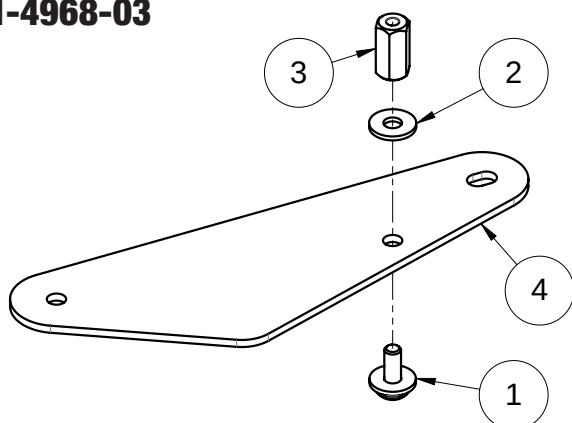5.38 PLASTIC -03 ASSEMBLY**511-4968-03**


ID	Part Number	Description	Qty
1	237-6378-00P	#6-32 X 3/8 PPH w/DOUBLE SEMS, PATCH	1
2	242-5001-00	#6 WASHER	1
3	254-5008-03	HEX SPACER - 1/2 "	1
4	830-4457-03	PLASTIC, FALLOUT PRO, -03	1

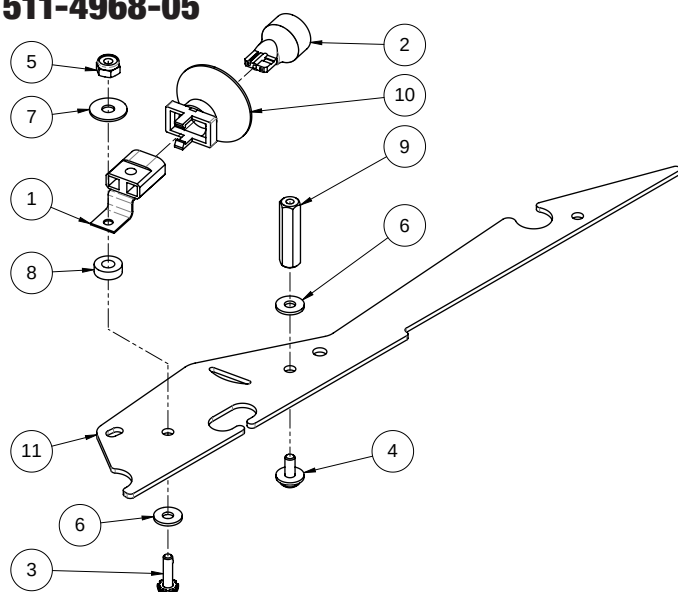5.39 PLASTIC -05 ASSEMBLY**511-4968-05**

ID	Part Number	Description	Qty
1	077-5026-01	SOCKET, L/D WEDGE BASE BLACK	1
2	113-5032-08	8 ELEMENT FLAT W-BASE LED 5V AC - WHITE	1
3	232-5202-00P	SCREW, 6-32 X 1/2" PPH MS SEMS, PATCH	1
4	237-6378-00P	#6-32 X 3/8 PAN PHILLIPS w/DOUBLE SEMS, PATCH	1
5	240-5005-00	6-32 NYLON STOP NUT	1
6	242-5001-00	#6 WASHER	2
7	242-5015-00	#8 WASHER - .170 ID X 1/2 OD X .042	1
8	254-5000-19	NYLON SPACER - BLACK - 3/8 OD X .175 ID X 1/8"	1
9	254-5008-06	HEX SPACER - 1"	1
10	545-5409-01	REFLECTOR	1
11	830-4457-05	PLASTIC, FALLOUT PRO, -05	1

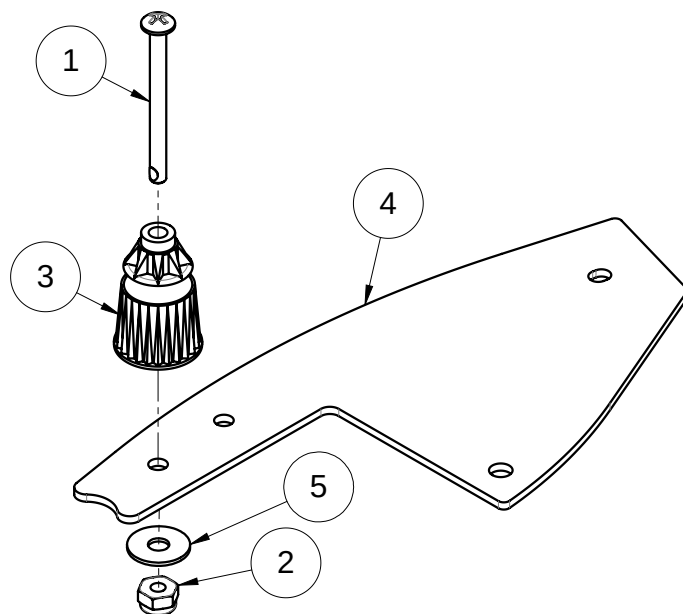5.40 PLASTIC -11 ASSEMBLY**511-4968-11**


ID	Part Number	Description	Qty
1	237-5510-00P	SCREW, 6-32 X 1-1/2" PPH MS, PATCH	1
2	240-5005-00	6-32 NYLON STOP NUT	1
3	550-5034-01	GROOVED JEWEL PLASTIC POST, CLEAR	1
4	830-4457-11	PLASTIC, FALLOUT PRO, -11	1
5	242-5015-00	#8 WASHER - .170 ID X 1/2 OD X .042	1

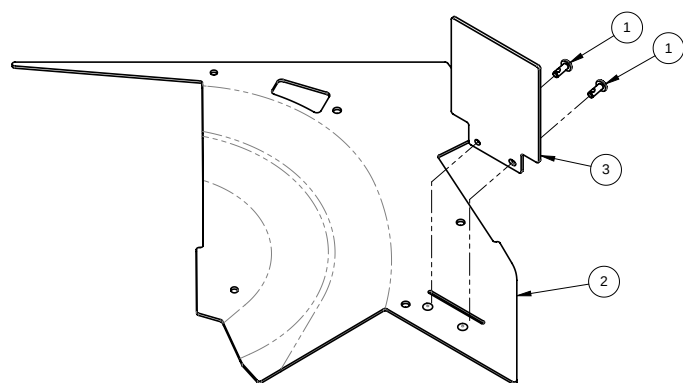5.41 PLASTIC -13 ASSEMBLY**511-4968-13**

ID	Part Number	Description	Qty
1	237-5012-00P	SCREW, 6-32 X 3/8" PPH 18-8 BLK OX, PATCH	2
2	510-3663-13	RIVETED PLASTIC ASM, FALLOUT PRO, -13	1
3	830-4457-82	PLASTIC, FALLOUT PRO, -82	1

5.42 PLASTIC -19 ASSEMBLY


511-4968-19

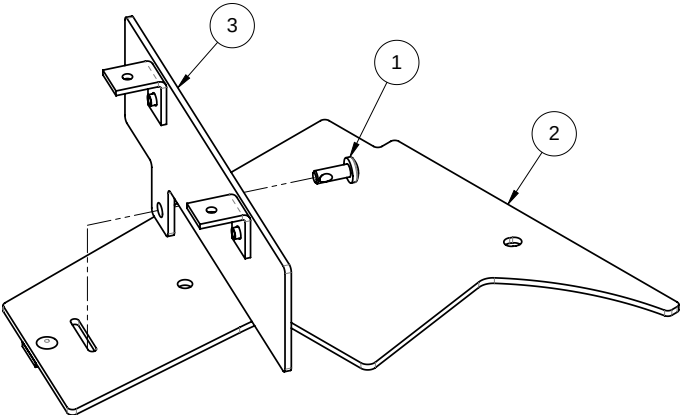

ID	Part Number	Description	Qty
1	237-5012-00P	SCREW, 6-32 X 3/8" PPH 18-8 BLK OX, PATCH	1
2	510-3663-19	RIVETED PLASTIC ASM, FALLOUT PRO, -19	1
3	510-3663-29	RIVETED PLASTIC ASM, FALLOUT PRO, -29	1

5.43 PLASTIC -39 ASSEMBLY


511-4968-39

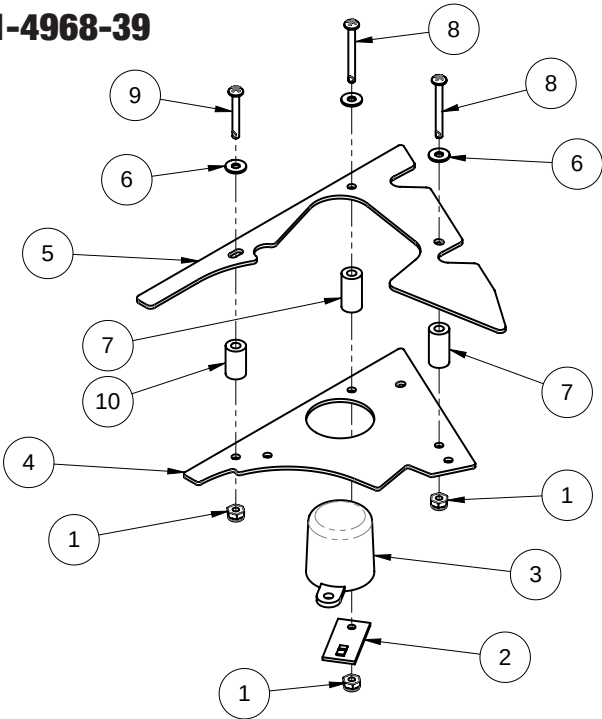

ID	Part Number	Description	Qty
1	240-5005-00	6-32 NYLON STOP NUT	3
2	520-7000-00	SINGLE FLASH LED BOARD	1
3	550-5031-06	MINI MARS W/ EARS - YELLOW SB	1
4	830-4457-39	PLASTIC, FALLOUT PRO, -39	1
5	830-4457-49	PLASTIC, FALLOUT PRO, -49	1
6	242-5001-00	#6 WASHER	3
7	254-5000-07	NYLON SPACER - BLACK - 3/8 OD X .175 ID X 3/4"	2
8	237-5508-00P	SCREW, 6-32 X 1-1/4 PPH MS, PATCH	2
9	237-5506-00P	SCREW, 6-32 X 1" PPH MS, PATCH	1
10	254-5000-14	NYLON SPACER - BLACK - 3/8 OD X .175 ID X 5/8"	1

5.44 PLASTIC -40 ASSEMBLY


511-4968-40

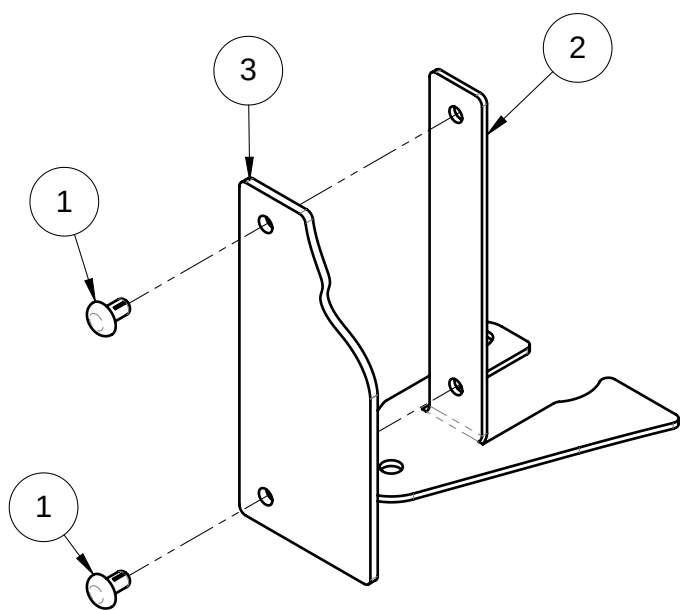

ID	Part Number	Description	Qty
1	249-5036-02	SNAP RIVET, .122 DIA, .12 - .16 GRIP RANGE	2
2	535-3263-30	BRACKET, SUNDRIES SIGN	1
3	830-4457-40	PLASTIC, FALLOUT PRO, -40	1

5.45 PLASTIC -84 ASSEMBLY


511-4968-84

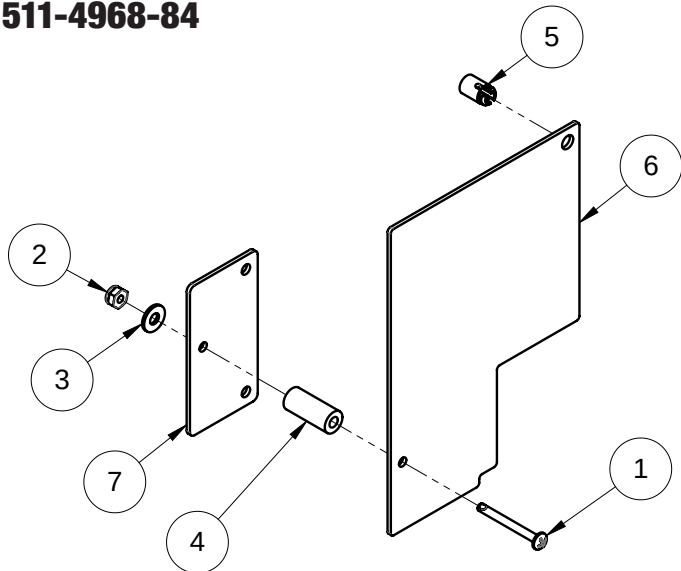

ID	Part Number	Description	Qty
1	237-5508-00P	SCREW, 6-32 X 1-1/4 PPH MS, PATCH	1
2	240-5005-00	6-32 NYLON STOP NUT	1
3	242-5005-00	#8 WASHER	1
4	254-5000-11	NYLON SPACER - BLACK - 3/8 OD X .175 ID X 7/8"	1
5	254-5007-01	3/8" SELF RETAINING SPACER	1
6	830-4457-84	PLASTIC, FALLOUT PRO, -84	1
7	830-4457-85	PLASTIC, FALLOUT PRO, -85	1

5.46 BACK PANEL ASSEMBLY

500-9864-01

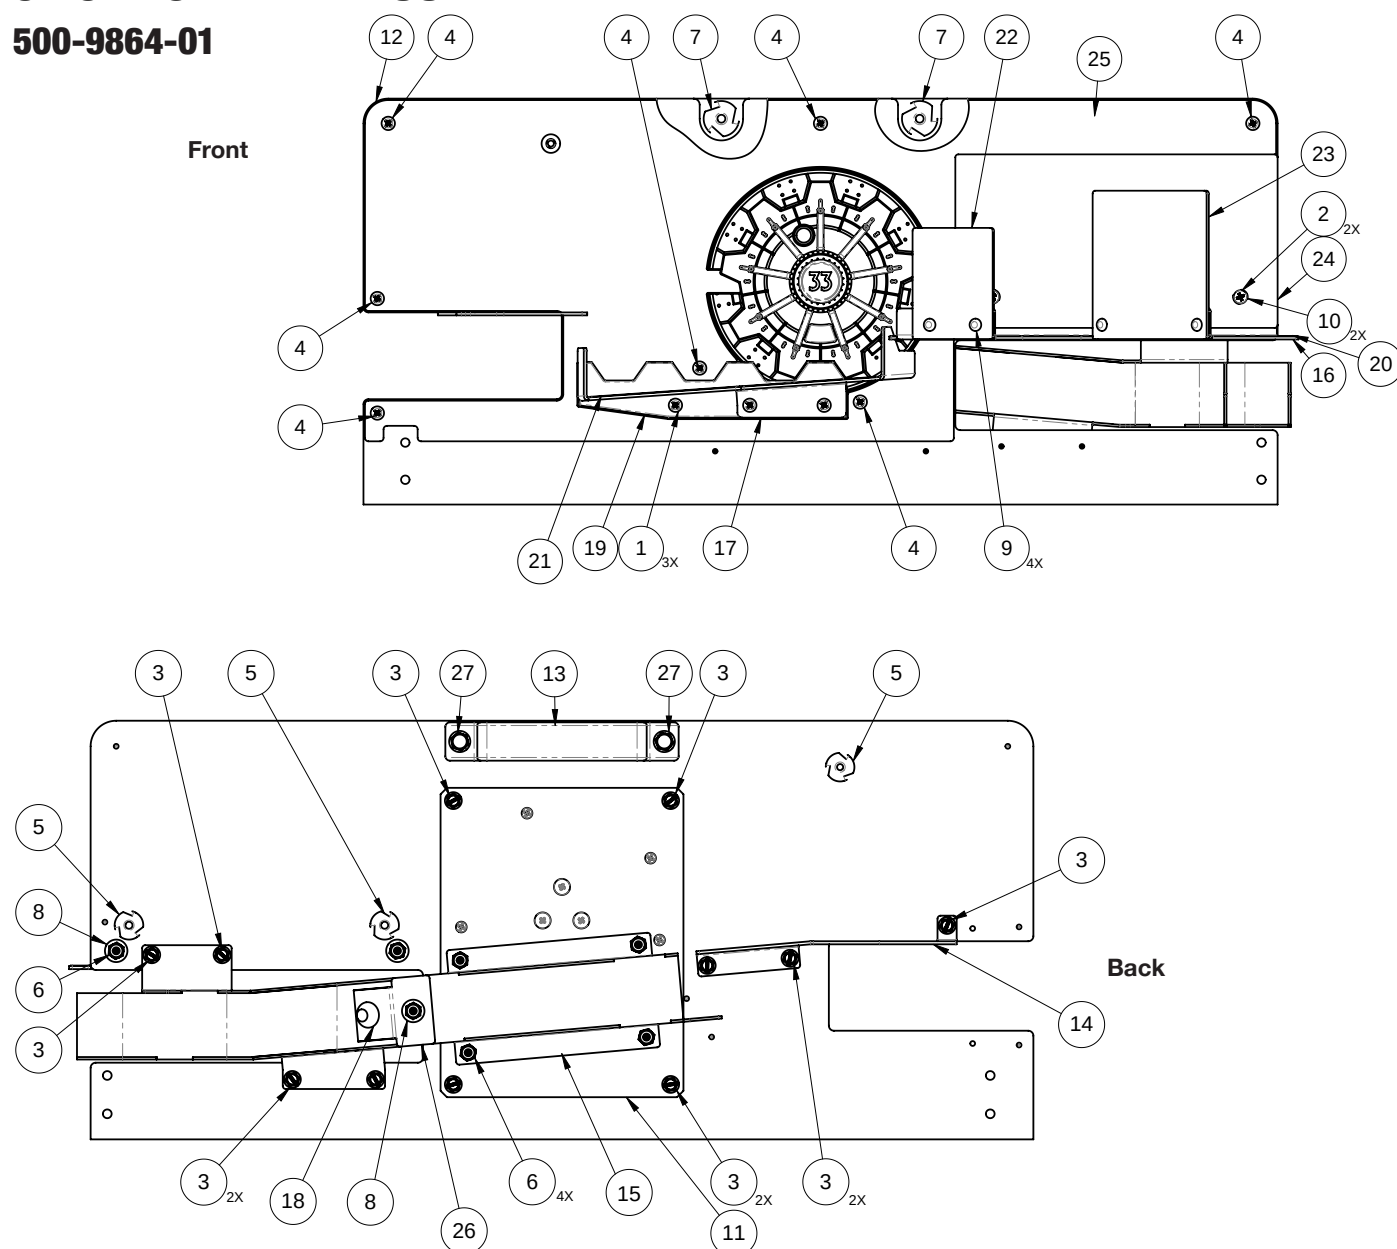

ID	Part Number	Description	Qty
1	232-5007-00	SCREW, #6 X 1-1/2" PPH AB ZINC	3
2	232-5308-00P	SCREW, 6-32 X 1" PPH MS ZINC, BLACK	2
3	234-5101-00	SCREW, #8 X 1/2" SLT HWH AB ZINC	11
4	237-5805-00	SCREW, #6 X 1/2" PPH AB BLACK	8
5	240-5002-00	6-32 T-NUT	3
6	240-5005-00	6-32 NYLON STOP NUT	7
7	240-5204-00	#10-32 T-NUT	2
8	242-5005-00	#8 WASHER	3
9	249-5036-02	SNAP RIVET, .122 DIA, .12 - .16 GRIP RANGE	4
10	254-5007-01	3/8" SELF RETAINING SPACER	2
11	500-3647-70	ASM, VAULT DOOR, PRO	1
12	525-0014-01	BACK PANEL, FALLOUT PRO	1
13	535-2288-00	HANDLE, BACKPANEL	1
14	535-3263-01	BRACKET, LEFT RAMP COVER	1

ID	Part Number	Description	Qty
15	535-3263-50	RAMP, BACKPANEL EXIT,	1
16	535-3263-51	BRACKET, RAMP COVER, RIGHT	1
17	535-3379-52	BRACKET, VAULT DOOR CATCH	1
18	545-5428-00	RUBBER BUMPER	1
19	545-7998-03	TOY, VAULT DOOR, RACK GEAR, DECORATED	1
20	820-4473-80	DECAL, FALLOUT PRO, -80	1
21	820-4473-90	DECAL, FALLOUT PRO, -90	1
22	830-4457-80	PLASTIC, FALLOUT PRO, -80	1
23	830-4457-81	PLASTIC, FALLOUT PRO, -81	1
24	830-4457-83	PLASTIC, FALLOUT PRO, -83	1
25	830-4457-90	PLASTIC, FALLOUT PRO, -90	1
26	535-3263-52	BRACKET, CENTER RAMP SNUBBER	1
27	237-5995-00P	SCREW, 10-32 X 1/2" HWH SERR MS ZI, PATCH	2

6. SPECIFICATIONS

500-55AD-01

SPECIFICATIONS, MECHANICAL, GAME SETUP

Specification	Imperial	Metric
Weight	210 lbs	96 kg
Max dimensions, leg levers extended (h, w, d)	78 x 27.75 x 57 in	198 x 70.5 x 145 cm
Minimum game dimensions (h, w, d)	76 x 27.75 x 57 in	193 x 70.5 x 145 cm
Minimum room dimensions per game (h, w, d)	80 x 36 x 84 in	203 x 91 cm x 214 cm

- (h, w, d) = height, width, depth.

SPECIFICATIONS, MECHANICAL, BOXED

Specification	Imperial	Metric
Weight, boxed (without pallet)	230 lbs	105 kg
Box dimensions (h, w, d)	56.5 x 31 x 31 in	144 x 79 x 79 cm
Minimum dimensions (h, w, d)	76 x 26 x 57 in	193 x 66 x 145 cm

- (h, w, d) = height, width, depth.

SPECIFICATIONS, ELECTRICAL

Specification	North America - 120VAC	International - 240VAC
Line Voltage, Nominal	120 VAC	240 VAC
Line Voltage Range	90 VAC - 250 VAC	90 VAC - 250 VAC
Line Frequency *	60 Hz	50 Hz, 60 Hz
Line Power, Current - attract mode	70 W, 0.6 A @ 120 VAC	70 W, 0.3 A @ 240 VAC
Line Power, Current - nominal	360 W, 3 A @ 120 VAC	360 W, 1.5 A @ 240 VAC
Line Power, Current - peak, <100 ms	540 W, 4.5 A @ 120 VAC	540 W, 2.25 A @ 240 VAC

* NOTE: Games designed for 60hz operation (e.g. North America games) will not function correctly on 50hz power and vice versa.


WARNING: Overloading electrical supply circuits is dangerous. Do not overload circuits. To calculate the maximum number of games for a circuit, check circuit amperage rating and divide by the game Nominal Line Power Current rating for your line voltage. For example, a 15A 120V household circuit, $15/3 \text{ A}$ (nominal current) = 5 games maximum.

SPECIFICATIONS, ENVIRONMENT

	Minimum	Maximum
Temperature, Operating	32 °F / 0 °C	104 °F / 40 °C
Temperature, Storage	32 °F / 0 °C	104 °F / 40 °C
Relative Humidity, Operating	5%	95% non-condensing
Relative Humidity, Storage	5%	95% non-condensing

- (a) "The appliance has to be placed in a horizontal position."
- (b) If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified person in order to avoid hazard.

6.1 GAME DIMENSIONS

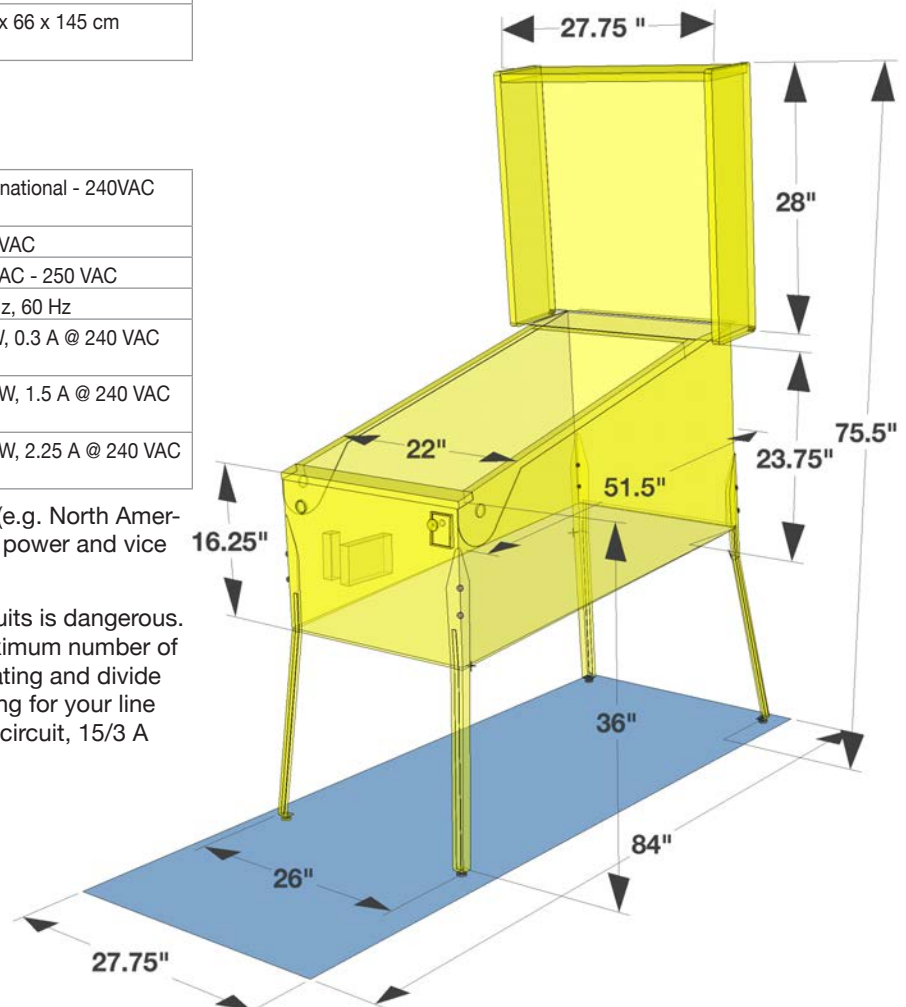

6.2 WARRANTY

Stern Pinball machines are assembled in Elk Grove Village, Illinois, USA; each pinball machine has unique characteristics that make it a one-of-a-kind American-made product. Each machine will have variations in appearance resulting from differences in the machine's particular wood parts, individual silk screened art and mechanical assemblies. Stern Pinball has inspected each game element to ensure it meets stringent quality and playability standards.

STERN PINBALL INC LIMITED WARRANTY

For warranty information, please visit:

sternpinball.com/support/warranty

ATTENTION! IMPORTANT WARRANTY INFORMATION

The electronics system, node network architecture, mechanical devices and associated software control systems in this pinball machine are designed to work with genuine Stern Pinball accessories and devices.

Installation of non-authorized accessories, lamps, LED's, motors or other devices or modification of electro-mechanical devices may damage the system and may void your warranty.

6.3 WARNINGS, COMPLIANCE, AND LEGAL NOTICES

PHOTOSENSITIVE SEIZURES HEALTH WARNING



A very small percentage of people may experience a seizure when exposed to certain visual images, including flashing lights or patterns. Even people with no history of seizures of epilepsy may have an undiagnosed condition that can cause "photosensitive epileptic seizures" due to certain visual images, flashing lights or patterns. Symptoms can include lightheadedness, altered vision, eye or face twitching, jerking or shaking of arms or legs, disorientation, confusion, momentary loss of awareness, and loss of consciousness or convulsions that can lead to injury from falling down or striking nearby objects.

IMMEDIATELY STOP PLAYING AND CONSULT A DOCTOR IF YOU EXPERIENCE ANY OF THESE SYMPTOMS.

PARTS SUBSTITUTIONS



For safety and reliability, substitute parts and equipment modifications are not recommended and may void any and all warranties. Use of Non-Stern Pinball Inc Parts or Modifications of game circuitry may adversely affect game play or game safety. Transport pinball machines with hinged backbox in the down position only! Always take great care when servicing any game. Always read the service manual before replacing or servicing components. Substitutions of parts or equipment modifications may void FCC type acceptance.

Always disconnect the line voltage before servicing. Some parts may remain energized when unplugged. Take great caution when servicing any electrical components.

FCC CLASS A SUBPART J COMPLIANCE



This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

RF INTERFERENCE NOTICE

The cable harness placements, ground strap routing, and other shielding have been designed to keep RF radiation and conduction within levels accepted by FCC rules. To maintain these levels, factory harness position, shielding, and ground straps must be installed in their factory locations should they become disconnected during maintenance.

COPYRIGHT AND INTELLECTUAL PROPERTY NOTICE

This document and the data disclosed herein or herewith is not to be reproduced (Except where noted), used, or otherwise disclosed in whole or in part to anyone without written consent of Stern Pinball Inc.

Products in this manual, the company name and devices and the design of the manual itself are protected by federal patents (and patents pending), design registrations, trademarks, and copyrights. Action will be taken in the event of infringement or imitation. The right is reserved to change specifications without prior notice.

6.4 STERN PINBALL END USER LICENSE AGREEMENT

This limited software license Agreement (“Agreement”) applies to your use of Stern Pinball Software pre-installed on a Stern Pinball Machine and any Authorized Updates made available to you.

BY USING YOUR STERN PINBALL MACHINE, YOU AGREE TO THE TERMS OF THIS AGREEMENT. If you do not agree to the terms of this Agreement, do not use your Stern Pinball Machine or any Authorized Updates. Please read this entire Agreement, which governs your use of the Stern Pinball Machine, Stern Pinball Software and all Authorized Updates.

ADULT CONSENT

TO ENTER INTO THIS AGREEMENT, YOU MUST BE AN ADULT OF THE LEGAL AGE OF MAJORITY IN YOUR COUNTRY OF RESIDENCE. YOU ARE LEGALLY AND FINANCIALLY RESPONSIBLE FOR ALL ACTIONS USING YOUR STERN PINBALL MACHINE AND SOFTWARE AND ACCESSING OR USING ANY ONLINE GAMING PLATFORM, INCLUDING THE ACTIONS OF ANYONE YOU ALLOW TO USE AND ACCESS TO YOUR MACHINE AND ANY ASSOCIATED ACCOUNT. YOU AFFIRM THAT YOU HAVE REACHED THE LEGAL AGE OF MAJORITY, UNDERSTAND AND ACCEPT THIS AGREEMENT. IF YOU ARE UNDER THE LEGAL AGE OF MAJORITY, YOUR PARENT OR LEGAL GUARDIAN MUST CONSENT TO THIS AGREEMENT.

DEFINITIONS

- a. “Stern Pinball Machine” means a Stern Pinball arcade game machine.
- b. “Stern Pinball Software” means software (including but not limited to firmware) pre-installed in the Stern Pinball Machine, including all Authorized Content and any Authorized Updates that Stern Pinball may make available to You from time to time.
- c. “Authorized Content” means all Stern Pinball and third-party owned software and content incorporated into or used with the Stern Pinball Software or otherwise embedded in or utilized by a Stern Pinball Machine, including but not limited to graphics, images, music, vocals and voices.
- d. “Authorized Update” means an update to the Stern Pinball Software distributed by Stern Pinball or otherwise made available by Stern Pinball, including for download on its website.
- e. “Unauthorized Content” means all content, including but not limited to graphics, images, music, vocals and voices, that does not comprise Authorized Content or an Authorized Update.
- f. “Unauthorized Software” means any software (including but not limited to firmware) not pre-installed by Stern Pinball on a Stern Pinball Machine or that does not comprise Authorized Content or Authorized Update.
- g. “You” means the purchaser or current owner of a Stern Pinball Machine.

LICENSE

Stern Pinball hereby grants You a nonexclusive, non-transferable, limited, and revocable right and license to use one copy of the Stern Pinball Software and Authorized Content and any Authorized Update solely for your personal use, or that of your patrons and customers if you are a commercial entity, for playing a single Stern Pinball Machine. The Stern Pinball Software, Authorized Content and Authorized Updates are licensed, not sold, to You, and no ownership rights are transferred by this Agreement. The Stern Pinball Software Authorized Content and Authorized Updates are protected by U.S. and international copyright. All rights not explicitly granted to you in this Agreement are reserved by Stern Pinball.

- a. As a condition to this Stern Pinball Software license, You agree that:
 - i. You will not copy, reproduce, alter, replace, distribute, reverse engineer, decompile, disassemble, display, perform, create derivative works based on, or otherwise modify the Stern Pinball hardware or Stern Pinball Software or any Authorized Update, in whole or in part; and will not commercially exploit any of the foregoing.
 - ii. **You will not use or install any Unauthorized Content or Unauthorized Software. Use of Unauthorized Content or Unauthorized Software may result in your Stern Pinball Machine ceasing to work permanently and/or losing access to Stern Pinball’s online game network, either immediately or after a later installed Authorized Update.**

- iii. **You will not create, develop, distribute or assist anyone else in creating, developing or distributing any Unauthorized Content or Unauthorized Software intended for use with a Stern Pinball Machine, whether to add to or modify the gameplay, any audio content (whether music, sound or voice), or any video content of any Stern Pinball Machine, or to gain advantage in any online or other game modes, or otherwise.**
- iv. You will not share any Stern Pinball Software, Authorized Content or Authorized Update with any other person or company and will not permit anyone else to access or copy any Stern Pinball Software or Authorized Content or Authorized Update installed on your Machine for any purpose.
- v. In view of the rights held by third-party owners of Authorized Content (e.g., music and video clips), Stern does not have the legal authority to give permission to stream the gameplay of Stern Pinball Machines.
- vi. You will not attempt to defeat or circumvent any anti-piracy, security, and/or technical measures to control access to the Stern Pinball Software, features, functions or content, prevent unauthorized use, or otherwise prevent anyone from exceeding the limited license rights granted under this Agreement, "Security Measures". Attempting to defeat or circumvent any Security Measure may result in your Stern Pinball Machine ceasing to work permanently either immediately or after a later installed Authorized Update.
- vii. **Stern Pinball may update the Stern Pinball Software from time to time without further notice to You, for example, to update any anti-piracy, security, and technical measure.**

PRIVACY POLICY

Your use of the Stern Pinball Machine, Stern Pinball Software and any Authorized Updates is subject to Stern Pinball's Privacy Policy which can be found at <https://sternpinball.com/privacy-policy>.

WARRANTY

EXCEPT AS PROVIDED HEREIN, THE STERN PINBALL SOFTWARE, AUTHORIZED CONTENT AND AUTHORIZED UPDATES ARE PROVIDED "AS IS" AND, TO THE MAXIMUM EXTENT ALLOWABLE UNDER LAW, STERN PINBALL DISCLAIMS ALL WARRANTIES OF ANY KIND, WHETHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO ANY WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, AND NONINFRINGEMENT. WITHOUT LIMITING THE FOREGOING, STERN PINBALL DOES NOT WARRANT THAT OPERATION OF THE STERN PINBALL MACHINE OR ANY ONLINE OR CONNECTED GAME NETWORK WILL BE UNINTERRUPTED OR ERROR-FREE.

EXCLUSION OF CERTAIN DAMAGES

STERN PINBALL IS NOT RESPONSIBLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, OR CONSEQUENTIAL DAMAGES; ANY LOSS OF DATA, PRIVACY, CONFIDENTIALITY, OR PROFITS; OR ANY INABILITY TO USE THE STERN PINBALL MACHINE, STERN PINBALL SOFTWARE OR ANY AUTHORIZED UPDATE. THESE EXCLUSIONS APPLY EVEN IF STERN PINBALL HAS BEEN ADVISED OF THE POSSIBILITY OF THESE DAMAGES, AND EVEN IF ANY REMEDY FAILS OF ITS ESSENTIAL PURPOSE. Some countries do not allow the exclusion or limitation of incidental or consequential damages, so this limitation or exclusion may not apply to You.

These terms apply to the maximum extent permitted by law and unless prohibited by law. These terms do not change your rights under the laws of your country if those laws do not permit that change.

TERRITORY AND CHOICE OF LAW

This License is valid only in the country in which you purchased your Stern Pinball Machine. This License will be subject to and construed in accordance with the laws of the State of Illinois, U.S.A., regardless of conflict of laws principles. You agree to submit to the exclusive jurisdiction of the state and federal courts in Cook County, Illinois, U.S.A. for the resolution of any dispute regarding this Agreement or the subject matter of this Agreement and to waive any jurisdictional, venue, or inconvenient forum objections to such courts.

This Agreement may be updated by Stern Pinball from time to time with the current version posted at www.sternpinball.com/EULA. Your continued use of the Stern Pinball Software and Authorized Update after an updated Agreement has been posted constitutes your acceptance of all of its terms.





1-800-KICKERS
SERVICE@STERNPINBALL.COM
WWW.STERNPINBALL.COM
FACEBOOK.COM/STERNPINBALL

FALLOUT PRO #500-55AD-01

MANUAL #780-50AD-00

